


**PRESCRIBE Commands**

# **Command Reference**

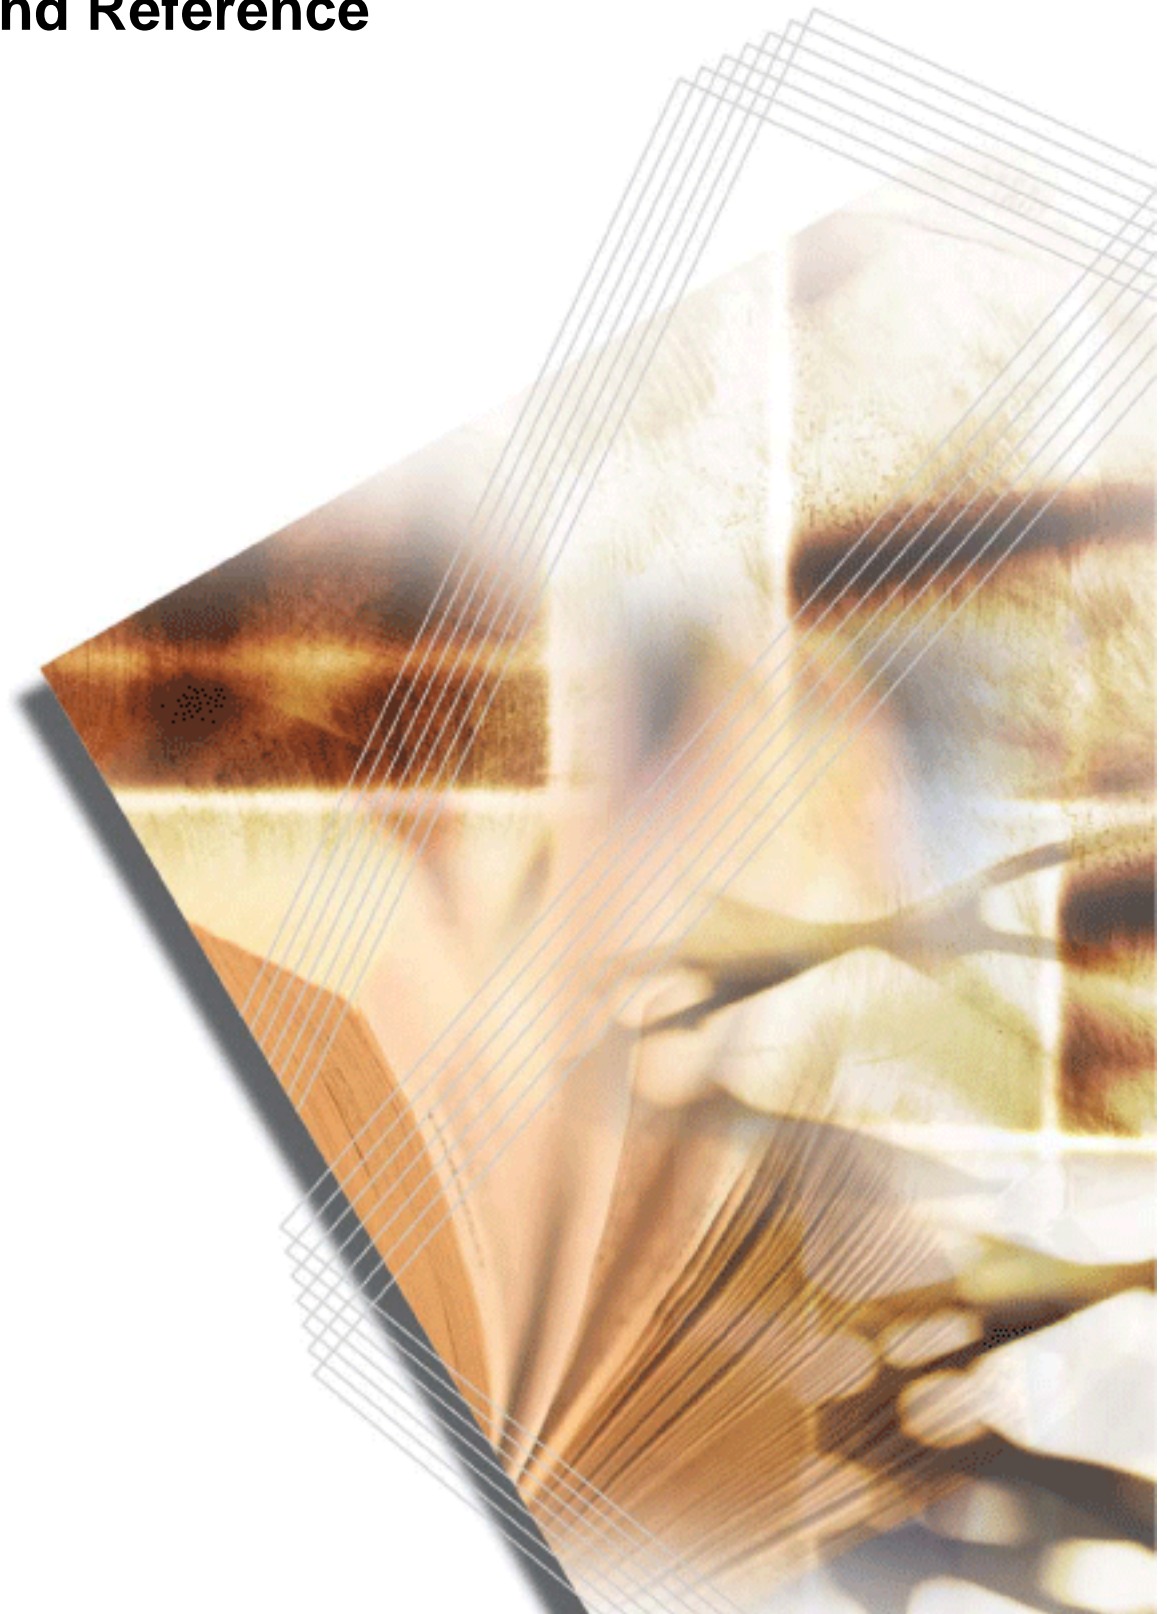

We shall have no liability or responsibility to customers or any other person or entity with respect to any liability, loss or damage caused or alleged to be caused directly or indirectly by equipment sold or furnished by us, including, but not limited to, any interruption of service, loss of business or anticipatory profits, or consequential damages resulting from the use or operation of the equipment or software.

**NO LIABILITY WILL BE ASSUMED FOR ANY DAMAGE CAUSED BY IMPROPER INSTALLATION.**

#### **Notice on Software**

**SOFTWARE USED WITH THIS PRINTER MUST SUPPORT THE PRINTER'S NATIVE MODE OR ONE OF ITS EMULATION MODES.**

#### **Notice**

This manual, the computer programs in the page printer referred to in this manual, and any other copyrightable subject matter sold or provided with or in connection with the sale of the page printer, are protected by copyright. All rights are reserved. Copying or other reproduction of all or part of this manual, the computer programs, or any other copyrightable subject matter without the prior written consent of Kyocera Mita Corporation is prohibited. Any copies made of all or part of this manual, the computer programs, or any other copyrightable subject must contain the same copyright notice as the material from which the copying is done.

The information in this manual is subject to change without notification. Additional pages may be inserted in future editions. The user is asked to excuse any omissions or errors in the present edition.

No responsibility is assumed if accidents occur while the user is following the instructions in this manual. No responsibility is assumed for defects in the printer's firmware.

#### **Regarding Tradenames:**

PRESCRIBE is a registered trademark of Kyocera Corporation. KPD L is a trademark of Kyocera Corporation.

Diablo 630 is a product of Xerox Corporation. IBM Proprinter X-24E is a product of International Business Machines Corporation. Epson LQ-850 is a product of Seiko Epson Corporation. HP LaserJet III, HP LaserJet 4, HP LaserJet 4 Plus, HP LaserJet 5Si, HP LaserJet 5P, HP LaserJet 5M, HP LaserJet 2100, HP LaserJet 4000, and HP 7550A are products of Hewlett-Packard Company. Hewlett-Packard, PCL, and HP-GL are registered trademarks of Hewlett-Packard Company. Centronics is a trade name of Centronics Data Computer Corp. Other product names and company names that appear in this manual are trademarks or registered trademarks of their respective owners.

## *Typeface Trademark Acknowledgement*

All resident fonts in the print system are licensed from Bitstream Inc. and Agfa corporation. For font license information for each model, refer to the User's Manual.

Helvetica, Palatino and Times are registered trademarks of Linotype-Hell AG. Century Schoolbook, Stymie, and Cooper-Black are trademarks of Kingsley-ATF Type Corporation. ITC Avant Garde Gothic, ITC ZapfChancery, ITC ZapfDingbats, ITC Souvenir, ITC Benguiat, and ITC Bookman are registered trademarks of International Typeface Corporation. Revue is a trademark of Esselte Pendaflex Corporation in the U.S., Letraset Canada Ltd. in Canada, and Esselte Letraset Ltd. elsewhere.

## *Monotype Imaging License Agreement*

1. "Software" shall mean the digitally encoded, machine readable, scalable outline data as encoded in a special format as well as the UFST Software.
2. You agree to accept a non-exclusive license to use the Software to reproduce and display weights, styles and versions of letters, numerals, characters and symbols ("Typefaces") solely for your own customary business or personal purposes at the address stated on the registration card you return to Monotype Imaging. Under the terms of this License Agreement, you have the right to use the Fonts on up to three printers. If you need to have access to the fonts on more than three printers, you need to acquire a multi-user license agreement which can be obtained from Monotype Imaging. Monotype Imaging retains all rights, title and interest to the Software and Typefaces and no rights are granted to you other than a License to use the Software on the terms expressly set forth in this Agreement.
3. To protect proprietary rights of Monotype Imaging, you agree to maintain the Software and other proprietary information concerning the Typefaces in strict confidence and to establish reasonable procedures regulating access to and use of the Software and Typefaces.
4. You agree not to duplicate or copy the Software or Typefaces, except that you may make one backup copy. You agree that any such copy shall contain the same proprietary notices as those appearing on the original.
5. This License shall continue until the last use of the Software and Typefaces, unless sooner terminated. This License may be terminated by Monotype Imaging if you fail to comply with the terms of this License and such failure is not remedied within thirty (30) days after notice from Monotype Imaging. When this License expires or is terminated, you shall either return to Monotype Imaging or destroy all copies of the Software and Typefaces and documentation as requested.
6. You agree that you will not modify, alter, disassemble, decrypt, reverse engineer or decompile the Software.
7. Monotype Imaging warrants that for ninety (90) days after delivery, the Software will perform in accordance with Monotype Imaging-published specifications, and the diskette will be free from defects in material and workmanship. Monotype Imaging does not warrant that the Software is free from all bugs, errors and omissions.
8. THE PARTIES AGREE THAT ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY, ARE EXCLUDED.
9. Your exclusive remedy and the sole liability of Monotype Imaging in connection with the Software and Typefaces is repair or replacement of defective parts, upon their return to Monotype Imaging.
10. IN NO EVENT WILL MONOTYPE IMAGING BE LIABLE FOR LOST PROFITS, LOST DATA, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES CAUSED BY ABUSE OR MISAPPLICATION OF THE SOFTWARE AND TYPEFACES.
11. Massachusetts U.S.A. law governs this Agreement.
12. You shall not sublicense, sell, lease, or otherwise transfer the Software and/or Typefaces without the prior written consent of Monotype Imaging.
13. Use, duplication or disclosure by the Government is subject to restrictions as set forth in the Rights in Technical Data and Computer Software clause at FAR 252-227-7013, subdivision (b)(3)(ii) or subparagraph (c)(1)(ii), as appropriate. Further use, duplication or disclosure is subject to restrictions applicable to restricted rights software as set forth in FAR 52.227-19 (c)(2).
14. YOU ACKNOWLEDGE THAT YOU HAVE READ THIS AGREEMENT, UNDERSTAND IT, AND AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS. NEITHER PARTY SHALL BE BOUND BY ANY STATEMENT OR REPRESENTATION NOT CONTAINED IN THIS AGREEMENT. NO CHANGE IN THIS AGREEMENT IS EFFECTIVE UNLESS WRITTEN AND SIGNED BY PROPERLY AUTHORIZED REPRESENTATIVES OF EACH PARTY. BY OPENING THIS DISKETTE PACKAGE, YOU AGREE TO ACCEPT THE TERMS AND CONDITIONS OF THIS AGREEMENT.

This page is left blank intentionally

# Table of Contents

## Overview of PRESCRIBE Commands by Function 2

Access Commands	2
Print System Setting Commands	2
Margin and Page Portrait/Landscape Orientation Commands	3
Font Commands	4
Cursor Movement Commands	5
Vector Graphics Commands	5
Path Mode Graphics Commands	6
Raster Graphics Commands	7
Color Commands	7
Barcode Commands	8
Macro Commands	8
Debug Commands	9
External Media Control Commands	9
<i>e-MPS</i> Commands	10

## PRESCRIBE Commands 11

ACLI — Add CoLoR by Index	12
ALTB A — [ALlocate TaBle] Assign user-defined character table	14
ALTB C — [ALlocate TaBle] Convert character code	15
ALTB D — [ALlocate TaBle] Delete user-defined character table	16
ALTB E — [ALlocate TaBle] End defining combination characters	17
ALTB G — [ALlocate TaBle] Generate user-defined table	18
ALTB R — [ALlocate TaBle] Release user-defined character table	19
ALTB S — [ALlocate TaBle] Start to define the combination character	20
ALTB T — [ALlocate TaBle] define combined character by Table	21
ALTF — change to ALTeRnate Font	23
AMCR — call Automatic MaCRo	25
APSG — Assign Paper Source Group	27
ARC — draw filled-in ARC	28
ASFN — ASsign external characters for FoNt	31
ASTK — Assign STAcKer trays	32
BARC — draw BARCode	34
BKLT — print in BooKLeT binding	38
BLK — draw filled-in BLoCk	40
BOX — draw BOX	42
CALL — CALL macro	44
CCPY — Carbon CoPY	46
CDSK — Check hard DiSK	49
CID — Configure color-Image Data	50
CIR — draw CIRcle	52
CLIP — CLIP current path	54
CLPR — CLiP Rectangular area	55
CLSP — CLoSe Path	57
CMNT — CoMmeNT	59
CMOD — Color MODe	60
COPY — set number of COPIES	61
CPAL — Control PALETTE	63
CPTH — Character PaTH	64

CSET — Change symbol SET by symbol-set ID	65
CSTK — select Collator STacKer	68
CTXT — print Centered TeXT	69
DAF — Delete All Fonts	71
DAM — Delete All Macros	72
DAP — Draw to Absolute Position	73
DELF — DELeTe Font	75
DELM — DELeTe Macro	76
DPAT — select Dashed PATtern	78
DRP — Draw to Relative Position	80
DRPA — Draw to Relative Position specified by Angle	82
DUPX — select/deselect DUPlEX mode	84
DXPG — select DupleX PaGe side	85
DZP — Draw to Zero-relative Position	87
EMCR — Enable MaCRo depending on paper source	89
ENDB — END a two-dimensional Barcode string	91
ENDC — END carbon Copy	92
ENDD — END Dump	93
ENDM — END Macro	94
ENDR — END Raster data	96
EPL — select EcoPrint Level	98
EXIT — EXIT from PRESCRIBE mode	99
FDIR — MP tray Feed DIREction	100
FILL — FILL closed path	101
FLAT — set FLATness	104
FLST — print Font LiST	105
FOLD — FOLD printed pages	107
FONT — change current FONT	108
FPAT — generate Fill PATtern	110
FRPO — Firmware RePrOgram	112
FRPO INIT — FRPO-INITialize	114
FSET — change current Font SETting by characteristic	115
FTMD — bitmap FonT MoDe	119
GPAT — set Gray PATtern	122
GRAY — represent GRAY	124
GRRD — GRaphic data ReaD	125
HUE — adjust HUE	127
INTL — InterNaTionaL characters	129
JOB D — JOB Deletion	132
JOB L — print JOB List	134
JOB O — JOB Output	136
JOB P — JOB, print with Print options	138
JOB S — JOB Start	140
JOB T — JOB Terminate	144
JOG — JOG output stacks for separation	145
LAPI — LoaD API Program	146
LDFC — LoaD Font Character	147
LD F C — generate bitmap character for LoaDing FoNt	149
LD F N F — create header for LoaDing FoNt	151
LD F N S — LoaD truetype FoNt	153
LGHT — adjust LiGHTness	155
MAP — Move to Absolute Position	157
MCLR — Match CoLoR	159
MCRO — define MaCRO	160
MDAT — set MeDia type ATtribute	162
MID — Multi-tray ID	164
MPSS — e-MPS Storage	165

MRP — Move to Relative Position	166
MRPA — Move to Relative Position specified by Angle	168
MSTK — select Mailbox STacKer	170
MTYP — select Media TYPe	171
MZP — Move to Zero-relative Position	173
NEWP — start NEW Path	175
OTRY — select paper Output TRaY	176
PAGE — start new PAGE	178
PANT — create PANTone color palette	179
PARC — in Path, draw ARC	181
PAT — select fill PATtern	183
PCRP — in Path, Curve to Relative Position	185
PCZP — in Path, Curve to Zero-relative Position	187
PDIR — set Print DIREction	189
PDRP — in Path, Draw to Relative Position	192
PDZP — in Path, Draw to Zero-relative Position	194
PELP — in Path, draw ELLipse	196
PIE — draw PIE chart	198
PMRA — in Path, Move to Relative position specified by Angle	200
PMRP — in Path, Move to Relative Position	202
PMZP — in Path, Move to Zero-relative Position	204
PNCH — PuNCH	206
PRBX — in Path, draw Round BoX	208
PRRC — in Path, at Relative position, draw aRC	210
PSRC — select Paper SouRCe	212
PXPL — PiXel PLacement	213
!R! — PRESCRIBE start sequence	214
RCLT — Rotated CoLLaTion	216
RDMP — Received-data DuMP	217
RES — RESet	219
RESL — select RESoLution	221
RGBL — control RGB Level	222
RGST — offset ReGiSTration	224
RPCS — Return to Previous Code Set	225
RPF — Return to Previous Font	226
RPG — Return to Previous Graphics state	227
RPP — Return to Previous Position	229
RPPL — Return to Previous PaLette	231
RPU — Return to Previous Unit	232
RTTX — RoTate TeXt	233
RTXT — print Right-aligned TeXT	235
RVCD — ReceiVe Compressed raster Data	237
RVCL — ReceiVe CoLoR raster data	238
RVRD — ReceiVe Raster Data	239
RWER D — [Read/Write External Resource] Delete data on external media	241
RWER F — [Read/Write External Resource] Format external media	242
RWER I — [Read/Write External Resource] automatically print partition Information	243
RWER L — [Read/Write External Resource] print partition List	244
RWER R — [Read/Write External Resource] Read data from external media	245
RWER S — [Read/Write External Resource] Store TrueType font	246
RWER T — [Read/Write External Resource] set Terminate string	248
RWER W — [Read/Write External Resource] Write data to external media	249
RWRF D — [Read/Write Resource File] Delete data on external device	251
RWRF F — [Read/Write Resource File] Format external device	252
RWRF L — [Read/Write Resource File] print resource file List	253
RWRF P — [Read/Write Resource File] set hidden file	254
RWRF R — [Read/Write Resource File] Read	255

RWRF T — [Read/Write Resource File] set Terminate string	256
RWRF W — [Read/Write Resource File] Write data to external device (API program)	257
RWRF W — [Read/Write Resource File] Write data to external device (font)	258
RWRF W — [Read/Write Resource File] Write data to external device (macro)	260
RWRF W — [Read/Write Resource File] Write data to external device (printable data)	261
SATU — adjust SATUration level	262
SBM — Set Bottom Margin	263
SCAP — Set line CAP	265
SCCS — Save Current Code Set	267
SCF — Save Current Font	269
SCG — Save Current Graphics state	271
SCOL — Select COLor	273
SCP — Save Current Position	274
SCPI — Set Characters Per Inch	275
SCPL — Save Current PaLette	277
SCRC — Set Command Recognition Character	278
SCS — Set Character Spacing	280
SCSZ — Set Custom paper SiZe	281
SCU — Save Current Unit	282
SDP — Store Dash Pattern	284
SEM — Set Emulation Mode	286
SETF — SET alternate Font	287
SFA — Set bitmap Font Attributes	289
SFNT — Select current FoNT by typeface	293
SGPC — Set kcGf Pen Color	296
SHMI — Set HMI	297
SIMG — Set IMaGe model	298
SIMP — create SIMPle color palette	301
SIR — Set Image Refinement level	303
SLJN — Set Line JoiN	304
SLM — Set Left Margin	306
SLPI — Set Lines Per Inch	308
SLPP — Set Lines Per Page	309
SLS — Set Line Spacing	311
SMLT — Set Miter LimiT	312
SMNT — Set MoNiTor simulation	314
SPAL — Select PALETTE	316
SPD — Set Pen Diameter	317
SPL — Set Page Length	319
SPO — Set Page Orientation	321
SPSZ — Set Paper SiZe	323
SPW — Set Page Width	325
SRM — Set Right Margin	327
SRO — Set Raster Options	329
SROP — Set Raster OPeration	331
SSTK — select Sorter STAcKer	333
STAK — select paper STAcKer	334
STAT — STATus	335
STM — Set Top Margin	337
STPC — set STaPle Counter	339
STPL — STaPLe	340
STR — SeT dot Resolution	342
STRK — STRoKe current path	343
SULP — Set UnderLine Parameters	345
TATR — apply Tray ATtributes	347
TEXT — print TEXT	348
TPRS — Text PaRSing	350



TRSM — TRansparency Separate Mode	351
UNIT — set UNIT of measurement	352
UOM — Unit Of Measurement per dots	354
VMAL — Virtual Mailbox ALias	356
VMOB — Virtual Mailbox Output Bin	357
VMPW — set Virtual Mailbox PassWord	358
WIDE — set WIDE A4 mode	360
WRED — WRite EnD	361
XBAR — print two dimensional barcode	362
XBCP 0 — select barcode type/reset all other XBCP parameters	364
XBCP 1 — specify narrowest element width	365
XBCP 2 — specify error correction level by percentage	366
XBCP 3 — set error correction level	367
XBCP 4 — set data code word rows	368
XBCP 5 — set data code word columns	369
XBCP 6 — determine aspect ratio of vertical height and horizontal width	370
XBCP 7 — determine bar height	372
XBCP 8 — automatically set rows and columns	373
XBCP 9 — enable truncation	374
XBCP 10 — enable file name	375
XBCP 11 — enable block count	376
XBCP 12 — enable time stamp	377
XBCP 13 — enable sender ID	378
XBCP 14 — enable addressee ID	379
XBCP 15 — enable file size	380
XBCP 16 — enable checksum	381
XBCP 17 — allow control of file ID	382
XBCP 18 — enable Macro PDF417 symbol mode	384
XBCP 19 — position symbols at the specified locations	386
XBUF — define a BUFfer name	390
XPAT — generate eXpanded fill PATtern	392



---

# **PRESCRIBE Command Reference**

# 1. Overview of PRESCRIBE Commands by Function

The tables in this section list all the printing system commands supported by the various models. Support for certain commands varies depending on the printing system model.

## Access Commands

These commands provide access in and out of PRESCRIBE mode.

Command	Function	Page
EXIT	EXIT from PRESCRIBE mode	99
!R!	PRESCRIBE start sequence	214
SCRC	Set Command Recognition Character	278

## Print System Setting Commands

These commands establish general printing environment parameters.

Command	Function	Page
COPY	set number of COPIES	61
EPL	select EcoPrint Level	98
FDIR	MP tray Feed DIRection	100
FRPO	Firmware RePrOgram	112
FRPO INIT	FRPO-INITialize	114
MDAT	set MeDia type ATtribute	162
MTYP	select Media TYPE	171
OTRY	select paper Output TRaY	176
PSRC	select Paper SouRCe	212
RCLT	Rotated CoLlaTion	216
RES	RESet	219
RESL	select RESoLution	221
RGST	offset ReGiSTration	224
RPU	Return to Previous Unit	232
SCSZ	Set Custom paper SiZe	281
SCU	Save Current Unit	282
SEM	Set Emulation Mode	286
SIR	Set Image Refinement level	303
SPSZ	Set Paper SiZe	323
STAK	select paper STAcKer	334
STAT	STATus	335
TRSM	TRansparency Separate Mode	351
UNIT	set UNIT of measurement	351
UOM	Unit Of Measurement per dots	354
WIDE	set WIDE A4 mode	360

## Page Control, Text, and Comment Commands

The placement commands determine where text will be placed on the page.

Command	Function	Page
CMNT	CoMmeNT	59
CTXT	print Centered TeXT	69
PAGE	start new PAGE	178
RTTX	RoTate TeXt	233
RTXT	print Right-aligned TeXT	235
TEXT	print TEXT	347

## Margin and Page Portrait/Landscape Orientation Commands

These commands are used to set the top, bottom, right, and left margins, and to specify portrait or landscape page orientation. Normal text data is printed inside the margins, but the TEXT and RTEXT commands can be used to print character strings or graphics anywhere in the entire printable area of the page, regardless of the margin settings. There are several commands for setting margins, so it is possible to select the one that best suits the purpose at hand. Margin settings can be changed in the middle of a page.

Note that the following limitations apply to the margin setting commands.

- The right margin must be at least one space character to the right of the left margin.
- The bottom margin must be at least one line below the top margin.
- It is not possible to specify negative values as margin settings.

For example, a right margin setting beyond the printable area's right edge would be brought back just inside the right edge of the printable area. In like manner, it is not possible to use a bottom margin setting that would place the bottom margin past the bottom edge of the printable area. An easy way to set the right and bottom margins to the very edge of the printable area is to use a large value such as 100 (centimeters).

The margins and page orientation can be reset by using the RES command.

Command	Function	Page
SBM	Set Bottom Margin	263
SLM	Set Left Margin	306
SLPP	Set Lines Per Page	309
SPL	Set Page Length	319
SPO	Set Page Orientation	321
SPW	Set Page Width	325
SRM	Set Right Margin	327
STM	Set Top Margin	337

Margins and page orientation are more fully explained in Section 1.3. of the *Technical Reference* manual.

## Text Spacing Commands

These commands control the line spacing, character spacing, underline spacing, and underline thickness. The SLS and SLPI commands are used to set the line spacing. The SCS and SCPI commands are used to set the character spacing. These spacing settings may be changed even in the middle of a page.

The table below lists the minimum, maximum, and default values for the text spacing command parameters. If values outside of the above ranges are used, the command is ignored. If a value smaller than one dot is specified for the character spacing, it is interpreted as 0, which results in proportional spacing.

	Minimum value	Maximum value	Default value
<b>Line spacing</b>	1 dot 0.01 cm 0.004 inch	2,047 dots 17.3 cm 6.8 inch	6 lpi 0.423 cm 0.167 inch
<b>Character spacing</b>	1 dot 0.01 cm 0.004 inch	2,047 dots 17.3 cm 6.8 inch	10 cpi 0.254 cm 0.1 inch

Using the font mode (FTMD command), the line spacing and character spacing can be set automatically when the bitmap fonts are selected. Refer to the sections on the FTMD and SFA commands for additional details.

Command	Function	Page
SCPI	Set Characters Per Inch	275
SCS	Set Character Spacing	280
SHMI	Set HMI	297
SLPI	Set Lines Per Inch	308
SLS	Set Line Spacing	311
SULP	Set UnderLine Parameters	345

## Font Commands

The font commands are used to select fonts. Fonts can be selected using substitute numbers instead of a font's specific number. It is also possible to change the attributes of fonts and print them in a unique style. Additionally, there are commands to download fonts to the printing system from an external source, and to generate fonts.

Command	Function	Page
ALTB A	[ALlocate TaBle] Assign user-defined character table	14
ALTB C	[ALlocate TaBle] Convert character code	15
ALTB D	[ALlocate TaBle] Delete user-defined character table	16
ALTB E	[ALlocate TaBle] End defining combination characters	17
ALTB G	[ALlocate TaBle] Generate user-defined table	18
ALTB R	[ALlocate TaBle] Release user-defined character table	19
ALTB S	[ALlocate TaBle] Start to define the combination character	20
ALTB T	[ALlocate TaBle] define combined character by Table	21
ALTF	change to ALTerNate Font	23
ASFN	ASsign external characters for FoNt	31

Command	Function	Page
CSET	Change symbol SET by symbol-set ID	65
DAF	Delete All Fonts	71
DELf	DELeTe Font	75
FLST	print Font LiST	105
FONT	change current FONT	108
FSET	change current Font SETting by characteristic	115
FTMD	bitmap FonT MoDe	119
INTL	InterNaTionaL characters	129
LDfC	LoaD Font Character	147
LDfN C	generate bitmap character for LoaDing FoNt	149
LDfN F	create header for LoaDing FoNt	151
LDfN S	LoaD truetype FoNt	153
RPCS	Return to Previous Code Set	225
RPF	Return to Previous Font	226
SCCS	Save Current Code Set	267
SCF	Save Current Font	269
SETF	SET alternate Font	287
SFA	Set bitmap Font Attributes	289
SFNT	Select current FoNT by typeface	293
TPRS	Text PaRSing	350

Fonts are more fully explained in *Chapter 4* of the *Technical Reference* manual.

## Cursor Movement Commands

These commands move the cursor to specific positions. Cursor movements can be established for absolute positions based on the margins, zero point positions based on the printable area, or relative positions based on the current cursor position.

Cursor movement commands only change the position of the cursor. Also, the cursor may not be moved outside of the printable area (see MZP command). It is possible to store the cursor position in memory then to return to that position stored in memory.

Command	Function	Page
MAP	Move to Absolute Position	157
MRP	Move to Relative Position	166
MRPA	Move to Relative Position specified by Angle	168
MZP	Move to Zero-relative Position	173
RPP	Return to Previous Position	229
SCP	Save Current Position	274


## Vector Graphics Commands

The commands below are used to create figures such as lines, circles, and rectangles, and to add shading, simply by adding parameters.

It is possible to specify colors for all vector graphics. For details, see a color specific command such as SCOL.

If an attempt is made to create figures outside of the printable area using these commands, the coordinates are adjusted automatically so that the figures print inside the printable area. As in the example below, this can produce printed results different from what is expected.

Print settings according to command

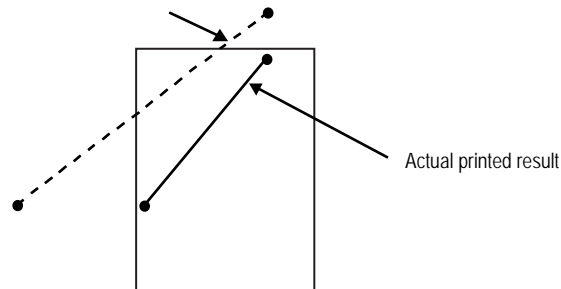

Printing extremely complex figures can exhaust printing system memory. Downloadable fonts can be particularly taxing on printing system memory, producing unexpected print results. It may be possible to correct the problem by removing some of the downloaded fonts or by simplifying the graphic. To determine current memory usage, refer to a status page.

Command	Function	Page
ARC	draw filled-in ARC	28
BLK	draw filled-in BLock	40
BOX	draw BOX	42
CIR	draw CIRcle	52
DAP	Draw to Absolute Position	73
DPAT	select Dashed PATtern	78
DRP	Draw to Relative Position	80
DRPA	Draw to Relative Position specified by Angle	82
DZP	Draw to Zero-relative Position	87
FPAT	generate Fill PATtern	110
GPAT	set Gray PATtern	122
PAT	select fill PATtern	183
PIE	draw PIE chart	198
SPD	Set Pen Diameter	317
XPAT	generate eXpanded fill PATtern	392

## Path Mode Graphics Commands

The following commands provide a variety of path construction operators and painting operators for stroking or filling paths.

Command	Function	Page
CLIP	CLIP current path	54
CLPR	CLiP Rectangular area	55
CLSP	CLoSe Path	57
CPTH	Character PaTH	64



Command	Function	Page
FILL	FILL closed path	101
FLAT	set FLATness	104
NEWP	start NEW Path	175
PARC	in Path, draw ARC	181
PCRP	in Path, Curve to Relative Position	185
PCZP	in Path, Curve to Zero-relative Position	187
PDIR	set Print DIRection	189
PDRP	in Path, Draw to Relative Position	192
PDZP	in Path, Draw to Zero-relative Position	194
PELP	in Path, draw ELLipse	196
PMRA	in Path, Move to Relative position specified by Angle	200
PMRP	in Path, Move to Relative Position	202
PMZP	in Path, Move to Zero-relative Position	204
PRBX	in Path, draw Round BoX	208
PRRC	in Path, at Relative position, draw aRC	210
RPG	Return to Previous Graphics state	227
SCAP	Set line CAP	265
SCG	Save Current Graphics state	271
SDP	Store Dash Pattern	284
SIMG	Set IMAge model	297
SLJN	Set Line JoiN	304
SMLT	Set Miter LimiT	312
STRK	STRoKe current path	343

## Raster Graphics Commands

Raster graphics commands can be used to draw any graphic design by specifying the individual dots. The dot resolution is selectable from 75, 100, 150, 200, 300, 600, and 1200 dots per inch.

Command	Function	Page
ENDR	END Raster data	96
PXPL	PiXel PLacement	213
RVCD	ReceiVe Compressed raster Data	237
RVRD	ReceiVe Raster Data	239
SRO	Set Raster Options	329
SROP	Set Raster OPeration	331
STR	SeT dot Resolution	342

## Color Commands

Color commands are used to create a color palette, assign colors to a palette, and specify colors. In this manual, color commands are marked with **COLOR** under the command name.

Command	Function	Page
ACLI	Add CoLoR by Index	12
CID	Configure color-Image Data	50
CMOD	Color MODe	60
CPAL	Control PALETTE	63
GRAY	represent GRAY	124
GRRD	GRaphic data ReaD	125
HUE	adjust HUE	127
LGHT	adjust LiGHTness	155
MCLR	Match CoLoR	159
PANT	create PANTone color palette	179
RGBL	control RGB Level	222
RPPL	Return to Previous PaLette	231
RVCL	ReceiVe CoLoR raster data	238
SATU	adjust SATUration level	262
SCOL	Select COLoR	273
SCPL	Save Current PaLette	277
SGPC	Set kcGI Pen Color	296
SIMP	create SIMPlE color palette	301
SMNT	Set MoNiTor simulation	314
SPAL	Select PALETTE	316

## Barcode Commands

Barcodes conforming to various specifications can be printed simply by specifying the type of barcode and the barcode data. It is also possible to print barcodes with check digits added.

Command	Function	Page
BARC	draw BARCode	34
ENDB	END a two-dimensional Barcode string	91
XBAR	print two dimensional barcode	362
XBCP	select barcode type/reset all other XBCP parameters, etc.	364 to 386
XBUF	define a BUfFer name	390

## Macro Commands

A series of PRESCRIBE commands can be defined for sequential processing as a macro. Macros are selected using the CALL command and automatically using the AMCR command.

Command	Function	Page
AMCR	call Automatic MaCRo	25
CALL	CALL macro	44
CCPY	Carbon CoPY	46

Command	Function	Page
DAM	Delete All Macros	72
DELM	DELeTe Macro	76
EMCR	Enable MaCRo depending on paper source	89
ENDC	END carbon Copy	92
ENDM	END Macro	94
MCRO	define MaCRO	160

## Debug Commands

These commands can be used to check the print data in hexadecimal format for print jobs with unexpected output.

Command	Function	Page
ENDD	END Dump	93
RDMP	Received-data DuMP	217

## External Media Control Commands

If an external storage, such as JEIDA Ver. 4 memory card or CompactFlash card, or a hard disk, is installed in the printing system, the following commands can be used to write data to or read from it. These commands do not apply to the models that do not have an external storage.

Command	Function	Page
RWER D	[Read/Write External Resource] Delete data on external media	241
RWER F	[Read/Write External Resource] Format external media	242
RWER I	[Read/Write External Resource] automatically print partition Information	243
RWER L	[Read/Write External Resource] print partition List	244
RWER R	[Read/Write External Resource] Read data from external media	245
RWER S	[Read/Write External Resource] Store TrueType font	246
RWER T	[Read/Write External Resource] set Terminate string	248
RWER W	[Read/Write External Resource] Write data to external media	249
RWRF D	[Read/Write Resource File] Delete data on external device	251
RWRF F	[Read/Write Resource File] Format external device	252
RWRF L	[Read/Write Resource File] print resource file List	253
RWRF P	[Read/Write Resource File] set hidden file	254
RWRF R	[Read/Write Resource File] Read	255
RWRF T	[Read/Write Resource File] set Terminate string	256
RWRF W	[Read/Write Resource File] Write data to external device (API program)	257
RWRF W	[Read/Write Resource File] Write data to external device (font)	258
RWRF W	[Read/Write Resource File] Write data to external device (macro)	260
RWRF W	[Read/Write Resource File] Write data to external device (printable data)	261
WRED	WRite EnD	361

## Control Commands for Option Devices

A variety of options, such as feeders, sorters, document finishers, etc., are available for print systems. The commands below provides access to the optional equipment.

Command	Function	Page
APSG	Assign Paper Source Group	27
ASTK	Assign STacKer trays	32
BKLT	print in BooKLeT binding	38
CSTK	select Collator STacKer	68
DUPX	select/deselect DUPlEX mode	84
DXPG	select Duplex PaGe side	85
FOLD	FOLD printed pages	107
JOG	JOG output stacks for separation	145
MID	Multi-tray ID	164
MSTK	select Mailbox STacKer	170
PNCH	PuNCH	206
SSTK	select Sorter STacKer	333
STPC	set STaPlE Counter	339
STPL	STaPLe	340

## e-MPS Commands

The printing system features various job storing options – e-MPS (enhanced Multiple Printing System) – that utilize the hard disk. For this feature to be performed, a print job must be defined as an e-MPS job by the JOBS command. Once the job is defined and stored in the hard disk by the JOBS command, it can be retrieved from the hard disk for printing with various printing features such as stapling, duplex-printing, mailboxing, etc., added on the fly.

Command	Function	Page
CDSK	Check hard DiSK	49
JOB D	JOB Deletion	132
JOBL	print JOB List	134
JOBO	JOB Output	136
JOBP	JOB, print with Print options	138
JOBS	JOB Start	140
JOBT	JOB Terminate	144
MPSS	e-MPS Storage	165
VMAL	Virtual Mailbox ALias	356
VMOB	Virtual Mailbox Output Bin	357
VMPW	set Virtual Mailbox PassWord	358

## 2. PRESCRIBE Commands

In the command format descriptions below, the command is written in fixed-pitch CAPITAL letters. Parameters are indicated in lowercase *italics*. Optional parameters, which may be omitted, are enclosed in brackets [ ]. Three dots (...) mean that the preceding parameters may be repeated. Except for the initial !R!, PRESCRIBE commands may be written in lowercase letters if preferred.

Example:

```
!R! SFNT 'Helvetica'; EXIT;
```

Refer to *Chapter 1* of the *Technical Reference* manual for the discussion on how PRESCRIBE follows the rule regarding upper- and lowercase letters.

The functions of some PRESCRIBE commands are duplicated by the panel keys. For example, the same status page can be printed by the STAT command or by pressing the panel keys. The *User's Manual* provides a full description of the control panel functions.

Many PRESCRIBE commands can be embedded commands within word processing software. This support depends upon the emulation mode and the software. See *Emulation* of the *Technical Reference* manual.

# ACLI — Add CoLoR by Index

## COLOR

### Format

```
ACLI index, color1, color2, color3;
```

### Parameters

#### *index*:

integer from 1 to 255

#### *color1*:

value for red, integer from 0 to 255, in RGB color space  
value for lightness, number from 0.0 to 100.0, in L\*a\*b color space

#### *color2*:

value for green, integer from 0 to 255, in RGB color space  
value for red/green, number from 0.0 to 100.0, in L\*a\*b color space

#### *color3*:

value for blue, integer from 0 to 255, in RGB color space  
value for yellow/blue, number from 0.0 to 100.0, in L\*a\*b color space

### Function

The ACLI command adds a color to the currently active palette. This command is ignored when the currently active palette is a simple color palette or the Pantone color palette. If an index number larger than the palette size is given, this command is also ignored. If a color is added to the existing index number, the current color for that index number is automatically replaced with the new color.

To add a color in a palette, the following guidelines must be used depending on the color space used:

For RGB color space, specify the values for red, green, and blue with an integer from 0 to 255, where 0 = 0% and 255 = 100%. Any value outside this range is rounded to the minimum or maximum value, namely 0 or 255. A fractional value beyond the decimal point is discarded.

For L\*a\*b color space, specify relative values for the lightness, red/green, and yellow/blue with a number from 0.0 to 100.0. Any value outside this range is rounded to the minimum or maximum value, namely 0.0 or 100.0.

## *File*

```
!R! RES;  
  
DAM;  
UNIT C;  
SFNT 'AntiqueOlive-Bd', 20;  
  
CPAL C; SPAL 1; CID 0, 1;  
  
ACLI 1, 0, 0, 255;  
ACLI 2, 0, 255, 0;  
ACLI 3, 255, 0, 0;  
  
MZP 1, 1; SCOL 1;  
TEXT 'This line is printed in blue.';  
MZP 1, 2.4; SCOL 2;  
TEXT 'This line is printed in green.';  
MZP 1, 3.8; SCOL 3;  
TEXT 'This line is printed in red.';  
  
EXIT;
```

## *Printout*



The printout displays three lines of text, each on a new line. The first line is blue, the second is green, and the third is red. The text is in a bold, sans-serif font.

**This line is printed in blue.**

**This line is printed in green.**

**This line is printed in red.**

## *Related Commands*

CPAL, SPAL

## ALTB A — [ALlocate TaBle] Assign user-defined character table

### *Format*

ALTB A, *table-id*;

### *Parameter*

#### *table-id:*

number identifying the character table assigned to the resident font, from 1 to 65535

### *Function*

The ALTB A command assigns the user-defined character table to the current resident font.

### *File*

See *ALTB C* on page 15.



# ALTB C — [ALlocate TaBle] Convert character code

## Format

ALTB C, *table-id*, *source-character*, *target-character*;

## Parameters

### *table-id*:

number identifying the character table to convert the character, from 1 to 65535

### *source-character*:

character code before conversion: 1-byte code = 0 to 255; 2-byte code = 0 to 65533, or in hexadecimal notation (\$xxxx).

### *target-character*:

character code after conversion: 1-byte code = 0 to 255; 2-byte code = 0 to 65533, or in hexadecimal notation (\$xxxx).

## Function

The ALT B C command converts the character code given as *source-character* to the character code given as *target-character* in the user-defined character table.

If the character table having the identical number already exists, the existing character table is replaced by the new character table.

## File

In the example below, the character table number 56535 is generated by ALT B G, in which the character “\ (backslash, character code 92)” is replaced with the Euro currency symbol “a (character code 186 for Roman-9 symbol set).”

```
!R!
SFNT "TimesNewRoman", 14;
CSET 4U; CMNT Roman-9;
ALT B G, 56535, 1;
ALT B C, 56535, 92, 186;
ALT B A, 56535;
TEXT "The Euro currency is symbolized as \.";
ALT B R, 56535; CMNT Release user table;
PAGE; EXIT;
```

## Printout

The Euro currency is symbolized as €.

## ALTB D — [ALlocate TaBle] Delete user-defined character table

### *Format*

ALTB D, *table-id*;

### *Parameter*

#### *table-id:*

number identifying the character table, from 1 to 65535, to be deleted

### *Function*

The ALT B D command deletes the character table defined by the user.

If the table to be deleted is currently allocated to the resident font (see ALT B A), terminate the allocation by using ALT B R before deleting. It is possible to delete all user-defined character tables at once by using ALT B D, 0 ;.

### *File*

See ALT B C on page 15.

### *Related Commands*

ALT B A, ALT B R

# ALTB E — [ALlocate TaBle] End defining combination characters

## *Format*

ALTB E ;

## *Parameter*

None

## *Function*

This command signals the end of defining combination characters in an already generated user-defined character table which was started by the ALT B S command. (page 20). The registered combined characters can be printed by specifying the character code which was assigned at the time of definition.

## *Related Command*

ALT B S

## ALTB G — [ALlocate TaBle] Generate user-defined table

### *Format*

ALTB G, *table-id*, *table-format*;

### *Parameters*

#### *table-id:*

table ID number: 1 to 65535

#### *table-format:*

1 = 1-byte, character codes 0 to 255

2 = 2-byte, character codes 0 to 65533

### *Function*

The ALTB G command generates a user-defined table in either 1-byte or 2-byte format. If the same table ID number already exists, the format table is replaced with the newly generated table.

# ALTB R — [ALlocate TaBle] Release user-defined character table

## *Format*

ALTB R, *table-id*;

## *Parameter*

### *table-id:*

number identifying the character table to be released

## *Function*

The ALT B R command terminates the assignment of the user-defined character table for the current resident font. It is also possible to terminate the assignment of all user-defined character tables by using ALT B R, 0 ;.

# ALTB S — [ALlocate TaBle] Start to define the combination character

## *Format*

`ALTB S, table-id, code[, width, height[, x-coordinate, y-coordinate, [paint-mode]]];`

## *Parameters*

### *table-id:*

number identifying the character table to define the combination character, from 1 to 65535

### *code:*

character code for which the combination character is defined. 1-byte code = 0 to 255; 2-byte code = 0 to 65535, or in hexadecimal notation (\$xxxx).

### *width:*

overall width of the combined character, represented by number from 1 to 65535 in units where the width of the resident font character is 1000

### *height:*

overall height of the combined character, represented by number from 1 to 65535 in units where the height of the resident font character is 1000

### *x-coordinate:*

X coordinate of the reference point, integer value converted in reference to 1000 units

### *y-coordinate:*

Y coordinate of the reference point, integer value converted in reference to 1000 units

### *paint-mode:*

paint mode: 0 = normal (filled), non-zero = line width of outline character (stroked): 1 to 100 units

## *Function*

This command starts to define the combination of characters by specifying the region and coordinates. The characters to combine in this region are registered using the ALT B T command (page 21). The ALT B S sequence is terminated by the ALT B E command. If the identical table number already exists, the existing character table is replaced with the new character table.

# ALTB T — [ALlocate TaBle] define combined character by Table

## Format

ALTB T, *character-code*, *width*, *height*, *x-coordinate*, *y-coordinate*;

## Parameters

### *code*:

character code for which the combined character is defined, or hexadecimal notation (\$xxxx), JIS code

### *width*:

character width: the value from 1 to the character width specified by ALT B S (page 20)

### *height*:

character height: the value from 1 to the character height specified by ALT B S (page 20)

### *x-coordinate*:

X coordinate of the reference point, integer value calculated in 1000 unit basis


### *y-coordinate*:

Y coordinate of the reference point, integer value calculated in 1000 unit basis

## Function

This command defines the region in which to store the combination of characters within coordinates (0, 0) to (1000, 1000) by specifying a rectangular area and reference point for the characters. There are no restrictions on the number of characters to be combined.

### Example:

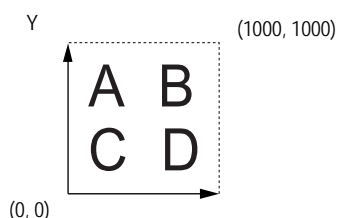

## *File*

```
!R! res; unit c;

SFNT 'TimesNewRoman', 48;

ALTB G, 1000, 1;

ALTB A, 1000;
ALTB S, 1000, 64, 1800, 1000;
ALTB T, 77, 700, 700, 0, 700; CMNT M;
ALTB T, 65, 700, 700, 630, 700; CMNT A;
ALTB T, 85, 700, 700, 1050, 700; CMNT U;
ALTB T, 73, 700, 700, 1570, 700; CMNT I;
ALTB T, 36, 700, 700, 0, 0; CMNT $;
ALTB T, 57, 700, 700, 400, 0; CMNT 9;
ALTB T, 57, 700, 700, 800, 0; CMNT 9;
ALTB T, 57, 700, 700, 1200, 0; CMNT 9;
ALTB E;

MZP 2, 4; SFNT 'TimesNewRoman',48; TEXT "HOLIDAYS!";

PAGE; EXIT;
```

## *Printout*

MAUI  
\$999 HOLIDAYS!



# ALTF — change to ALternate Font

## *Format*

ALTF *alternate-number* ;

## *Parameter*

*alternate-number*: a number from 0 to 47

## *Function*

The ALTF command changes the current font to a font designated by an alternate number. The actual font assigned to this alternate number is set by a previous SETF command.

The alternate number can be a bitmap font number or a number specifically assigned to the scalable font using the SFNT command (See *File* on the next page).

If no font has been assigned to the specified alternate number, the ALTF command has no effect: the font does not change.

The ALTF command enables you to prepare a document using several fonts, without deciding in advance which specific fonts to use. For example, you could use ALTF 1 to designate plain text and ALTF 2 to designate italics, and allow the specific size and style of type to be determined by SETF commands at a later time.

## *File*

```
!R! RES;
SFNT "Helvetica-Nr", 12, 1000;
SFNT "TimesNewRoman-It", 11, 1001;
SETF 1, 1000;
SETF 2, 1001;
MCRO BIBLIO;
    ALTF 1; TEXT %1, E; TEXT " ", E;
    ALTF 2; TEXT %2, E; TEXT " ", E;
    ALTF 1; TEXT %3, N;
ENDM;
ALTF 1; TEXT "Bibliography", N, U;
TEXT, N;
CALL BIBLIO,
    "Radin, Paul,",
    "Hero Cycles of the Winnebago,",
    "Indiana University Publications";
CALL BIBLIO,
    "Neumann, Erich,",
    "Amor and Psyche,", "Bollingen Press";
CALL BIBLIO,
    "Jung, Carl G.", "Man and His Symbols,",
    "Bollingen Press";
PAGE;
EXIT;
```

## *Printout*

### **Bibliography**

**Radin, Paul, *Hero Cycles of the Winnebago*, Indiana University Publications**  
**Neumann, Erich, *Amor and Psyche*, Bollingen Press**  
**Jung, Carl G., *Man and His Symbols*, Bollingen Press**

# AMCR — call Automatic MaCRo

## *Format*

`AMCR mode, [repeat-count] macro-name, parameter, ...;`

## *Parameters*

### *mode:*

E = Enable automatic macro; Save and retain current printing parameters  
 T = Enable automatic macro; Do not save current printing parameters  
 D = Disable automatic macro

### *repeat-count:*

number of times the macro is executed

### *macro-name:*

name defined by the MCRO command

### *parameter:*

values given to the dummy parameters in the macro definition

## *Function*

The AMCR command enables the automatic macro (overlay). It automatically executes the macro defined by a MCRO command each time a page is printed. For example, it would be used to print multiple copies of the same form, filled in with different text.

The AMCR command closely resembles the CALL command; therefore, the user should refer to the section on the CALL command for further information.

When the automatic macro is enabled using mode E, the following printing system settings are saved and retained upon completion of the macro: font information, margins, cursor position, line spacing, character spacing, page orientation, unit of measurement, underline parameters, and fill pattern.

When the automatic macro is enabled with mode T, the printing system settings are modified according to the parameter settings contained in the macro.

Color specifications may be used within macros. When an auto-macro (AMCR) is executed, the active palette and color index number are saved and restored after the macro has executed.

The automatic macro remains enabled until the AMCR command with the mode set to D is encountered or the printing system is switched off. Note that mode D requires no other parameters such as repeat-count.


The following commands are invalid within a macro: ASTK, PSRC, CCPY, DUPX, DXPG, JOBD, JOBL, JOBO, JOBP, JOBS, JOBT, JOG, LDFC, LDFN, MID, MSTK, RDMP, SEM, SPSZ, SSTK, STAK, STAT, STPL, VMAL, VMPW

## *File*

```
!R! RES;
MCRO CROPMARK;
UNIT C;
MZF 2.46, 3.96; SCP; SCP; SCP;
MRP -.635, 0; DRP -1.9, 0; RPP;
MRP 0, -.635; DRP 0, -1.9; RPP;
MRP 14.85, 0; SCP; SCP;
MRP .635, 0; DRP 1.9, 0; RPP;
MRP 0, -.635; DRP 0, -1.9; RPP;
MRP 0, 21; SCP; SCP;
MRP .635, 0; DRP 1.9, 0; RPP;
MRP 0, .635; DRP 0, 1.9; RPP;
MRP -14.85, 0; SCP;
MRP -.635, 0; DRP -1.9, 0; RPP;
MRP 0, .635; DRP 0, 1.9;
RPP;
ENDM;

AMCR E, CROPMARK;
PAGE; UNIT C; SLM 3.6; STM 5.2; EXIT;
The text starts here.
```

## *Printout*

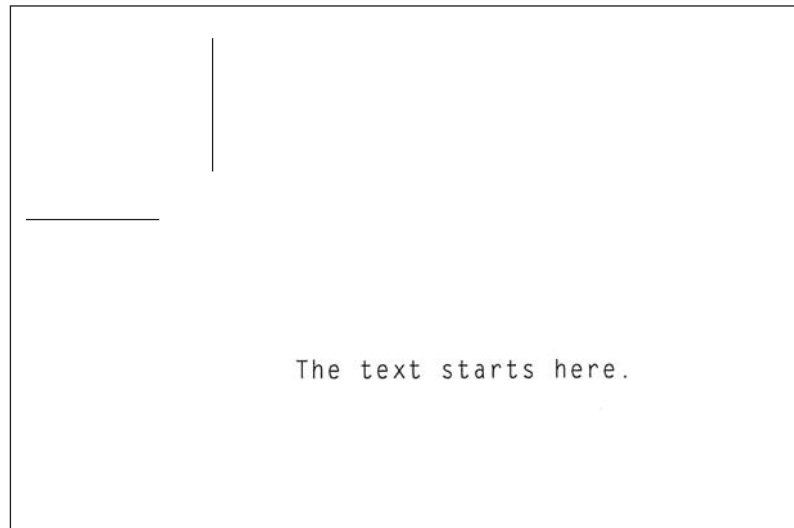

```

The text starts here.
```

## *Related Command*

CCPY

# APSG — Assign Paper Source Group

## *Format*

APSG *group #* (cassette 1), *group #* (cassette 2), ...*group #* (cassette 6);

## *Parameters*

### *group #:*

Number representing the group to which the cassette is grouped, from the top (1) towards the bottom (6) cassette, as the following numbers:

- 0 = Ungroup the cassette
- 1 = Assign the cassette for group 1
- 2 = Assign the cassette for group 2
- 3 = Assign the cassette for group 3

## *Function*

The APSG command assigns the paper cassettes with group numbers, between 1 through 3, so that the grouped cassettes behave as a single paper source for bulk printing. The MP tray cannot be assigned to a group. All 6 parameters must be given even though the printer has less than 6 cassettes installed. For missing cassette numbers, specify 0.

The printing system will automatically switch between the paper cassettes in the group when a cassette becomes empty. When a group contains paper of different paper sizes and types, printing will continue for the different paper sizes and types.

If the automatic paper selection feature of the printer driver is used, APSG is disabled. To utilize paper source grouping, the paper source must be explicitly commanded by the printer driver.

## *Example*

To set six paper cassettes into group 1 (cassettes 1 and 4), group 2 (cassettes 2 and 5), and group 3 (cassettes 3 and 6), respectively:

```
!R! APSG 1,2,3,1,2,3; EXIT;
```

In this example, when cassette 1 becomes empty, printing will continue using cassette 4 which is the other part of group 1.

The APSG sequence is valid after the printing system is switched off. To upgroup paper cassettes, use parameter 0 as the following example:

```
!R! APSG 1,0,0,1,0,0; EXIT;
```

Paper cassettes of 2 and 5, and 3 and 6 are ungrouped, keeping paper cassettes 1 and 3 (group 1) intact.

# ARC — draw filled-in ARC

## *Format*

ARC *inner-radius*, *outer-radius*, *start-angle*, *end-angle*;

## *Parameters*

### *inner-radius:*

inner radius of arc

### *outer-radius:*

outer radius of arc

### *start-angle:*

starting angle

### *end-angle:*

ending angle

## *Function*

The ARC command works in the standard graphics mode. It draws a filled-in arc-shaped area extending from the inner radius to the outer radius, and from the starting angle to the ending angle. The area is filled with the pattern designated by the previous PAT, FPAT, or GPAT command. The starting and ending angles are specified in integer degrees measured clockwise from the vertical. (Note that the PARC command measures the angles from the positive *x* axis.) The cursor is located at the center of curvature of the arc, and does not move.

If the inner radius is zero, the area has a pie-slice shape, and can be used to fill in one sector of a pie chart.


If the inner and outer radii are nearly equal and the fill pattern is the all-black pattern (PAT 1, for example), the result is a line arc. The line thickness is the difference between the two radii, rather than the value designated by the SPD (set pen diameter) command.

The ARC command does not draw the boundary of the filled-in area.

*File*

```
!R! RES; UNIT C;
MAP 5, 8;
PAT 52;
ARC 1, 2, -45, 45;
MAP 5, 10;
PIE 2, 0, 10, 20, 30;
ARC 0, 2, 0, 60;
PAT 20;
ARC 0, 2, 60, 180;
PAT 10;
ARC 0, 2, 180, 360;
PAT 1;
NEWP;
PMZP 4, 2;
PARC 4, 3, 1, 90, 270;
PARC 5, 4, 1, 180, 360;
PARC 6, 3, 1, 270, 90;
PARC 5, 2, 1, 0, 180;
STRK;
MRP 0.6, 1.1;
SFNT "Univers-Md";
TEXT "ARC";
PAGE; EXIT;
```

*Printout*

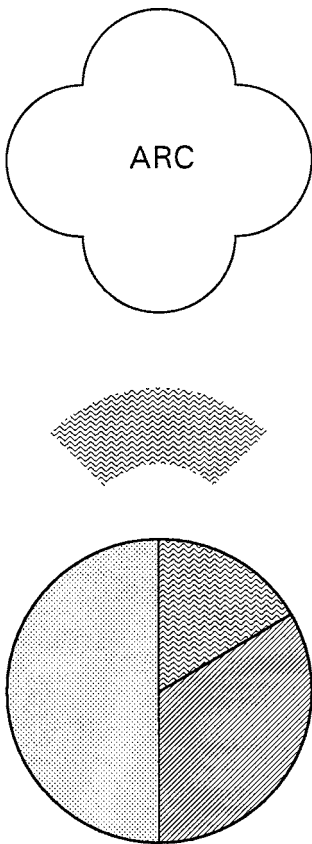

*Related Command*

PARC



# ASFN — ASsign external characters for FoNt

## *Format*

*ASFN mode , font-number ;*

## *Parameters*

### *mode:*

A = assign external characters

R = release external characters

### *font-number:*

number identifying the external character font: 1000 to 65535

## *Function*

The ASFN command assigns external characters which are defined by the user to the current resident font. The external characters should be generated and downloaded in the printing system as an external font by using the LDFC or LDFN command.

For the print systems supporting 2-byte font system, if the user-defined font is a 1-byte code font, it is assigned to the current resident roman (ANK) font. If it is a 2-byte code font, it is assigned to the current 2-byte font.

This command has no effect if the resident font is a bitmap font and the font to be assigned is an outline font, or vice versa.

*mode* = R is used to release the current resident font from the external characters. Note that it is necessary to release the external font assignment if you want to delete the external font.

# ASTK — Assign STackEr trays

## Format

ASTK *tray1*, *tray2*, *tray3*, ...;

## Parameters

*tray1*, *tray2*, *tray3*, ...:

Number representing the tray in the optional sorter which becomes the last (bottom) tray in each group, as counted from the top towards the bottom tray.

## Function

The ASTK command assigns the sorter trays in groups so that the sorter can be shared among the multiple users. Each parameter represents the last tray in each group of trays. The maximum number of parameters must be equal to the number of the trays the sorter is equipped with. By the factory default, the trays are grouped as the following table:

Group	Sorter model		
	SO-6	SO-30	SO-60
1	1, 2	1, 2	1, 2
2	3, 4	3, 4	3, 4
3	5, 6	5, 6	5
4	7, 8	7, 8	—
5	9 to 15	9	—
Equiv. ASTK command	ASTK 2, 4, 6, 8;	ASTK 2, 4, 6, 8;	ASTK 2, 4;

The ASTK command is ignored if parameters include the value greater than the actual number of trays. If the number of parameters is less than the maximum number of sorter trays, the printing system automatically groups the remaining trays in one, making it the last group. For example, the command sequence ASTK 2, 4, 6; is equivalent to ASTK 2, 4, 6, (bottom tray number);.

The tray group setting made by ASTK is stored indefinitely in the printing system's permanent memory while the power is off, or until it is changed by another ASTK command. It is ignored in the normal sorter mode (FRPO S0, 0;) but the printing system automatically sets up the previous tray group setting when the sorter is again switched to the multiple environment mode (FRPO S0, 1; or FRPO S0, 2;).

## *File*

The following command sequence delivers print jobs to trays 4, 5, 6, and 7 (the second group).

```
!R! FRPO S0, 1; CMNT Enter multiple sorter mode;
    ASTK 3, 7, 9; CMNT Create three groups;
    MID 2; CMNT Send the output to 2nd grp.;
    SSTK; CMNT Sort;
EXIT;
```

## *Related Commands*

CSTK, MID, MSTK, SSTK

# BARC — draw BARCode

## Format

`BARC type, flag, 'string' [ , short, tall [ , bar1, bar2, bar3, bar4, space1, space2, space3, space4 ] ] ;`

## Parameters

### *type:*

There are the following barcode types:

- 0 = UPC A
- 1 = UPC A with two-digit supplement
- 2 = UPC A with five-digit supplement
- 3 = UPC D-1
- 4 = UPC D-2
- 5 = UPC D-3
- 6 = UPC D-4
- 7 = UPC D-5
- 8 = UPC E
- 9 = UPC E with two-digit supplement
- 10 = UPC E with five-digit supplement
- 11 = EAN-8 (Truncated JAN)
- 12 = EAN-13 (Truncated JAN)
- 13 = DUN-14 (Distribution Unit Number, EAN)
- 14 = DUN-16 (Distribution Unit Number, EAN)
- 15 = MSI with no check digit
- 16 = MSI with single mod-10 check digit
- 17 = MSI mod-10 followed by mod-10 check digit
- 18 = MSI mod-11 followed by mod-10 check digit
- 19 = CODE 39 with no check digit
- 20 = CODE 39 with mod-43 check digit
- 21 = Interleaved two of five with no check digit
- 22 = Identicon two of five with no checksum
- 23 = Code 128 (manual mode change)
- 24 = Code 128 (auto mode change)
- 25 = Code 11 with only 'c'
- 26 = Code 11 with both 'c' and 'k' checksum
- 27 = Code 93 with both 'c' and 'k' checksum
- 28 = CODABAR with no check digit (narrow gap)
- 29 = Matrix two of five with no checksum
- 31 = Industrial two of five with no checksum
- 32 = Ames with no checksum
- 33 = Delta distance 'a' (IBM) with no checksum
- 34 = Delta distance 'a' (IBM) with no checksum
- 35 = EAN 8 with two-digit supplement
- 36 = EAN 8 with five-digit supplement
- 37 = EAN 13 with two-digit supplement
- 38 = EAN 13 with five-digit supplement
- 39 = POSTNET
- 40 = FIM
- 41 = Interleaved two of five with check digit
- 42 = UPC/EAN128

43 = CUSTOM CODE (Japan)<sup>1</sup>  
 44 = CODABAR with no check digit (wide gap)

### *flag:*

Y = Print the string under the barcode  
 N = Do not print the string

### *string:*

Text to be converted to a barcode. The text must be enclosed with single or double quote marks.

### *short:*

Height of short bars in barcode types that have bars in two different heights. Height of all bars in other cases. Default value is 1.52cm (0.6 inches, 180 dots). The unit of measurement is determined by the UNIT command.  
 Minimum value 0.254cm (0.1 inch, 30 dots)  
 Maximum value 27.9cm (11 inches, 3300 dots)

### *tall:*

Height of tall bars in barcode types that have bars in two different heights. Default values are the same as that of the short height.

### *bar1/2/3/4:*

Width of a bar.  
 Minimum value 0.0085cm (0.0033 inches, 1 dot)  
 Maximum value 1.6933cm (0.6667 inches, 200 dots)

### *space1/2/3/4:*

The width of a space.  
 The minimum and maximum values are the same as that of the bar width.

## ***Function***

The BARC command converts a string to a barcode and prints it. The specification of the type, flag and string parameters is necessary. After printing, the cursor positions at the upper left corner of the barcode.

If a value not mentioned above is specified as the barcode type, 12 EAN-13 will be automatically selected.

Specify the flag parameter to Y when printing the text under the printed barcode or N when not printing the text. The text will be printed in the font currently selected for the printing system. However, a font selection command can be written ahead of the BARC command to print the text in an arbitrary font.

Characters that can be converted

The length of the string varies depending on the type of barcode to use. Characters that can be used for the most barcode type are described in the table below.

---

<sup>1</sup> FS-600/FS-7000/FS-9100/FS-9500 only

Table 20 Characters that can be used

Type	Max	Characters to be used	Default
0	11	0123456789	0
1	13	0123456789	0
2	16	0123456789	0
3	13	0123456789	0
4	18	0123456789	0
5	22	0123456789	0
6	25	0123456789	0
7	29	0123456789	0
8	6	0123456789	0
9	8	0123456789	0
10	11	0123456789	0
11	7	0123456789	0
12	12	0123456789	0
13	13	0123456789	0
14	15	0123456789	0
15	1 - 14	0123456789	0
16	1 - 14	0123456789	0
17	1 - 14	0123456789	0
18	1 - 14	0123456789	0
19	1 - 40	\$%+-. /0123456789ABCDEFGHIJKLMNOPQRSTUVWXYZ and spaces	space
20	1 - 40	\$%+-. /0123456789ABCDEFGHIJKLMNOPQRSTUVWXYZ and spaces	space
21	2 - 26	0123456789	0
22	1 - 25	0123456789	0
23	1 - 40	All (ASCII characters 32 - 126)	space
24	2 - 40	All (ASCII characters 32 - 126)	space
25	1 - 45	-0123456789	space
26	1 - 45	-0123456789	space
27	1 - 50	All (ASCII characters 32 - 126)	space
28	3 - 32	\$+-. /0123456789:abcdetn*	-
29	1 - 25	0123456789	0
30	1 - 25	0123456789	0
31	1 - 25	0123456789	0
32	1 - 25	-0123456789	0
33	1 - 25	0123456789KLMO	0
34	1 - 25	0123456789KLMO	0
35	9	0123456789	0
36	12	0123456789	0
37	14	0123456789	0
38	17	0123456789	0
39	139	0123456789	-

Type	Max	Characters to be used	Default
40	1	The following FIM pattern type A. Country Reply Mail with POSTNET B. Business Reply, Penalty and Franked Mail without POSTNET C. Business Reply, Penalty and Franked Mail with POSTNET D. OCR Readable Mail without POSTNET	0
41	125	0123456789	0
42	80	All (ASCII characters 32 - 126)	
43	1 - 20	0123456789ABCDEFGHIJKLMNPOQRSTUVWXYZ	-
44	3 - 32	\$+-. /0123456789:abcdetn* and spaces	-

### Length of the bars

For the UPC and EAN (JAN) barcode type, the length of the short and tall bars can be adjusted. When adjusting the length of the tall or short bars, specify that of both tall and short bars. If the length of only the tall or short bars is adjusted, the bars' length does not change. It is recommended to use the dot for the unit of measurement in order to avoid the translation error by the barcode reader. In the example below, the length of the short bar is specified as 1.5cm and the tall bar as 1.7cm.

```
!R! UNIT D; BARC 8, Y, '123456', 180, 200; PAGE; EXIT;
```



### Width and space of the bar

It is possible to adjust the widths of the bars and space between the bars. When adjusting these widths, specify all of the eight width and space parameters. Specify the bar 1 to bar 4 in the ascending order. The values can be specified between 1 and 200 dots.

$$1\text{dot} \leq \text{bar1} < \text{bar2} < \text{bar3} < \text{bar4} \leq 200\text{dots}$$

$$1\text{dot} \leq \text{space1} < \text{space2} < \text{space3} < \text{space4} \leq 200\text{dots}$$

It is recommended to use the dot for the unit of width in order to avoid the translation error by the barcode reader. The example below specifies the width of the first bar and space as 5 dots and that of the remaining bars as 10 dots.

```
!R! UNIT D;
  BARC 19, Y, '0123ABC', 60, 60, 5, 10, 10, 10, 10, 5, 10, 10;
  PAGE;
EXIT;
```



# BKLT — print in BookLeT binding

## Format

BKLT *binding* ;

## Parameter

### *binding*:

number representing binding mode:

0 = None


1 = Left-to-right binding

2 = Right-to-left binding

## Function

The BKLT command allows printing a job as a booklet, reordering and printing the pages two-up on a sheet of paper. Booklet printing requires the hard disk to be installed in the printing system.

a = First page  
b = Last page

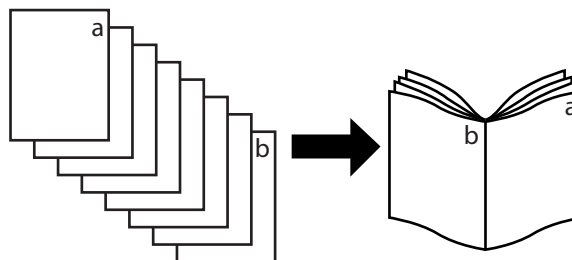


The job to booklet-print must be defined using the JOBS command. Used together with the FOLD command, the paper can be folded in the middle to form a booklet.

Booklet printing is possible for documents of A4, A5, B5, letter, or statement size documents and are automatically printed on double size paper, namely A3, A4-R, B4, ledger, or letter-R. The original page size must be specified by the SPSZ command, for example, SPSZ 8; for A4 page size. It is also possible to reduce the original page size by commanding the second parameter for SPSZ. For example, to print two A4 pages on a A4 sheet, command SPSZ 8, 5;. For details on page size, refer to the SPSZ command page in this manual. The document must have the same page size for all pages. If the double size paper for the document is not available in the printing system, the printing system ignores the BKLT command and prints in the original paper size. Duplex printing is also possible by adding the DUPX command. To correctly arrange two neighboring pages in line, short-edge binding duplex must be used by commanding DUPX 2;.

The order of print pages can be selected by *binding* in either of the following manners:



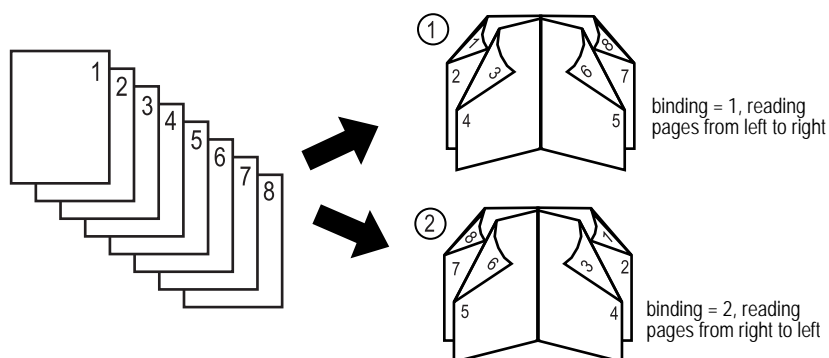

This command is not supported by some photocopier models.

## File

The following command sequence prints a copy of a 12-page A4 document in booklet mode, folding the stack in the middle. The printing system will require A4-R paper to be loaded.

```
!R! RES; SPSZ 8, 5;

UNIT C;
BKLT 1;
DUPX 2;
FOLD;
SFNT 'Helvetica-Bd', 72;
JOBS 0, 1, 0, 0;
MZP 4, 5; TEXT "Page 1";
PAGE;
MZP 4, 5; TEXT "Page 2";
PAGE;
MZP 4, 5; TEXT "Page 3";
PAGE;
MZP 4, 5; TEXT "Page 4";
PAGE;
MZP 4, 5; TEXT "Page 5";
PAGE;
MZP 4, 5; TEXT "Page 6";
PAGE;
MZP 4, 5; TEXT "Page 7";
PAGE;
MZP 4, 5; TEXT "Page 8";
PAGE;
MZP 4, 5; TEXT "Page 9";
PAGE;
MZP 4, 5; TEXT "Page 10";
PAGE;
MZP 4, 5; TEXT "Page 11";
PAGE;
MZP 4, 5; TEXT "Page 12";
PAGE;
JOB;
EXIT;
```

# BLK — draw filled-in BLock

## Format

BLK *width*, *depth*[, *option*];

## Parameters

### *width*:


width of the block

### *depth*:

depth of the block

### *option*:

B = Leave the cursor unmoved (Default)  
H = Move the cursor to the horizontally adjacent corner  
V = Move the cursor to the vertically adjacent corner  
E = Move the cursor to the diagonally opposite corner  
L = Move the cursor one line down  
N = Move the cursor to the beginning of the next line

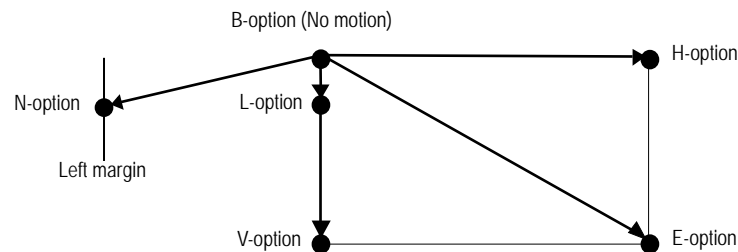

## Function


 
The BLK command draws a block of a specified size with one corner at the current cursor position. The block is filled in with the pattern designated by the previous PAT, FPAT, or GPAT command. The cursor is moved as specified by the option. If the option is omitted, the cursor is not moved (same as option *B*).

*File*

```

!R! RES; UNIT C;
MAP 5, 5;
PAT 20;
BOX 4, 1; BLK 4, 1;
MRP 0, 1.5;
BOX 4, 1; BLK 4, 1;
MRP .9, .6;
SFNT "Helvetica-Nr";
TEXT 'OVERPRINTING';
MRP 0, 5;
PAT 29; BOX 1, -4; BLK 1, -4, H;
PAT 39; BOX 1, -3; BLK 1, -3, H;
PAT 49; BOX 1, -2; BLK 1, -2, H;
PAT 59; BOX 1, -1; BLK 1, -1, H;
PAGE;
EXIT;

```

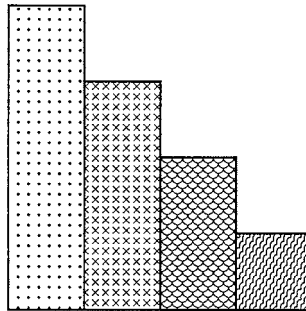*Printout*

# BOX — draw BOX

## Format

BOX *width*, *depth*[, *option*];

## Parameters

### *width*:


width of the box

### *depth*:

depth of the box

### *option*:

B = Leave the cursor unmoved (Default)  
H = Move the cursor to the horizontally adjacent corner  
V = Move the cursor to the vertically adjacent corner  
E = Move the cursor to the diagonally opposite corner  
L = Move the cursor one line down  
N = Move the cursor to the beginning of the next line

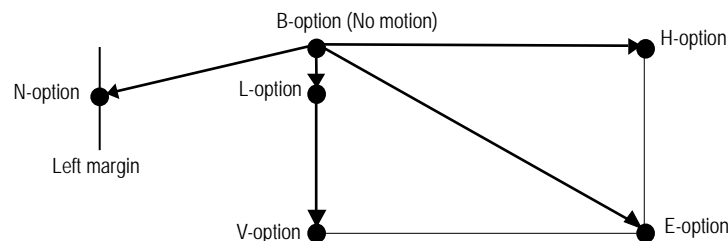

## Function

The BOX command draws a box of a specified size with one corner at the current cursor position. The line thickness is designated by the SPD (set pen diameter) command. The size and thickness is measured on the basis of value established in the UNIT command. The cursor is moved as specified by the option. If the option is omitted, the cursor is not moved (same as option B).

The BOX command draws only the outline of the box. To fill in the box, use the BLK command.

The width and depth may use either a positive or negative value.

## File

```
!R! RES; UNIT C; SPD .1;
    SLM 2;
```

```
MAP 4, 0;  
SCP;  
SFNT "Helvetica-Nr", 10;  
BOX 4, 2, L; TEXT 'Text printed with option L';  
RPP;  
BOX 4, 2, N; TEXT 'Text printed with option N';  
PAGE;  
EXIT;
```

### *Printout*

Text printed with option N

Text printed with option L



# CALL — CALL macro

## *Format*

CALL[ *repeat-count*] *macro-name* , *parameter-value* , . . . ;

## *Parameters*

### *repeat-count:*

number of times the macro is to be executed

### *macro-name:*

name defined by a MCRO command

### *parameter-values:*

values given to the dummy parameters in the macro definition

## *Function*

The CALL command executes a macro previously defined by a MCRO command. The macro may be executed any desired number of times by specifying a repeat count. Note that the repeat count is not followed by a comma. If the repeat count is omitted, the macro is executed once.

Only the first four characters of the macro name are significant. They must match the first four characters of a macro name defined by a previous MCRO command.

A parameter value consists of the characters that occur between the delimiting commas, excluding the commas. These parameters are substituted without change for the corresponding dummy parameter in the macro definition, except that consecutive spaces are compressed to a single space.




When a character-string parameter is enclosed in apostrophes or quotation marks, the enclosed string together with the enclosing apostrophes or quotation marks is substituted for the dummy parameter. In this case, consecutive spaces are not compressed.

If a CALL command has too few parameters, it is still valid. The macro is partially executed; any commands in the macro body without appropriate parameters will be ignored.

The CALL command, like other commands, is limited to 255 characters in length.

*File*

```
!R! RES; UNIT C; SLS .5;
CMNT Requires BX and SCREEN macros;
CMNT See ENDM command page;
MAP 9, 3; CALL BX;
MAP 7, 4; CALL 5 BX;
MAP 5, 5; CALL 9 BX;
MAP 8, 6; CALL SCREEN, 2.2, 1.7;
MAP 8.6, 7;
TEXT 'Narrow', L;
TEXT 'screen';
MAP 5,9; CALL SCREEN, 8.2,1.2;
MAP 8,10;
TEXT 'Wide screen';
PAGE;
EXIT;
```

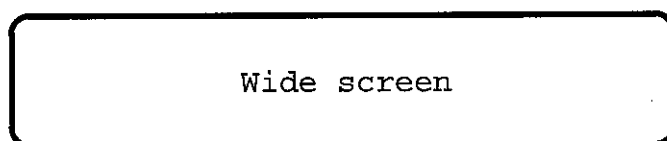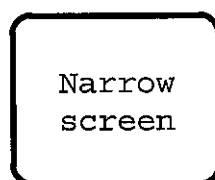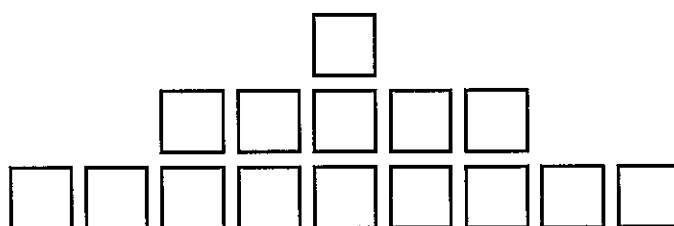*Printout*

# CCPY — Carbon CoPY

## *Format*

CCPY mode ;

## *Parameter*

### *mode:*

E = enable carbon copy

D = disable carbon copy

## *Function*

The CCPY command continuously executes different automacros using different paper sources, enabling to apply the different form overlay using the different paper type to a document to be carbon-copied, similarly to hand-writing carbon copy forms. The CCPY statement should be terminated with the ENDC command.

The macro and paper source for each form should be described following the CCPY command in a separate line using the PSRC and AMCR command, and terminated by the TERM command. For example, the second line in the following example is applied to the first page of the document and executes the CROPMARK macro printing the page on the paper fed from cassette #2. The third line applies to the second page of the document, and so on. It is possible to add as many lines as required to match the number of pages of the document to print.

```
CCPY E ;  
    PSRC 2 ; AMCR E , CROPMARK ; TERM ;  
    PSRC 3 ; AMCR E , SIGNATURE ; TERM ;  
    PSRC 4 ; AMCR E , COLOPHON ; TERM ;  
ENDC ;
```

During the carbon copy is executed, the copy count (COPY command) is forced to be 1. To apply no overlay to a specific page, describe only the TERM command in the line corresponding to the page. Note that the same paper source as the previous line is applied to that line. For example:

```
CCPY E ;  
    PSRC 2 ; AMCR E , CROPMARK ; TERM ;  
    TERM ;  
    PSRC 4 ; AMCR E , COLOPHON ; TERM ;  
ENDC ;
```

In the example above, the second page is printed using cassette #2 with no form overlay.

In carbon copy, duplex printing is not possible. The paper size and the page orientation should be consistent for all pages in the document to be carbon copied. Otherwise, the carbon copy is cancelled.

To terminate carbon copy, send CCPY D to the printing system.



*File*

```

!R!

RES; DAM; CCPY D; UNIT C;

MCRO COVER;
UNIT C;
SFNT 'Helvetica-Bd',14;
TEXT 'Registration Form', L;
SFNT 'Helvetica', 9;
TEXT 'Please provide your personal details: ';
MRP 0, .2;
BOX 6, 1;
MRP 0, .35;
TEXT ' Your Name';
ENDM;

MCRO MAIL;
UNIT C;
SFNT 'Helvetica-Bd',14;
TEXT 'Mailing Information', L;
SFNT 'Helvetica', 9;
TEXT 'Shipping Department Use Only';
MRP 0, .2;
BOX 6, 1;
MRP 0, .35;
TEXT " Client's Name";
ENDM;

MCRO COPY;
UNIT C;
SFNT 'Helvetica-Bd',14;
TEXT "Client's Copy", L;
SFNT 'Helvetica', 9;
TEXT 'Please retain this copy for future reference.';
MRP 0, .2;
BOX 6, 1;
MRP 0, .35;
TEXT ' Registered Client';
ENDM;

CCPY E;
PSRC 1; AMCR E,COVER; TERM;
PSRC 0; AMCR E,MAIL; TERM;
PSRC 1; AMCR E,COPY; TERM;
ENDC;

EXIT;

!R! CMNT Document to be carbon-copied;
SFNT 'Helvetica', 12;
MZP 0, 1.9;
TEXT ' David Sumimoto';
PAGE;
EXIT;

```

*Printout*

# CDSK — Check hard DiSK

## *Format*

CDSK ;

## *Parameter*

None

## *Function*

The CDSK command verifies data in the hard disk (garbage collection). It deletes garbage jobs such as page image data that were accidentally generated in the hard disk and normally inaccessible for deletion.

## *File*

!R! CDSK; EXIT;

# CID — Configure color-Image Data

COLOR

## Format

```
CID color-space , encoding ;
```

## Parameters

### *color-space:*

- 0 = Device-dependent RGB (Default)
- 1 = Device-dependent CMY
- 2 = Void
- 3 = CIE L\*a\*b

### *encoding:*

- Pixel encoding
- 1 = Indexed by Pixel (Default)
- 3 = Direct by Pixel

## Function

The CID command creates a new color palette using the ID which is assigned to the currently active palette. Note that the currently active palette is deleted by this command.

It is possible to add and change colors on this palette. However, the currently active colors do not change even though a new palette is created with this command.

The same colors as simple colors are defined for index numbers 0 through 7 when the RGB color space is specified. The color assignments for these indices can be changed using the ACLI command.

Indexed by Pixel encoding assigns colors onto the palette. This is used for rendering text and vector objects. Direct by Pixel encoding assigns colors directly to pixels. This is used for bitmap images.

Changing a color palette does not affect color print quality on output pages.

*File*

```
!R! RES;  
DAM;  
UNIT C;  
SFNT 'Helvetica-Bd', 20;  
  
CPAL C, 1; SPAL 1;  
  
CID 0, 1; CMNT RGB Color Space used;  
ACLI 1, 0, 0, 255;  
  
MZIP 1, 1; SCOL 1;  
TEXT 'An RGB color palette is used.'  
  
CID 3, 1; CMNT L*a*b Color Space used;  
ACLI 2, 100, 75, 0;  
  
MZIP 1, 2; SCOL 2;  
TEXT 'An L*a*b color palette is used.';  
  
PAGE;  
EXIT;
```

*Printout*

**An RGB color palette is used.**  
**An L\*a\*b color palette is used.**

## CIR — draw CIRcle

### *Format*

CIR *radius* ;

### *Parameter*

#### *radius:*

radius of the circle

### *Function*


In standard graphics mode, the CIR command draws a circle centered at the current cursor position. The line thickness used is designated by the SPD command.

A circle can also be drawn by using the path mode graphics. Refer to the PARC command.

### *File*

```
!R! RES; UNIT C; SLS .5;
SPD .01; MAP 10, 1;
CIR .1; MRP 0, .1;
CIR .2; MRP 0, .2;
CIR .4; MRP 0, .4;
CIR .8; MRP 0, .8;
SPD .02;
CIR 1.6; MRP 0, 1.6;
CIR 3.2; MRP 0, 3.2;
SPD .2;
CIR .1; MRP .2, .4;
SFNT "Helvetica-Nr"; TEXT 'Cursor now here';
PAGE;
EXIT;
```

*Printout*

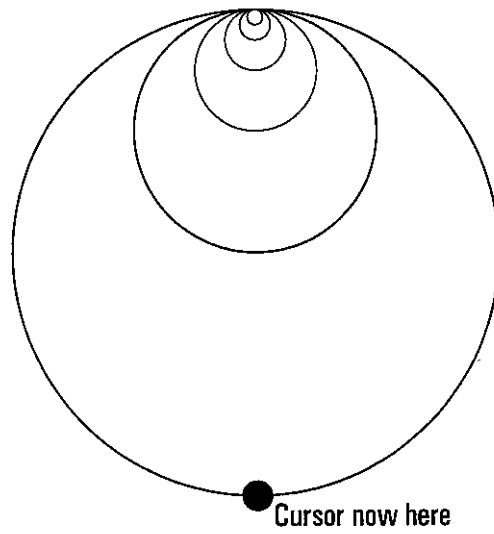

## CLIP — CLIP current path

### *Format*

CLIP [*clip-mode*] ;

### *Parameter*

#### *clip-mode:*

- 1: EO clip
- 2: Non-zero winding clip

### *Function*

The CLIP command sets the current path as the clipped path. After this command is issued, no painting is done outside the area of the path. Executing this command does not delete the current path.

The RES command initializes paths to a state with no clip area.



# CLPR — CLiP Rectangular area

## Format

```
CLPR [x1, y1, x2, y2];
```

## Parameters

*x1:*

x coordinate of the top-left corner of the rectangle

*y1:*

y coordinate of the top-left corner of the rectangle

*x2:*


x coordinate of the bottom-right corner of the rectangle

*y2:*

y coordinate of the bottom-right corner of the rectangle

## Function

The CLPR command describes a rectangular path which intersects the inside of the texts, current path, or raster graphics objects. The clipping rectangle does not clip those graphics segments drawn in the standard mode graphics. Any painting operations outside the specified rectangle is erased and those segments within it are painted on the page.

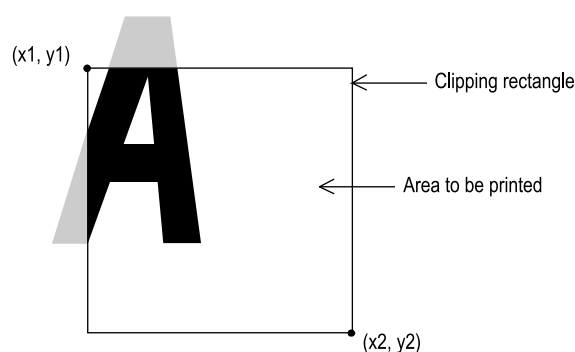


The coordinates are measured from the top and left edge limits in the units designated by the UNIT command. If the parameters are omitted, the rectangle is equal to the size of the current page size. If an attempt is made to position the *top-left* corner to the right of the *bottom-left* corner [greater values for (*x1*, *y1*) than for (*x2*, *y2*)], the printing system exchanges the coordinate values with each other.

The printing system resets the size of the rectangular clipping path to be equal to the maximum printable area of the current page size when a PSRC, RES, SPO, or SPSZ (Set Page SiZe) command is encountered.

## *File*

```
!R! RES; UNIT C;  
NEWP;  
SPD 1;  
PMRA 6, 9, 3, 0;  
PAT 1;  
PARC 6, 9, 3, 0, 360;  
CLPR 3, 6, 9, 12;  
STRK;  
PAGE;  
EXIT;
```

## *Printout*

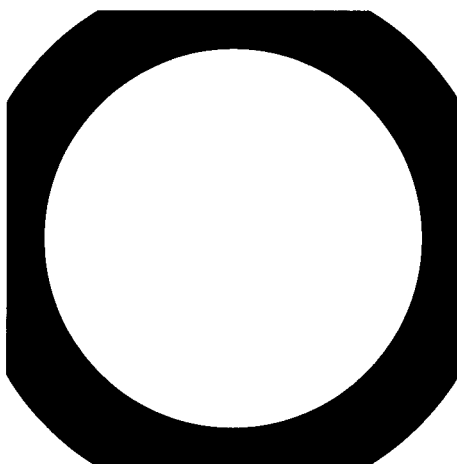

# CLSP — CLoSe Path

## *Format*

CLSP ;

## *Parameter*

None

## *Function*

The CLSP command closes an open path by adding a line segment extending from the end of the path to the beginning of the path.

Simply ending a path at the path's starting point does not make it a closed path; such a path remains open until it is closed. Closure can be made either explicitly, by means of the CLSP command, or implicitly by means of the FILL (FILL current path) command.

## *File*


```
!R! RES; UNIT C;

NEWP;
CMNT The 1 st path below is stroked without closing;
SPD .25;
PMZP 5, 10;
PMRA 5, 10, 1, 90;
PARC 5, 10, 1, 90, 270;
PARC 7, 10, 1, 270, 90;
STRK;

NEWP;
CMNT Next path is closed by CLSP before stroked;
PMZP 5, 14;
PMRA 5, 14, 1, 90;
PARC 5, 14, 1, 90, 270;
PARC 7, 14, 1, 270, 90;
CLSP;
STRK;

PAGE; EXIT;
```

*Printout*

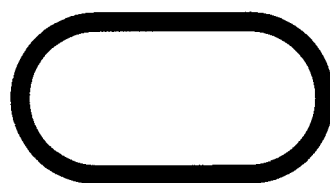

*Related Command*

NEWP

# CMNT — CoMmeNT

## *Format*

CMNT *string*;

## *Parameter*

### *string:*

any character string

## *Function*

The CMNT command adds a character string, typically a comment explaining the purpose of the following PRESCRIBE commands. The CMNT command statement will be ignored by the printing system.

Although character strings are normally enclosed in apostrophes or quotation marks, this is unnecessary for comment strings as long as the string does not itself contain an apostrophe, quotation mark, or semicolon.

## *File*

```
!R! RES;  
SLM 2; STM 2;  
SFNT 'TimesNewRoman'; CMNT TimesNewRoman;  
EXIT;  
The CMNT command in the above program reminds  
you that SFNT represents the TimesNewRoman font.
```

## *Printout*

The CMNT command in the above program reminds you that SFNT represents the TimesNewRoman font.

# CMOD — Color MODE

COLOR

## *Format*

CMOD *mode* ;

## *Parameter*

*mode*:

color mode:  
0 = Monochrome  
1 = Color (Default)

## *Function*

The CMOD command switches between monochrome and color modes. In monochrome mode, other color commands are still enabled, but printing is converted to monochrome or grayscale.

This command causes a page break.

# COPY — set number of COPIES

## *Format*

*COPY number ;*

## *Parameter*

### *number:*

number of copies

## *Function*

The COPY command designates the number of copies for each page in a print job. This copy count value can be changed by sending the printing system another COPY command or by issuing a reset command. For best results, place the copy command near the start of a job or at the top of a page. If two or more copy commands are placed on the same page, the last one will be recognized.

## *File*

```
!R! RES;  
SLM 0.5;  
UNIT P;  
SFNT 'Helvetica-Bd', 14.4;  
SLS 17;  
COPY 3;  
EXIT;  
    Announcement  
    Party Tonight at 6:00  
!R! PAGE; EXIT;
```

*Printout*



**Announcement  
Party Tonight at 6:00**

**Announcement  
Party Tonight at 6:00**

**Announcement  
Party Tonight at 6:00**



# CPAL — Control PALETTE

**COLOR**

## Format

```
CPAL mode [ , palette-id ] ;
```

## Parameters

### *mode*:

palette control mode:

A = Delete all palettes

S = Delete all stacked palettes

D = Delete the palette having the specified ID

C = Copy the active palette to the specified ID

### *palette-id*:

number from 0 to 32767 (Default is 0)

## Function

The CPAL command controls the palette identified by *palette-id* in the way described by the control mode. If *palette-id* is not specified, the command is applied to palette of ID 0. No check is made whether the palette ID number given already exists for another palette. The palette ID number is reset to 0 by RES command.

Mode *A* deletes all existing palettes and brings the default palette back to the default state (ID 0). Note that non-active palettes are not deleted. Also, *palette-id* is not used when *mode* is *A*.

Mode *S* deletes all palettes that are not active. The active palette is not affected. Also, any ID specified by *palette-id* is not used.

Mode *D* deletes the palette having the ID specified by *palette-id* regardless of being active or inactive. If the palette deleted was active, then the current palette will be a monochrome palette having the same ID as that of the deleted palette.

Mode *C* copies the currently active palette to a new palette with the new ID specified by *palette-id*. If the palette having the same ID already exists, that palette is overwritten.

Deleting or copying a color palette does not affect color print quality on output pages.

## CPTH — Character PaTH

### *Format*

```
CPTH 'string' ;
```

### *Parameter*

#### *string:*

any character string except from ASCII code 31 (hex 1F) and lower

### *Function*

The CPTH command constructs a path which adds the outlines of characters to the current path. When stroked or filled, it prints the given *string* at the current cursor position and moves the cursor to the end of the string. The current font preceding this command must be a resident or a soft scalable font.

The character path can be filled in with the pattern or shade of gray designated by the previous PAT, FPAT, or GPAT command.

### *File*

```
!R! FSET lp72vls0b4148T; CMNT Univers-MdIt;  
NEWP;  
PMZP 2, 2;  
CPTH 'Enjoy';  
STRK;  
PAGE;  
EXIT;
```

### *Printout*

The word "Enjoy" is displayed in a large, italicized, outlined font. The letters have a double outline and a slight shadow effect, giving them a three-dimensional appearance. The font style is reminiscent of a high-quality variable font like 'Univers-MdIt'.

# CSET — Change symbol SET by symbol-set ID

## *Format*

CSET *symbol-set-id*;

## *Parameter*

### *symbol-set-id:*

symbol set ID:  
0D = ISO 60 Norway  
0E = Roman Extension  
0F = ISO 25 French  
0G = HP German  
0I = ISO 15 Italian  
0K = ISO 14 JIS ASCII  
0N = ECMA-94 Latin 1  
0S = ISO 11 Swedish  
0U = ISO 6 ASCII  
1D = ISO 61 Norwegian  
1E = ISO 4 U.K.  
1F = ISO 69 France  
1G = ISO 21 Germany  
1S = ISO 15 Spanish  
1U = US Legal  
2K = ISO 57 Chinese  
2N = ISO Latin 2  
2S = ISO 17 Spain  
2U = ISO 2 IRV  
3R = PC Cyrillic\*  
3S = ISO 10 Swedish  
4S = ISO 16 Portuguese  
4U = Roman-9  
5M = PS Math  
5N = ISO Latin 5  
5S = ISO 84 Portuguese  
5T = ISO Windows Latin 5  
6J = MS Publishing  
6M = Ventura Math  
6N = ISO8859/10 Latin 6  
6S = ISO 85 Spanish  
7J = Desktop  
8G = Greek-8  
8M = Math 8  
8Q = PC Set 1 IBM  
8T = Turkish-8  
8U = Roman-8  
9E = Windows Latin 2  
9G = Windows 3.1 Latin/Greek  
9J = PC-1004  
9L = Ventura ITC Zapf Dingbats  
9N = ISO Latin 9  
9Q = PC Extension

9R = Windows 3.1 Latin/Cyrillic  
9T = PC-Turkish  
9U = Windows 3.0  
10G = PC-851 Latin/Greek  
10J = PS Text  
10N = ISO8859/5 Latin/Cyrillic  
10R = PC-855 Cyrillic/Serbia  
10U = IBM PC-8  
11G = PC-869 Latin/Greek  
11U = IBM PC-8 Danish/Norwegian  
12G = PC-8 Latin/Greek  
12J = Macintosh  
12N = ISO8859/7 Latin/Greek  
12R = USSR-GOST  
12U = IBM PC-850  
13P = ABICOMP Brazil/Portugal  
13R = PC-8 Bulgarian  
13U = PC-858  
14G = Greek Alternate 437G  
14L = PS ITC Zapf Dingbats<sup>1</sup>  
14P = ABICOMP International  
14R = PC Ukrainian  
15U = Pi Font  
16U = PC-857  
17U = PC 852  
18N = ISO-10646  
18U = PC-853 Turkish/Latin 3  
19L = Windows 3.1 Baltic<sup>†</sup>  
19M = Symbol (Symbol-Set-SWM font only)  
19U = Windows Latin 1  
20U = PC-860 Portugal<sup>†</sup>  
21U = PC-861 Iceland<sup>†</sup>  
23U = PC-863 Canada-French<sup>†</sup>  
24Q = PC-8 Polish Mazovia<sup>†</sup>  
25U = PC-865 Norway<sup>†</sup>  
26U = PC-775 Baltic<sup>†</sup>  
27Q = PC-8 PC Nova<sup>†</sup>  
579L = Windings (More Wingbats-RegularSWM font only)

---

<sup>1</sup> Available only with models having Agfa fonts

## Function

'Symbol set' refers to a specific group of alphabetic, numeric, and symbolic characters. The CSET command summons the symbol set to suit the various languages with the current font. The factory default symbol set is 0U (US ASCII).

When the FSET command is used to select a font, the printing system selects a font based on a prioritization of the font characteristics. Among the given characteristics, the symbol set has the highest priority in the font selection process. Refer to the FSET command page.

The available symbol sets depend on the printing system model and the fonts. If the specified symbol set does not exist, the symbol set remains unchanged.

## Files

```
!R! RES;
SFNT 'Helvetica', 24;
SLPI 3;
CMNT Current symbol set is ISO 6: ASCII;
TEXT '@ABCDEFG', N;
CSET 5M; CMNT Changed to PS math;
TEXT '@ABCDEFG';
PAGE;
EXIT;
```

## Printout

@ABCDEFG  
 $\cong$  ABX $\Delta$ E $\Phi$  $\Gamma$

# CSTK — select Collator STackKer

## Format

CSTK [*tray*, *tray*, ...]; or CSTK 0;

## Parameter

*tray*:

number from 1 to the maximum (bottom)

## Function

The CSTK command is effective only when the optional sorter is installed to the printing system. It instructs the printing system to deliver printed pages to the sorter in the collator mode. Each tray specified receives all copies of one page. The copies of the first page go to the first tray, the copies of the second page to the second tray, and so on. If the tray parameter is omitted, the trays are used in order from top to bottom.

The copy count must be selected with the COPY command. The maximum copy count is the maximum capacity of the sorter trays (which varies from sorter model to model).

Upon receiving the CSTK command, the printing system automatically performs a form feed.

The tray parameter of 0 (CSTK 0;) should be used only to deselect the collator mode and to receive the pages in the sorter's bulk tray (if available).



Note

This command is irrelevant to certain combination of photocopier models and option finisher models.

## File

```
!R! RES; CSTK 1, 2; COPY 2;
EXIT;
Page 1 (2 copies, tray 1) !R! PAGE; EXIT;
Page 2 (2 copies, tray 2) !R! PAGE; EXIT;
Page 3 (2 copies, tray 1) !R! PAGE; EXIT;
Page 4 (2 copies, tray 2) !R! PAGE; EXIT;
```

# CTXT — print Centered TeXT

## Format

```
CTXT [ , string ][ , option ][ , U-option ] ;
```

## Parameters

### *string:*

any character string

### *option:*

B = Leave cursor at center of string  
 E = Move cursor at end of string  
 L = Move cursor down one line  
 N = Move cursor to beginning of next line

### *U-option:*

Underline text

## Function

The CTXT command prints the given string centered at the cursor location, then moves the cursor as designated by the option. The string must be enclosed in either single or double quotation marks. (If the string includes one kind of quotation marks, use the other kind to enclose it.) If the string is omitted, nothing is printed. If the option is omitted, the cursor is not moved. If the U-option is specified, the text is underlined. The underline thickness and location can be set by the Sulp command.

The string is not centered between the right and left margins unless the cursor is located halfway between the margins. Before the CTXT command, the cursor should be moved to the desired center position by a command such as MAP, MRP, or PMRP.

The length of the string is unlimited, except that the command as a whole may not be longer than 255 characters. Carriage-return and linefeed codes in the string are ignored.

## File

```
!R! RES; SLPI 3; SFNT "Helvetica-Bd", 16;
MAP 4, 1;
CTXT 'NEWS!', L, U;
SFNT "TimesNewRoman-It", 16;
CTXT 'Unforgettable Holidays in Sydney', L;
CTXT 'For 6 Days Only at $1000!';
PAGE;
EXIT;
```

*Printout*

**NEWS!**

*Unforgettable Holidays in Sydney  
For 6 Days Only at \$1000!*



# DAF — Delete All Fonts

## *Format*

DAF ;

## *Parameter*

None

## *Function*

The DAF command deletes all nonresident fonts and the font numbers assigned to scalable fonts by the SFNT command from the printing system's memory. This enables the user to make room for new fonts, macros, and graphics.

## *File*

```
!R! UNIT P; SLS 16;
SFNT 'Helvetica-Bd', 15, 2000, 277, 2, 0;
SFNT 'Helvetica', 15, 2001, 277, 1, .5;

FONT 10; TEXT '1. FAREWELL TO ', E;
FONT 2000; TEXT 'FONT 2000', N;
FONT 2001; TEXT 'AND FONT 2001', N;
TEXT, N;

DAF;
FONT 10; TEXT '2. FAREWELL TO ', E;
FONT 2000; TEXT 'FONT 2000', N;
FONT 2001; TEXT 'AND FONT 2001';

PAGE;
EXIT;
```

## *Printout*

**1. FAREWELL TO FONT 2000**  
*AND FONT 2001*

**2. FAREWELL TO FONT 2000**  
**AND FONT 2001**

## DAM — Delete All Macros

### *Format*

DAM;

### *Parameter*

None

### *Function*

The DAM command deletes all macro definitions made by using the PRESCRIBE MCRO command from the printing system's memory. This enables the user to make room for new macros, fonts, or graphics.

### *File*

```
!R! RES; UNIT C;
CMNT Print ENDM file first.;
SFNT "Helvetica-Bd";
MAP 5, 4; CALL SCREEN, 9.2, 1.7;
MAP 7, 5; TEXT 'This text is enclosed by', L;
          TEXT 'SCREEN macro.';

DAM;
MAP 5, 6; CALL 10 BX;
MAP 5, 7; CALL SCREEN, 9.2, 1.7;
MAP 6, 8; TEXT 'SCREEN macro was deleted by DAM.';
PAGE;
EXIT;
```

### *Printout*



**This text is enclosed by  
SCREEN macro.**

**SCREEN macro was deleted by DAM.**

# DAP — Draw to Absolute Position

## Format

DAP *x-coordinate* , *y-coordinate* ;

## Parameters

### *x-coordinate*:

distance from the left margin

### *y-coordinate*:

distance from the top margin

## Function

The DAP command draws a line from the current cursor position to a position specified relative to the top and left margins. The thickness of the line is designated by the SPD (set pen diameter) command. The coordinates and line thickness are measured in the units designated by the UNIT command.


The coordinates may be positive or negative. Negative coordinates cause the line to extend outside the margin.

The DAP command is ignored in the path mode graphics.

## File

```
!R! RES;
    UNIT C;
    CMNT Tree Diagram;
    STM 8; SLM 8;
    MAP 0, 0; DAP 2, 0.5;
    MAP 0, 1; DAP 2, 0.5;
    MAP 0, 1; DAP 2, 1.5;
    MAP 0, 2; DAP 2, 1.5;
    MAP 0, 2; DAP 2, 2.5;
    MAP 0, 3; DAP 2, 2.5;
    MAP 2, 0.5; DAP 4, 1;
    MAP 2, 1.5; DAP 4, 1;
    MAP 2, 1.5; DAP 4, 2;
    MAP 2, 2.5; DAP 4, 2;
    MAP 4, 1; DAP 6, 1.5;
    MAP 4, 2; DAP 6, 1.5;
PAGE; EXIT;
```

*Printout*

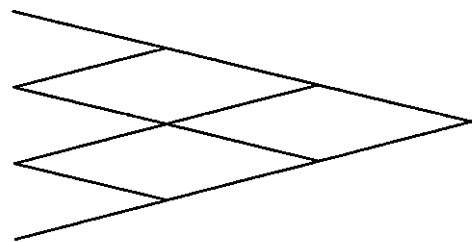

# DELF — DElete Font

## *Format*

DELF *font-number* ;

## *Parameter*

### *font-number:*

number identifying the font to be deleted

## *Function*

The DELF command deletes any designated non-resident font from the printing system's memory. This enables the user to make room for new fonts, macros, and graphics.

The printing system's memory is large but not unlimited, and judicious use of the DELF command may prevent memory overflow. (If a memory overflow occurs, the printing system gives an overflow warning message.) The amount of memory still available can be viewed on a status page, available by executing the STAT command.

## *File*

```
!R! UNIT P; SLS 16;
SFNT 'Helvetica-Bd', 15, 2000, 277, 1.5, 0;
SFNT 'Helvetica', 15, 2001, 277, 1, .5;

FONT 2000; TEXT '1. FAREWELL TO ', E;
FONT 2001; TEXT 'ITALICS', N;
TEXT, N;

DELF 2001;

FONT 2000; TEXT '2. FAREWELL TO ', E;
FONT 2001; TEXT 'ITALICS';

PAGE;
EXIT;
```

## *Printout*

**1. FAREWELL TO *ITALICS***

**2. FAREWELL TO ITALICS**

# DELM — DElete Macro

## *Format*

DELM *macro-name* ;

## *Parameter*

### *macro-name:*

name defined by a previous MCRO command

## *Function*

The DELM command deletes a specified macro definition from the printing system's memory to make room for new macros, fonts, or graphics, or so that the same name can be used for another macro.

*File*

```

!R! UNIT C;
MCRO BX;
SPD .05; BOX .8, -.8; MRP 1, 0;
ENDM;
MCRO SCREEN %, width, depth;
CMNT Draws box with rounded corners;
CMNT Leaves cursor at previous position;
SPD .08;
SCP;
MRP .25, .25; ARC .23, .30, 270, 0;
MRP 0, -.25; DRP %1, 0;
MRP 0, .25; ARC .23, .30, 0, 90;
MRP .27, 0; DRP 0, %2;
MRP -.27, 0; ARC .23, .30, 90, 180;
RPP;
MRP 0, .25; DRP 0, %2;
MRP .25, 0; ARC .23, .30, 180, 270;
MRP 0, .27; DRP %1, 0;
RPP;
ENDM;
SFNT "Helvetica-Bd";
MAP 5, 4;
CALL SCREEN, 9.2, 1.7;
MAP 7, 5;
TEXT 'This text is enclosed by', L;
Text 'SCREEN macro.';
DELM SCREEN;
MAP 5,8;
CALL SCREEN, 9.2, 1.7;
MAP 6, 10;
TEXT 'SCREEN macro was deleted by DELM.';
PAGE;
EXIT;

```

*Printout*

**This text is enclosed by  
SCREEN macro.**

**SCREEN macro was deleted by DELM.**

# DPAT — select Dashed PATtern

## Format

DPAT *number*;

## Parameter

### *number*:

number from 1 to 20 (11 to 20 are for user-defined patterns.)

## Function

The DPAT command specifies the pattern of alternating black and white dashes to stroke the current path.

The resident patterns range in value between 1 and 10. Refer to resident patterns list on page 79. Numbers 11 to 20 are reserved for use with defining particular patterns using the SDP (Store Dash Pattern) command. If you specify a value between 11 to 20 when no user pattern has been defined, the path will be stroked in solid black.


The DPAT command does not affect the line drawn by the standard graphics commands such as DRP, BOX, ARC, etc.

## File

```
!R! RES; UNIT C;
MCRO DPAT;
NEWP;
SPD .2;
SCP;
SFNT "Helvetica-Nr", 10;
TEXT 'DPAT %1';
PMRP 1.4, -.1; DPAT %1; PDRP 9, 0;
RPP; PMRP 0, .7;
STRK;
ENDM;
MZP 5, 5;
FONT 13;
CALL DPAT,1;
CALL DPAT,2;
CALL DPAT,3;
CALL DPAT,4;
CALL DPAT,5;
CALL DPAT,6;
CALL DPAT,7;
CALL DPAT,8;
CALL DPAT,9;
CALL DPAT,10;
PAGE;
EXIT;
```



*Printout*

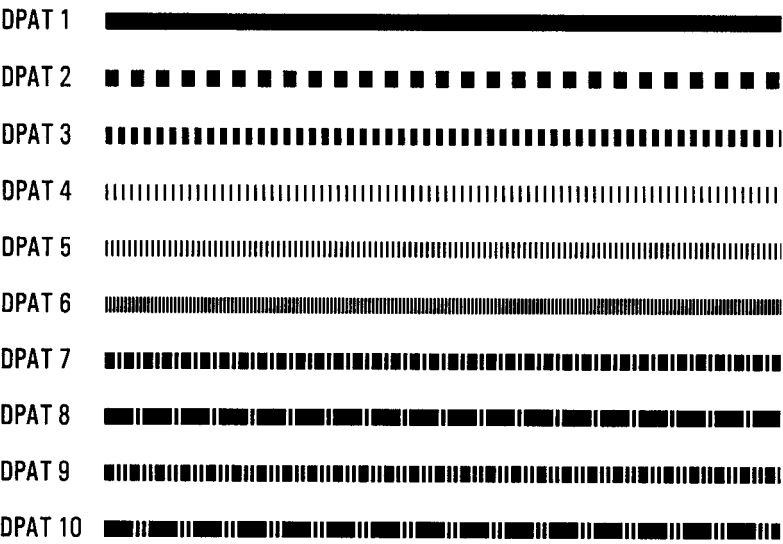

*Related Command*

SDP

# DRP — Draw to Relative Position

## Format

DRP *x-coordinate* , *y-coordinate* , . . . ;

## Parameter

### *x-coordinate/y-coordinate:*

coordinates as measured from the current cursor position

## Function

The DRP command draws a line from the current cursor position to a specified relative position. The thickness of the line is designated by the SPD (set pen diameter) command. The coordinates and line thickness are measured by the value designated by the UNIT command.

Multiple pairs of coordinates may be specified. The printing system then draws a connected series of line segments, proceeding from one point to the next. For example, DRP 1, 2, 3, 4; is equivalent to DRP 1, 2; DRP 3, 4;. The coordinates may be positive or negative.


The DRP command is ignored in the path mode graphics. To add a line segment to a path, use the PDRP (in Path, Draw to Relative Position) command.

## File

```
!R! RES;
UNIT C; SPD .3;
CMNT Cube;
MZP 5, 10;
DRP 4, 0, 2, -2, 0, -4, -4, 0, -2, 2, 0, 4;
MRP 4, 0;
DRP 0, -4, -4, 0, 4, 0, 2, -2;

PAGE;
EXIT;
```

*Printout*

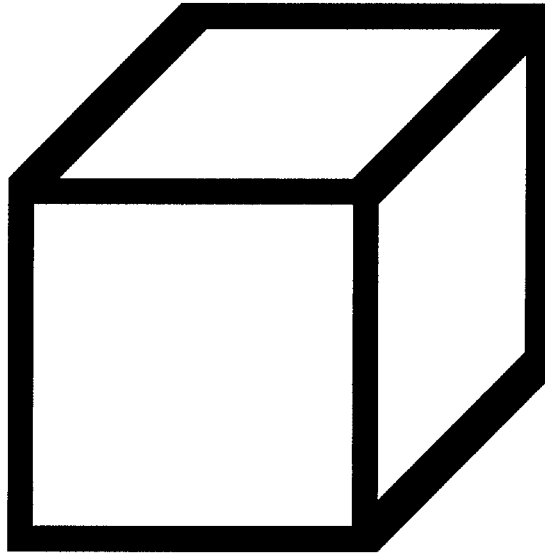

*Related Command*

PDRP

# DRPA — Draw to Relative Position specified by Angle

## *Format*

DRPA *length* , *angle* ;

## *Parameters*

### *length:*

length of the line

### *angle:*

angle in degrees, measured clockwise from the vertical

## *Function*


The DRPA command draws a line of a specified length at a specified angle, starting from the current cursor position, with the thickness designated by the SPD command.

This command is ignored if placed within a path.

## *File*

```
!R! RES;   UNIT C;
      MAP 2, 11;
      DRPA 2, 72;
      DRPA 2, 0;
      DRPA 2, 144;
      DRPA 2, 72;
      DRPA 2, 216;
      DRPA 2, 144;
      DRPA 2, 288;
      DRPA 2, 216;
      DRPA 2, 0;
      DRPA 2, 288;
      PAGE;
EXIT;
```

*Printout*

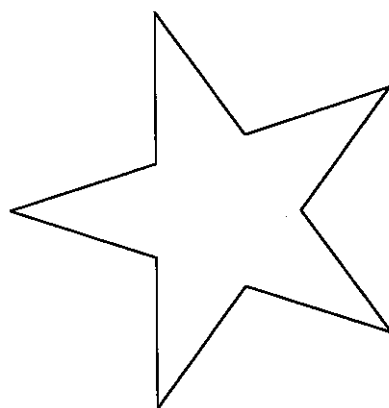

# DUPX — select/deselect DUPlEX mode

## Format

DUPX *mode* ;

## Parameter

*mode*:

a number representing one of the following binding mode:


0 = simplex mode

1 = duplex mode, long-edge binding

2 = duplex mode, short-edge binding

## Function

The DUPX command is effective only when the option duplexer is installed to the printing system. It instructs the printing system to select or deselect duplex printing and sets the binding mode.

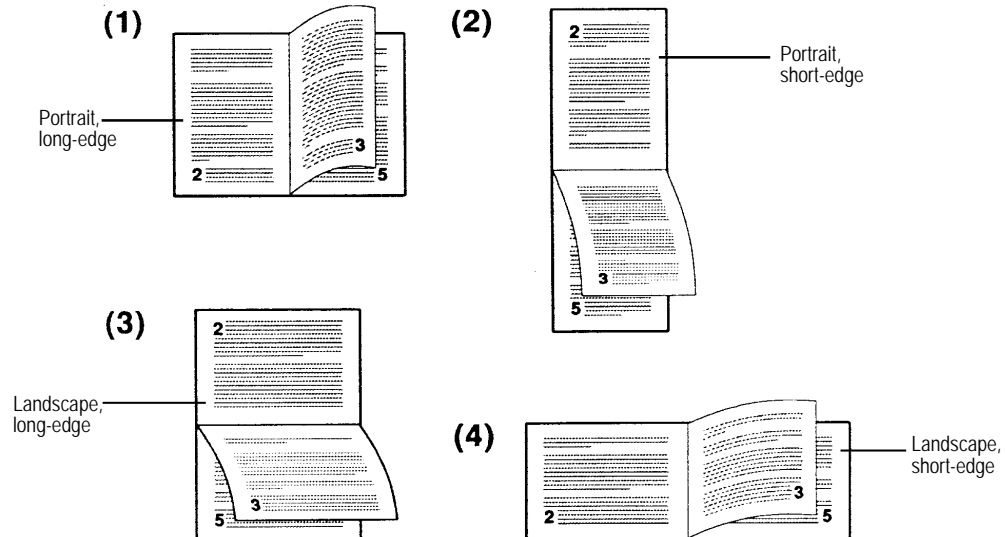

## File/Printout

See *DXPG* on page 85.

# DXPG — select Duplex PaGe side

## *Format*

DXPG *side* ;

## *Parameter*

### *side:*

a number representing the side of the ensuing page:

0 = Select next side (the same as form feed)

1 = Select front side

2 = Select back side

## *Function*

The DXPG command is effective only when the option duplexer is installed to the printing system. It ends printing on the current page in the same manner as a form feed. However, unlike the form feed, it also selects the paper side, front or back, on which printing of the ensuing page is printed.

The *side* parameter 1 prints the ensuing page begins on the front side of the next sheet, regardless of whether the current page was printed on the front or back side of the current sheet.


The *side* parameter 2 prints the ensuing page begins on the back side of the current sheet if the current page was printed on the front side, or on the back side of the next sheet if the current page was printed on the back side.

## *File*

The following example selects the duplex mode with short-edge binding, a portrait page orientation which results in text printing on both sides of the page.

```
!R! CMNT Initiates a PRESCRIBE command sequence; RES;  
CMNT Causes a page break and resets parameters;  
DUPX 2;  
CMNT Selects duplex mode, short-edge binding;  
SPO P;  
CMNT Selects portrait orientation;  
STAK 1;  
CMNT Select face-down delivery;  
EXIT;  
This text prints right-side up on the front side of the page  
!R! DXPG 0;  
CMNT Ends current page (front side of the paper);  
EXIT;  
This text prints upside-down on the reverse side of the page  
!R! RES; EXIT;
```

## *Printout*

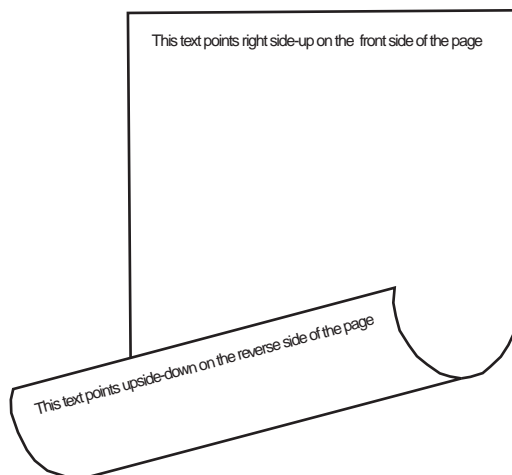



# DZP — Draw to Zero-relative Position

## *Format*

DZP *x-coordinate* , *y-coordinate* ;

## *Parameters*

### *x-coordinate:*

distance from the left edge limit of paper

### *y-coordinate:*

distance from the top edge limit of paper

## *Function*

The DZP command draws a line from the current cursor position to a position specified relative to the top and left edge limits of the paper.


The thickness of the line is designated by the SPD (set pen diameter) command. The coordinates and line thickness are measured in the value designated by the UNIT command. The coordinates should be positive or zero. Negative coordinates are treated as zero.

The DZP command is ignored within a path construction. To add a zero-relative line segment in a path, use the PDZP (in Path, Draw to Zero-relative Position) command.

## *File*

```
!R! RES;UNIT C;
MZP 0, 0; DZP 0, 5;
MZP 1, 0; DZP 0, 4;
MZP 2, 0; DZP 0, 3;
MZP 3, 0; DZP 0, 2;
MZP 4, 0; DZP 0, 1;
MZP 5, 0; DZP 0, 0;
PAGE;
EXIT;
```

*Printout*

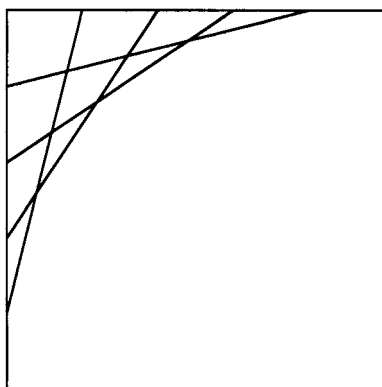

*Related Command*

PDZP

# EMCR — Enable MaCRo depending on paper source

## *Format*

```
EMCR mode , paper-source [ = print-side ] , [ repeat-count ] macro-name  
[ , parameter . . . ] ;
```

## *Parameters*

### *mode:*

E = enable automatic macro  
D = disable automatic macro

### *paper-source:*

0 = multi-purpose feeder  
1 = cassette 1 (printing system's cassette)  
2 = cassette 2  
3 = cassette 3  
4 = cassette 4  
5 = cassette 5  
6 = cassette 6 (bottom)  
99 = envelope or universal feeder

### *print-side:*

side of the page the macro is executed when duplex-printing  
0 = front  
1 = back

### *repeat-count:*

number of times the macro is executed

### *macro-name:*

name defined by the MCRO command

### *parameter:*

values given to the dummy parameters in the macro definition



## ENDB — END a two-dimensional Barcode string

### *Format*

ENDB ;

### *Parameter*

None

### *Function*

The ENDB command terminates a barcode data string preceded by a XBAR or XBUF command. If there is no ENDB command after data input for the XBAR and XBUF commands, a malfunction may occur. As in the case of XBAR or XBUF command, if data length is omitted, 0, negative value or non integer, data string is counted, all characters until the program sees ;ENDB;. It is necessary to have no space and line feed between ';' and ENDB.

If the XBCP 18 command is executed, the second and subsequent macro PDF417 symbols will be output. When ENDB is used immediately after XBCP 18 is executed, it is used alone, without association with XBAR or XBUF.

For details on two-dimensional barcodes, see Section 5.2. of the *Technical Reference* manual.

## ENDC — END carbon Copy

### *Format*

ENDC ;

### *Function*

The ENDC command ends definition of the CCPY E command sequence. For details, refer to the CCPY command.

# ENDD — END Dump

## *Format*

ENDD ;

## *Parameter*

None

## *Function*

The ENDD command ends a hexadecimal dump initiated by the RDMP (Received-data DuMP) command and returns to the PRESCRIBE command mode.

## *File*

See *RDMP* on page 217.

## *Related Command*

RDMP

## ENDM — END Macro

### *Format*

ENDM;

### *Parameter*

None


### *Function*

The ENDM command ends a macro definition and returns to the PRESCRIBE command mode.

### *File*

```
!R! RES; DAM; UNIT C;
MCRO BX;
SPD .05; BOX .8, -.8; MRP 1, 0;
ENDM;
MCRO SCREEN %, width, depth;
CMNT Draws box with rounded corners;
CMNT Leaves cursor at previous position;
SPD .08;
SCP; SCP;
MRP .25, .25; ARC .23, .30, 270, 0;
MRP 0, -.25; DRP %1, 0;
MRP 0, .25; ARC .23, .30, 0, 90;
MRP .27, 0; DRP 0, %2;
MRP -.27, 0; ARC .23, .30, 90, 180;
RPP;
MRP 0, .25; DRP 0, %2;
MRP .25, 0; ARC .23, .30, 180, 270;
MRP 0, .27; DRP %1, 0;
RPP;
ENDM;
PAGE;
EXIT;
```

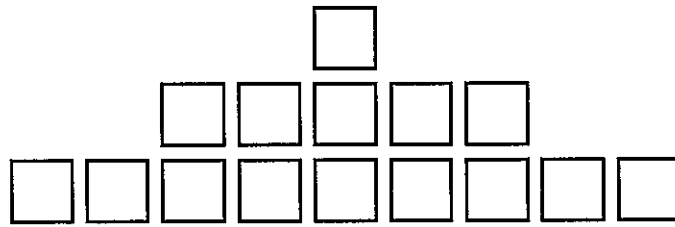

*Printout*

Narrow  
screen

Wide screen

*Related Commands*

CALL, DAM, DELM, MCRO

# ENDR — END Raster data

## Format

ENDR ;

## Parameter

None

## Function

The ENDR command declares the end of raster data. To declare the start of raster data, a RVRD command is used.

## File

The following example prints an illustrated crown using the RVRD and ENDR.

```
!R! RES; DAM; DAF; UNIT C; SRO 1;
MAP 5, 5;
RVRD;
  5, 0, 0, 7, 0, 0;
  5, 0, 0, 24, 192, 0; 5, 0, 0, 32, 32, 0;
  5, 0, 0, 64, 16, 0; 5, 0, 0, 64, 16, 0;
  5, 0, 0, 128, 8, 0; 5, 0, 0, 128, 8, 0;
  5, 0, 0, 128, 8, 0; 5, 0, 0, 64, 16, 0;
  5, 0, 0, 64, 16, 0; 5, 0, 0, 32, 32, 0;
  5, 0, 0, 120, 192, 0; 5, 0, 0, 103, 0, 0;
  5, 0, 0, 96, 0, 0; 5, 0, 0, 144, 0, 0;
  5, 0, 0, 144, 0, 0; 5, 0, 0, 144, 0, 0;
  5, 0, 1, 8, 0, 0; 5, 0, 1, 8, 0, 0;
  5, 0, 1, 136, 0, 0; 5, 0, 2, 68, 0, 0;
  5, 0, 2, 36, 0, 0; 5, 0, 2, 36, 0, 0;
  5, 0, 6, 66, 0, 0; 5, 0, 5, 130, 0, 0;
  5, 0, 4, 6, 0, 0; 5, 0, 8, 9, 0, 0;
  5, 0, 8, 17, 0, 0; 5, 0, 14, 17, 0, 0;
  5, 0, 17, 9, 128, 0; 5, 0, 16, 134, 128, 0;
  5, 0, 16, 128, 128, 0; 5, 0, 32, 128, 64, 0;
  5, 0, 49, 0, 64, 0; 5, 0, 46, 0, 64, 0;
  5, 0, 64, 28, 32, 0; 5, 0, 64, 34, 32, 0;
  5, 0, 64, 65, 32, 0; 5, 0, 128, 65, 16, 0;
  5, 0, 184, 65, 16, 0; 5, 0, 196, 34, 16, 0;
  5, 1, 130, 28, 8, 0; 5, 1, 130, 0, 8, 0;
  5, 1, 130, 0, 120, 0; 5, 2, 68, 0, 132, 0;
  5, 14, 56, 97, 7, 0; 5, 10, 0, 145, 5, 0;
  5, 11, 255, 255, 253, 0; 5, 8, 0, 0, 1, 0;
  5, 15, 255, 255, 255, 0; 5, 4, 0, 0, 2, 0;
  5, 52, 8, 1, 2, 192; 5, 76, 8, 1, 3, 32;
  5, 76, 8, 1, 3, 32; 5, 68, 62, 7, 194, 32;
  5, 34, 8, 1, 4, 64; 5, 34, 8, 1, 4, 64;
  5, 18, 8, 1, 4, 128; 5, 13, 0, 0, 11, 0;
  5, 1, 0, 0, 8, 0; 5, 0, 128, 0, 16, 0;
  5, 0, 131, 12, 16, 0; 5, 0, 64, 144, 32, 0;
```

```
5, 0, 160, 96, 80, 0; 5, 1, 24, 1, 136, 0;  
5, 14, 134, 6, 23, 0; 5, 48, 65, 248, 32, 192;  
5, 192, 129, 8, 16, 48; 5, 0, 64, 144, 32, 0;  
5, 0, 32, 96, 64, 0; 5, 0, 16, 0, 128, 0;  
5, 0, 32, 0, 64, 0; 5, 0, 16, 0, 128, 0;  
5, 0, 8, 1, 0, 0; 5, 0, 6, 6, 0, 0;  
5, 0, 1, 104, 0, 0; 5, 0, 0, 144, 0, 0;  
ENDR;  
PAGE;  
EXIT;
```

*Printout*



## EPL — select EcoPrint Level

### *Format*

EPL *level*;

### *Parameter*

*level*:

0 = off  
2 = on

### *Function*

The EPL command switches the Ecoprint on or off (default). Ecoprint is a standard feature of the print systems that enables the user to reduce the amount of toner placed on the page which saves on printing costs. With EPL 2;, the printing image appears lighter, yet remains readable.

The following example simulates typical Ecoprint effect:



Only one EPL level is possible for a page. If more than one EPL command are put on a page, the last one is effective.

The Ecoprint setting does not effect print speed.

### *File*

```
!R! RES; SFNT "Helvetica-Bd", 24;  
      SLPI 3;  
      EPL 2; TEXT "Ecoprint is ON.";  
      PAGE;  
EXIT;
```

### *Sample*

**Ecoprint is ON.**

# EXIT — EXIT from PRESCRIBE mode

## *Format*

```
EXIT [ , E];
```

## *Parameter*

None

## *Function*

When the printing system receives the EXIT command, it exits from the PRESCRIBE mode and treats the following information as characters to be printed.

If the parameter E is added (EXIT, E;), the printing system ignores one carriage-return/linefeed immediately following the command.

## *File*

```
!R! RES; SFNT "Helvetica"; EXIT;  
Commands ending in EXIT; leave a gap  
in the output,  
!R! CMNT Like this; EXIT;  
while commands ending in EXIT, E;  
!R! CMNT Like this; EXIT, E;  
leave no trace of their presence except  
possibly a shortage of lines on the page.  
!R! PAGE; EXIT;
```

## *Printout*

Commands ending in EXIT; leave a gap  
in the output,

while commands ending in EXIT, E;  
leave no trace of their presence except  
possibly a shortage of lines on the page.

## FDIR — MP tray Feed DIRection

### *Format*

FDIR *direction*;

### *Parameter*

#### *direction:*

paper orientation on the MP tray

0 = Lengthwise

1 = Widthwise

### *Function*

The FDIR command specifies the paper orientation during feeding paper on the MP tray. This is possible when the paper is A4 or letter or B5 size although this depends on the printing system model.

This command is enabled only when the MP tray's operational mode is *cassette* or *manual feed*. Printing on A4 and letter size paper can only be done widthwise in *first* mode.

This command causes a page break.

This command is irrelevant to paper cassettes and envelope feeders.

The paper orientation setting is restored to the default orientation (FRPO T8) when the printing system receives the RES command.

# FILL — FILL closed path

## Format

`FILL rule;`

## Parameter

### *rule:*

drawing rule:

1 = use even-odd rule

2 = use non-zero winding number rule

## Function

The FILL command fills the area enclosed by the current path with the current drawing rule. It also fills all independent subpaths contained in a path. An open subpath is implicitly closed before being painted (as done by a CLSP command). This command clears the current path after filling and moves the cursor to the end of that path.

With drawing rule 1, even-odd, whether or not a point is deemed to be inside the path is determined by drawing a ray from that point in any direction and counting the number of times the ray crosses segments of the path. The point is deemed to be inside the path if the result is an odd number; if the result is an even number, the point is deemed to be outside the path.

The non-zero winding rule also draws a ray from a point in any direction to determine whether or not that point is deemed to be inside the path and examines the points at which a segment of the path crosses the ray. However, it then starts counting from zero and adds one each time a segment in the path crosses the ray from left to right; and subtract one each time a segment in the path crosses the ray from right to left. If the result of counting all the crossings is zero, the point is deemed to be outside; otherwise the point is deemed to be inside the path.

The way in which several filled-in parts are stacked with each other to produce transparent and opaque effects is controlled by the SIMG (Set IMaGe model) command.

## Related Commands


FPAT, GPAT, PAT, SIMG, XPAT

## *File*

```
!R! RES; UNIT C; SIMG 1;
CMNT Drawing clusters;
NEWP;
PMZP 10, 12; PDRP -5.7, -1.75;
PCRP 0, 0, 0, -3.4, 3.1, -3.6; CLSP; PAT 2; FILL;
PMZP 10, 12; PDRP -2.6, -5.35;
PCRP 0, 0, 2.5, -2.5, 4.9, .1; CLSP; PAT 3; FILL;
PMZP 10, 12; PDRP 5.7, -1.75;
PCRP 0, 0, 0, -3.5, -3.4, -3.5; CLSP; PAT 4; FILL;
PMZP 12, 12; PDRP 5.7, -1.75;
PCRP 0, 0, 1.5, 1.75, 0, 3.5; CLSP; PAT 5; FILL;
PMZP 10, 12; PDRP -5.7, 1.75;
PCRP 0, 0, 0, 3.4, 3.1, 3.6; CLSP; PAT 6; FILL;
PMZP 10, 12; PDRP -2.6, 5.35;
PCRP 0, 0, 2.5, 2.5, 4.9, -.1; CLSP; PAT 7; FILL;
PMZP 10, 12; PDRP 5.7, 1.75;
PCRP 0, 0, 0, 3.5, -3.4, 3.5; CLSP; PAT 8; FILL;
PMZP 10, 12; PDRP -5.7, 1.75;
PCRP 0, 0, -1.5, -1.75, 0, -3.5; CLSP; PAT 9; FILL;
PAGE;
EXIT;
```



*Printout*

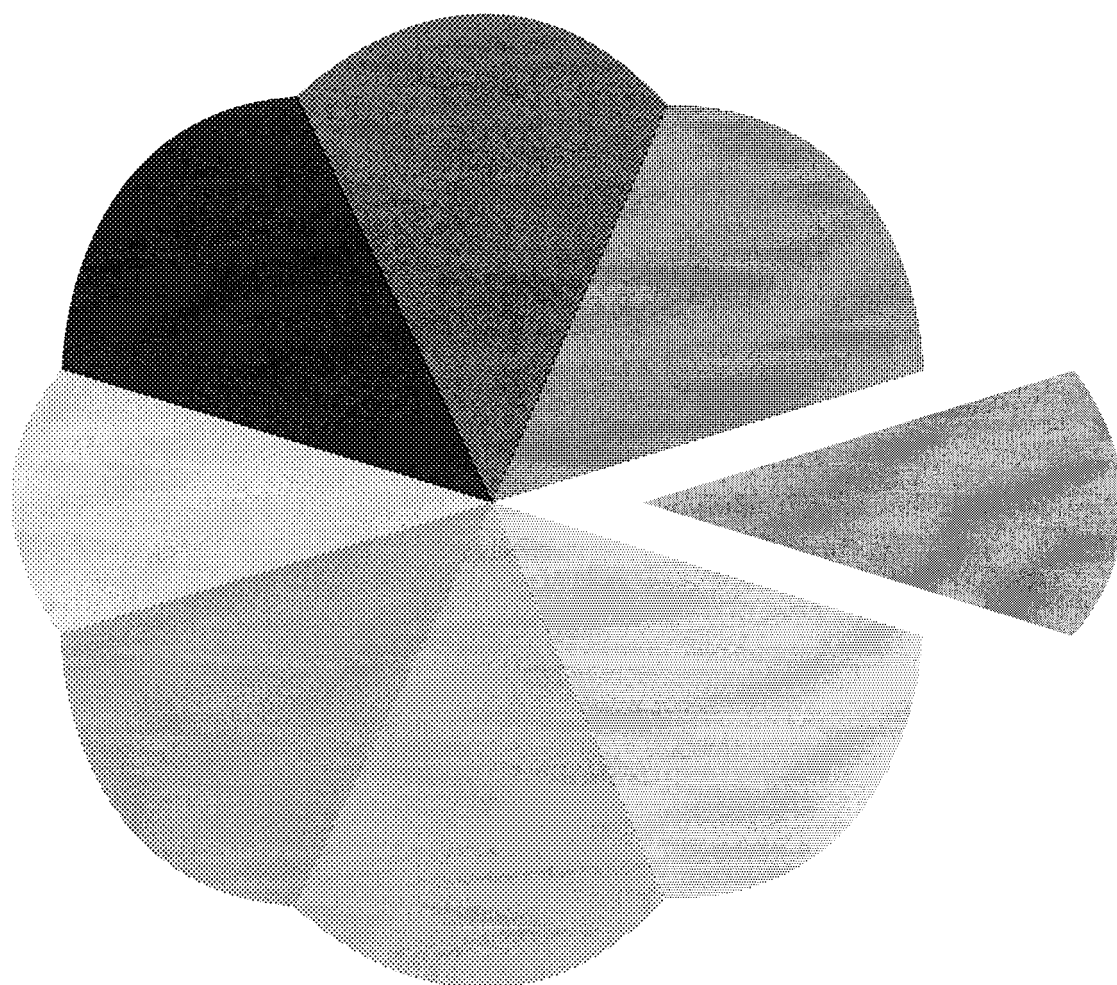

# FLAT — set FLATness

## Format

FLAT *flatness*;

## Parameters

*flatness*:

number from 1 to 100

## Function


The FLAT command determines how smoothly curves in paths are to be drawn when a STRK or FILL command is used. Higher number values produce rougher curves and lower number values create smoother curves which require greater computation. The number actually specifies the maximum error tolerance of a straight line segment approximation of any portion of the curve.

The printing system resets the flatness to 1 when it receives the RES command.

## File

```
!R! RES; FRPO N8,0; CMNT 300 dpi;
UNIT C; SPD 0.02;
NEWP; CMNT 1st circle (FLAT 1);
PMRA 7, 16.5, 2, 0;
PARC 7, 16.5, 2, 0, 360;
STRK;
NEWP; CMNT 2nd circle (FLAT 50);
FLAT 50;
PMRA 12, 16.5, 2, 0;
PARC 12, 16.5, 2, 0, 360;
STRK;
PAGE; EXIT;
```

## Printout

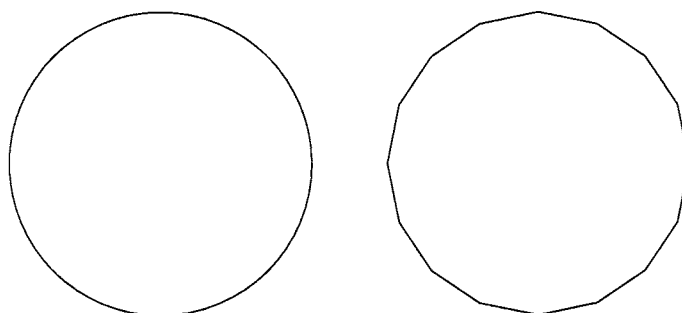

# FLST — print Font LiST

## *Format*

FLST ;

## *Parameter*

None

## *Function*

The FLST command prints a list of all resident and downloaded (user-defined) fonts in the printing system. The list provides information on each font such as font name, whether it is scalable or bitmap, font selection sequence using FSET, font ID, etc. The resident fonts are identified by the letter I (internal) in the font ID; the downloaded fonts are identified by the letter M or D depending on whether the font is stored in the memory card or the hard disk, respectively.

The font list may differ depending on models.

## *Related Commands*

FSET, SFNT, STAT

## *File*

!R! FLST; EXIT;

### *Sample of Font List*

[illegible]

# FOLD — FOLD printed pages

## Format

```
FOLD [staple];
```

## Parameter

### *staple*:


1 = stapling

## Function

The FOLD command is effective only when the optional document finisher having the booklet stitcher is installed to the printing system. This command is most conveniently used with the BKLT command that allows printing a job as a booklet, reordering and printing the pages 'two-up' on a sheet of paper.

The FOLD command outputs printed pages stapling and binding them together at its center. The job to be stapled and folded should be initiated by the JOBS command (See page 140).

With the *staple* value given, the pages are stapled (two) and folded at its center in reference to the short edge of the paper.

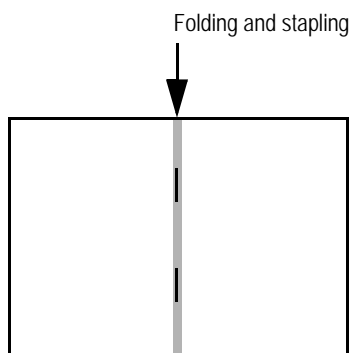

Paper sizes available for this mode include A4-R, letter-R, B4, A3 and ledger. The job is automatically delivered on the face-down output tray of the document finisher.

## File

```
!R! FOLD 1;
    JOBS 1,1,2,0,0;
    TEXT 'Stapled and folded with the next page';
    PAGE;
    TEXT 'Stapled and folded with the preceding page';
    JOBT;
EXIT;
```

# FONT — change current FONT

## Format

FONT *font-number*;

## Parameter

### *font-number*:

number identifying the font

## Function

The FONT command specifies a typeface for all text that follows.

The font-number should designate a resident bitmap font, a scalable font selected by the SFNT command, or a nonresident font generated by the LDFC command or downloaded from the computer. If an undefined font-number is specified, the font will not change. To print a font list, use the FLST command.

For a bitmap font, depending on the font mode (FTMD) value, the FONT command also sets the line and character spacing and page orientation to match the attributes of the selected font. The scalable fonts, however, ignore the font mode setting. Line spacing must be specified by the user in this case using one of the line spacing commands (SLS, SLPI, etc.).

## File

```
!R! RES; UNIT P;
SFNT 'Univers-BdIt', 18, 2000;
SFNT 'Univers-BdIt', 14, 2001;
FONT 2000;
EXIT;
---- Font Guideline ----
!R! FONT 2001; EXIT;
Be distinctive.
!R! FONT 13; FTMD 15; EXIT;
Use different font sizes and styles to set off titles,
headings, footnotes, etc.
!R! PAGE; EXIT;
```

*Printout*

## **--- Font Guideline ---**

***Be distinctive.***

Use different font sizes and styles to set off titles, headings, footnotes, etc.

*Related Commands*

ALTF, FLST, SETF

# FPAT — generate Fill PATtern

## Format

```
FPAT #, #, #, #, #, #, #, #;
```

## Parameters


#:

number from 0 to 255

## Function

The FPAT command establishes a new shading pattern, for use by the BLK, ARC, and FILL commands, as described in a  $8 \times 8$  matrix of dots.

Each number corresponds to one row of 8 dots. The value of the number is calculated according to the black dots in its row, counting 1 for a black dot in the rightmost column, 2 for a black dot in the next column left, 4 for a black dot in the next column, and so on.

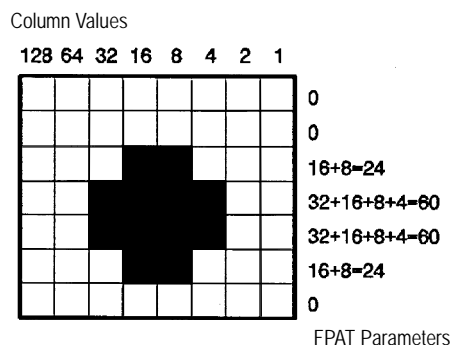

To calculate the third number in the example above, add up the values of the columns that have black dots in the first row:  $16+8 = 24$ .

To calculate the forth number in the example above, add up the values of the columns that have black dots in the second row:  $32+16+8+4 = 60$ , and so on.

For printing system models that support 600/1200 dpi resolution printing, the default resolution generated by the FPAT command is 300 dpi; however, 600/1200 dpi can be selected using the FRPO B8 command. See Section 6.2. of the *Technical Reference* manual (FRPO B8). The printing system recognizes a dot in the pattern as having the size of 1/300 inch in the 300 dpi resolution, and 1/600 inch in the 600 dpi resolution, and 1/1200 inch in the 1200 dpi resolution.

For an all-white row, specify 0. The FPAT command for creating all white rows is specified below:

```
FPAT 0, 0, 24, 60, 60, 24, 0, 0;
```

For an all-black row, specify 255 ( $1 + 2 + 4 + 8 + 16 + 32 + 64 + 128 = 255$ ). The default value is `FPAT 255, 255, 255, 255, 255, 255, 255, 255;` giving a solid black pattern which is equivalent to the PAT 1; command.




## File
 
```

!R! RES; DAM; UNIT C;
FSET 1p08V0s0b5T;
MCRO PATTERN;
FPAT %1, %2, %3, %4, %5, %6, %7, %8;
BOX 5, 1; BLK 5, 1; MRP 0, 1.55;
TEXT 'FPAT %1, %2, %3, %4, %5, %6, %7, %8;', L;
ENDM;
MAP 2, 2; SCP;
CALL PATTERN, 3, 3, 0, 0, 0, 0, 0, 0;
CALL PATTERN, 255, 0, 0, 0, 0, 0, 0, 0;
CALL PATTERN, 1, 1, 1, 1, 1, 1, 1, 255;
RPP; MRP 5.5, 0;
CALL PATTERN, 0, 0, 24, 60, 60, 24, 0, 0;
CALL PATTERN, 1, 2, 4, 8, 16, 32, 64, 128;
CALL PATTERN, 8, 8, 8, 8, 8, 8, 8, 8;
PAGE;
EXIT;

```

## Printout (300 dpi)



FPAT 3, 3, 0, 0, 0, 0, 0, 0;



 
FPAT 0, 0, 24, 60, 60, 24, 0, 0;



FPAT 255, 0, 0, 0, 0, 0, 0, 0;



FPAT 1, 2, 4, 8, 16, 32, 64, 128;



FPAT 1, 1, 1, 1, 1, 1, 1, 255;



FPAT 8, 8, 8, 8, 8, 8, 8, 8;

# FRPO — Firmware RePrOgram

## Format

FRPO *parameter*, *value*;

## Parameters

### *parameter*:

parameter stored in permanent memory

### *value*:

new parameter value

## Function

The FRPO command sets the various printing parameters stored in permanent memory. Each parameter is identified by a code consisting of a letter and a numeral, such as P1. Details of the parameters and their values are given in *Chapter 6* of the *Technical Reference* manual. The FRPO command should be used only when it is necessary to change a parameter permanently. They are not effective as temporary changes in the middle of a print job.

The FRPO command effects values for interface dependent and non-interface dependent parameters as they appear on the status page (See *STAT* on page 335.). Changes to the interface dependent parameters will effect the current interface only.

Changes made with FRPO commands can be reset to the factory-set values by the FRPO INIT (FRPO-INITialize) command. Note that the RES command does not reset those changes made with the FRPO command.

## File

```
!R!
FRPO P1, 1; CMNT To power up in the IBM emulation;
FRPO P3, 2; CMNT To change the linefeed action to CR+LF;
FRPO U6, 9; CMNT To select the US Legal character set;
EXIT;
US Legal characters:
\^{|}~

!R! PAGE; EXIT;
```

*Printout*

US Legal characters:  
® © § ¶ † ™

*Related Command*

FRPO INIT

# FRPO INIT — FRPO-INITialize

## *Format*

FRPO INIT;

## *Parameter*

None

## *Function*

The FRPO INIT command resets all FRPO parameters to their original, factory default values. This reset applies to the interface dependent parameters for the current interface as well as all non-interface dependent parameters. For a list of the factory default values, see *Chapter 6* of the *Technical Reference* manual. The FRPO INIT command causes a page break.

To activate the changes made with the FRPO INIT command, turn the printer power off then on again or reset the printer using the control panel keys.

## *File*

!R! FRPO INIT; EXIT;

## *Printout*

Omitted

# FSET — change current Font SETting by characteristic

## *Format*

FSET *spacing-pitch-height-style-weight-typeface* ;

## *Parameters*

### *spacing:*

fixed or proportional spacing, followed by a terminator P:

0 = fixed font

1 = proportional font

### *pitch:*

pitch in cpi, from 0.44 to 99.99 cpi (ignored in a proportional font), followed by a terminator H

### *height:*

the line-to-line spacing in points from 0.25 to 999.25; followed by a terminator V

### *style:*

upright or italic, followed by a terminator S:

0 = upright

1 = italic

4 = condensed

5 = condensed italic

### *weight:*

degree of bolding, -7 to +7; followed by a terminator B:

-7 = Ultra thin

-6 = Extra thin

-5 = Thin

-4 = Extra light

-3 = Light

-2 = Demi light

-1 = Semi light

0 = Medium

1 = Semi bold

2 = Demi bold

3 = Bold

4 = Extra bold

5 = Black

6 = Extra black

7 = Ultra black

### *typeface:*

typeface as represented by one of the following numbers, followed by a terminator T:

0 = LinePrinterBM8.5-Roman  
 3 = CourierBM  
 4 = Swiss721BM  
 5 = Dutch801BM  
 6 = LetterGothicBM  
 8 = PrestigeEliteBM  
 4099 = Courier  
 4101 = CG Times  
 4102 = LetterGothic  
 4113 = CGOmega  
 4116 = Coronet  
 4140 = Clarendon-Cd  
 4148 = Univers  
 4168 = AntiqueOlive  
 4197 = GaramondAntiqua  
 4297 = Marigold  
 4362 = Albertus  
 16602 = Arial  
 16686 = Symbol  
 16901 = TimesNewRoman  
 24579 = CourierPS  
 24591 = Palatino  
 24580 = Helvetica  
 24607 = ITCAvantGardeGothic-Bk  
 24703 = NewCenturySchoolbook  
 24623 = ITCBookman  
 25093 = Times  
 31402 = Wingdings  
 45099 = ITCZapfChancery-MdIt  
 45101 = ITCZapfDingbats  
 45358 = SymbolPS

The typeface values for option fonts, if installed, can be obtained by printing a font list. To print a font list, use the FLST command or the control panel keys.

### *Function*

The FSET command can be used to select either bitmap fonts or scalable fonts. It is also convenient for changing one or several characteristics of the current font, *e.g.* changing the upright style to italic. The example at the end of this section demonstrates this function.

Font selection is made based on the characteristics of the font, the font's location in the printer, and the font's orientation. In the list below, the characteristics of font are listed in order of priority, from highest to lowest:

Symbol set	Highest Priority Selection
Spacing (pitch)	
Point size (height)	
Style	
Stroke weight	
Typeface family	
Location	
Orientation	

In selecting a font, the printer engages in a process of elimination. It first examines all fonts to match based on symbol set (the highest priority). All matches are next examined based on spacing. When the printer has reduced the matches to one font, it selects that font. Bitmap fonts have priority over scalable fonts.

FSET enables the user to select a general class of font first, then specify characteristics (e.g. size and appearance) later. It is still preferable to specify all font parameters to ensure correct selection.

The *pitch* and *height* parameters are measured in cpi and points respectively, regardless of the current unit setting (UNIT).

Terminators following each parameter (P, H, V, S, B, and T) can use either lowercase or uppercase.

The example below shows an FSET command sequence that selects the fixed-pitch (0p), 12-cpi (12h), 12-point (12v), upright-style (0s), normal stroke weight (0b), Letter Gothic (6T) font. This command sequence may be followed by a CSET command which selects the desired symbol set.

The diagram shows the command sequence `FSET 0p12h12v0s0b6T;` with vertical lines connecting each parameter to its label:

- `0p` is labeled "Fixed or proportional"
- `12h` is labeled "Pitch"
- `12v` is labeled "Height"
- `0s` is labeled "Style"
- `0b` is labeled "Weight"
- `6T` is labeled "Typeface"

## File

```
!R! UNIT P; SFNT 'Swiss742SWC-Roman', 10; SLS 12; EXIT;
```

First, this line is printed in a 10 point Swiss742SWC-Roman font.

```
!R! FSET 14V; SLS 16; EXIT, E;
```

Let's see if the height parameter is changed to 14 points by FSET 14V;.

```
!R! FSET 1s3B; EXIT,E;
```

Now this line demonstrates what happens with FSET 1s3B;. Only the style and stroke weight are changed.

```
!R! FSET 4101T; SLS 14; EXIT,E;
```

The FSET 4101T; command switches the typeface to CGTimes. All other characteristics remain unchanged.

```
!R! FSET 0P; FTMD 15; EXIT,E;
```

Now the FSET 0P; command requests a fixed pitch font. The method for selecting this font is based on the change from the previous pitch characteristic.

```
!R! PAGE; EXIT;
```

## Printout

First, this line is printed in a 10 point Swiss742SWC-Roman font.

Let's see if the height parameter is changed to 14 points by FSET 14V;.

***Now this line demonstrates what happens with FSET 1s3B;. Only the style and stroke weight are changed.***

***The FSET 4101T; command switches the typeface to CGTimes. All other characteristics remain unchanged.***

***Now the FSET 0P; command requests a fixed pitch font. The method for selecting this font is based on the change from the previous pitch characteristic.***



# FTMD — bitmap FonT MoDe

## Format

FTMD *value* ;

## Parameter

*value*:

an integer from 0 to 15

## Function

The FTMD command determines which attributes will be changed automatically when a bitmap font (simulated based on scalable fonts) is selected by the FONT, ALTF, or RPF command. The attributes and values appear as follows:

Horizontal motion index (character spacing)	1
Vertical motion index (line spacing)	2
Fixed or proportional spacing	3
Portrait or landscape orientation	4

The values 1, 2, 4, and 8 change a single font attribute using the FTMD command. When the FTMD command is executed, the printer adjusts the designated attributes of the current font. Later, if the current font is changed by a FONT, ALTF, or RPF command, the printer automatically changes the designated attributes to the values of the new font. The default value of the FTMD command depends on the emulation mode.

The printer does not automatically change any attributes not designated by the FTMD command. If necessary, these attributes must be adjusted by other commands: SCS or SCPI for the character spacing; SLS or SLPI for the line spacing; and SPO for the page orientation. The FTMD command is ignored when the current font is a scalable font.

### Font Mode Values

Font mode	Automatic changes			
	Character spacing	Line spacing	Fixed or proportional	Portrait or landscape
0				
1	Yes			
2		Yes		
3	Yes	Yes		
4			Yes	
5	Yes		Yes	
6		Yes	Yes	
7	Yes	Yes	Yes	
8				Yes
9	Yes			Yes
10		Yes		Yes

Font mode	Automatic changes			
	Character spacing	Line spacing	Fixed or proportional	Portrait or landscape
11	Yes	Yes		Yes
12			Yes	Yes
13	Yes		Yes	Yes
14		Yes	Yes	Yes
15	Yes	Yes	Yes	Yes

### Default Font Modes

Emulation mode	Font mode	Printer's action when font is changed
0 (Line Printer)	15	Adjusts page orientation, character spacing, line spacing.
1 (IBM X-24E) or 2 (Diablo 630)	0	Does not adjust anything.
5 (Epson LQ-850)		
6 (HP LaserJet)	13	Adjusts page orientation and character spacing. Does not adjust line spacing.
8 (KC-GL)		

*File*

[illegible]

*Printout**Font 47, correctly spaced at 16.6 cpi**Font 37, correctly spaced at 10 cpi****Font 52, proportionally spaced***

||VAVAVAVAVAVAVAVAVAVAVAVAVAVAVAV||

# GPAT — set Gray PATtern

## Format

GPAT *gray-level*;

## Parameter

*gray-level*:

any number from 0 (black) to 1 (white)

## Function


The GPAT command specifies the shade of gray for painting a block in both the standard mode and path mode graphics. Numbers with up to four decimal places are accepted. The default value is 0 (solid black).

The printer recognizes a dot in the pattern as having the size of 1/300 inch in the 300 dpi resolution, and 1/600 inch in the 600 dpi resolution, and 1/1200 inch in the 1200 dpi resolution. For printer models that support 600/1200 dpi resolution printing, the default resolution generated by the GPAT command is 300 dpi; however, 600/1200 dpi can be selected using the FRPO B8 command. See Section 6.2. of the *Technical Reference* manual (FRPO B8).

## File

```
!R! RES; UNIT C;
MCRO GP;
NEW P;
GPAT %1;
PDRP 2, 0, 0, 2, -2, 0, 0, -2;
FILL 1;
PMRP .5, .5;
ENDM;
CALL GP, 0;
CALL GP, .125;
CALL GP, .25;
CALL GP, .375;
CALL GP, .5;
CALL GP, .625;
CALL GP, .75;
CALL GP, .875;
PAGE;
EXIT;
```

## *Printout*

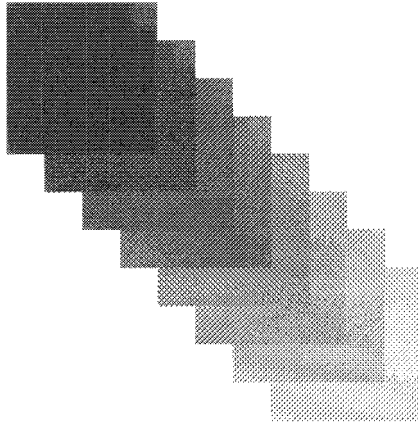

## *Related Commands*

FPAT, PAT

# GRAY — represent GRAY

COLOR

## Format

GRAY *gray-mode* ;

## Parameter

*gray-mode*:

- 0 = represents gray in K (black, default)
- 1 = represents gray in CMY

## Function

The GRAY command determines whether gray in graphic images is represented using black or combination of cyan, magenta, and yellow.

If each value of the RGB signals is the same, the corresponding area will be achromatic (grayed). For example, if  $R = G = B = 0$ , the corresponding area will be black. If  $R = G = B = 100$ , the corresponding area will be gray. If  $R = G = B = 255$ , the corresponding area will be white, that is, there will be no color components. (White and black are not colors. They are states in which all the light is reflected and absorbed respectively.)

If each value of RGB is the same when processing images, the corresponding area can be represented by using either the same quantity of toner or only K toner for each of CMY. (If  $C = M = Y$ , the color is black in theory.) However, the black represented by  $C = M = Y$  is not the same as the black represented by K alone.

When representing an image, for example, if it contains an area represented by  $R = G = B$ , the look and impression of that image will be completely different when it is represented by CMY and when it is represented by K alone. (Which look is better is dependent on the viewer's taste, the contents to be printed, and so on.)

The graying process defaults to representation using K toner alone. However, a toggle switch is provided since, as mentioned earlier, this process cannot be determined objectively.



Note

This command is irrelevant to models FS-8000C and KM-C830.

# GRRD — GGraphic data ReaD

COLOR

## Format

```
GRRD format, width, height; <image>;ENDG;
```

## Parameters

### *format*:

image format:

B = Bitmap

J = JPEG

T = TIFF

### *width*:

number from 0 to 65535

### *height*:

number from 0 to 65535

### *image*:

file name based on a specified format

## Function

The GRRD command allows the image data of a specified format to be drawn in a specified size at a specified location. This command is terminated with the ENDG command.

The color space for each format is compatible only with RGB. In the case of TIFF format, the command is compatible with non-compression, LZW, and PackBit. Upon receipt of incompatible format and/or color-space data, this command is ignored.

Width and height specifications are dependent on the current unit of measurement (UNIT). If the output image has a specified width of 0, the image will be printed in a width varying with the height of the output image, while retaining the vertical-horizontal ratio of the original image data as it is. If the output image has a specified height of 0, the image will be printed in a height varying with the width of the output image, while retaining the vertical-horizontal ratio of the original image data as it is. When the output image has both a specified width and height of 0, the output image pixels will be printed according to the raster resolution specified by the STR command.

Since the command ends with ;ENDG; do not insert space between the preceding ';' and ENDG. If space is inserted, the command is ignored.

When monochrome mode is specified, the output is printed as a grayscale image.

## File

The following example uses DOS to transfer both the command sequences and the graphics data to the printing system's parallel interface.

```
c:\¥> echo !R! STR 300; MZP 1,1; GRRD J,0,0; > lpt1  
c:\¥> copy /b fluit.jpg lpt1  
c:\¥> echo ;ENDG; PAGE; EXIT; > lpt1
```

### *Printout*





# HUE — adjust HUE

COLOR

## Format

```
HUE color, angle[, type];
```

## Parameters

### color:

number representing the color for hue adjustment:

0 = all colors

1 = R

2 = Y

3 = G

4 = C

5 = B

6 = M

### angle:

angle of hue rotation in degrees:

color = 0, -180 to 180 (default = 0)

color = 1 - 6, -10 to 10 (default = 0)


### type:

object type


## Function

The HUE command shifts all the pixels around the ‘color wheel’ to a different point for adjusting the tint of a color. For example, shifting the red pixels to green turns the green pixels to blue and yellow pixels to cyan. When *color* is 0, the HUE command shifts all hues at the specified angle.

As shown in the figure below, shifting hues can be likened to rotating the color wheel. When the wheel is rotated by 60 degrees clockwise, red shifts to magenta and yellow to red.

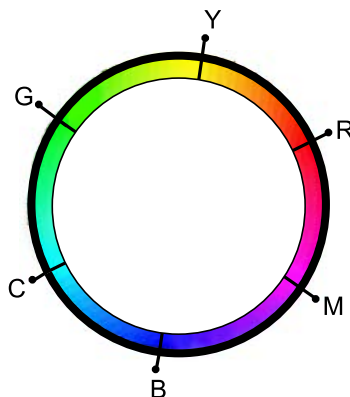

When *color* is other than 0, a particular hue can be shifted. The example below shows that the yellow hue has been shifted in the direction of green indicating that yellow images will be slightly reddish and the image in the vicinity of yellowish green will be yellow. Note that hues cannot be set to move beyond their next hues.

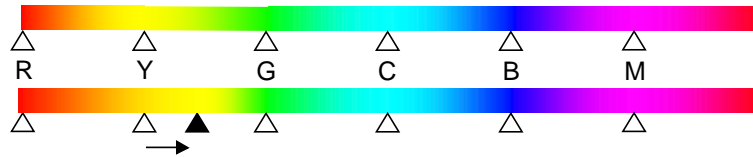

If this command is issued to rotate a particular hue when all hues are rotated, the hues are controlled after they are reset to their default state. The HUE command is enabled for all color spaces, all color modes and all monitor simulation modes. If ink simulation is set to other than NONE, the HUE is disabled.

# INTL — InterNaTional characters

## *Format*

INTL *country-code*, *code-set*;

## *Parameters*

### *country-code:*

- 0 = US ASCII
- 1 = France
- 2 = Germany
- 3 = UK
- 4 = Denmark/Norway
- 5 = Sweden
- 6 = Italy
- 7 = Spain
- 8 = Japan
- 9 = US Legal
- 10 = IBM PC-850 (Multilingual)
- 11 = IBM PC-860 (Portuguese)
- 12 = IBM PC-863 (Canadian French)
- 13 = IBM PC-865 (Norwegian)
- 14 = Norway
- 15 = Denmark 2
- 16 = Spain 2
- 17 = Latin America

### *code-set:*

- 0 = Epson code set
- 1 = HP LaserJet code set
- 2 = Daisywheel code set
- 4 = IBM/Line Printer code set

## *Function*

The INTL command selects a symbol set appropriate for the alphabet of a particular country. A symbol set includes the specific alphabetic and numeric characters and other symbols of a particular written language, country, or software application. Charts of the available symbol sets are displayed in *Emulation* of the *Technical Reference* manual, emulation by emulation.

Depending on the current emulation, the printer selects one of the symbol sets of the emulated printer appropriate for the country as requested by the *country-code* value. For example, when the printer is set in the default emulation mode 6 (HP LaserJet), country code 0 (US ASCII) selects the ISO-6 ASCII symbol set of the HP LaserJet printer. If the current emulation mode is 1 (IBM), country code 0 selects the IBM US symbol set of the IBM Proprinter.

Differences in symbol sets can be seen in the upper half of the character code table, consisting of character codes 128 through 254 (hex 80 through FE). The availability of the symbol sets to the country-code values appear in the table below.

For example, the character assigned to character code 93 (hex 5D) varies according to the country code as follows:

US	]
France	§
Germany	Ü
Denmark	Å
Italy	é
Spain	¿

The *code-set* parameter adjusts for the different symbol sets. According to the *code-set* parameter specified, the printer selects a symbol set available to the current emulation.

The default *country-code* value appears as the U6 parameter and can be set using an FRPO command. The factory setting is 0: the standard US ASCII symbol set. The default *code-set* value appears as the U7 parameter. The factory setting is 0.

#### Symbol Sets Available with INTL

Country-code	Code-set (emulation)			
	0 (Epson)	1 (HP LaserJet) <sup>a</sup>	2 (Daisywheel)	4 (IBM/Line Printer)
0 <sup>b</sup> (US ASCII)	LQ US	ISO-6 ASCII	Diablo US	IBM US
1 (France)	LQ France	ISO-25 France	Diablo France	
2 (Germany)	LQ Germany	HP German	Diablo Germany	
3 (UK)	LQ U.K.	ISO-4 U.K.	Diablo U.K.	
4 (Denmark/Norway)	LQ Denmark	ISO-60 Norway	Diablo Denmark	IBM D/N
5 (Sweden)	LQ Sweden	ISO-11 Swedish	Diablo Sweden	
6 (Italy)	LQ Italy	ISO-15 Italian	Diablo Italy	
7 (Spain)	LQ Spain	HP Spanish	Diablo Spain	
8 (Japan)	LQ Japan	ISO-14 JIS ASCII	Diablo Japan	
9 (US Legal)	LQ US Legal	US Legal	US Legal	US Legal
10 (IBM PC-850)	IBM PC-850	IBM PC-850		IBM PC-850
11 (IBM PC-860)	IBM PC-860	IBM PC-860		IBM PC-860
12 (IBM PC-863)	IBM PC-863	IBM PC-863		IBM PC-863
13 (IBM PC-865)	IBM PC-865	IBM PC-865		IBM PC-865
14 (Norway)	LQ Norway			
15 (Denmark 2)	LQ Denmark 2			
16 (Spain 2)	LQ Spain 2			
17 (Latin America)	Latin America			

<sup>a</sup> The INTL command is primarily intended to access foreign characters not found in a current symbol set. (Default is US ASCII). It does not fully support all of the HP LaserJet symbol sets. To use one of the HP symbol sets not listed above, see the CSET command page.

<sup>b</sup> Factory-set (default) value

*File*

```
!R!  
CMNT This file will not print correctly in the IBM;  
CMNT emulation (mode 1);  
RES; INTL 2, 2; SLM 1; STM 2;  
SFNT "Helvetica", 14;  
EXIT;  
Diese [pfel sind eine ]berraschung!  
!R! PAGE; EXIT;
```

*Printout*

Diese Äpfel sind eine Überraschung!

# JOB — JOB Deletion

## Format

```
JOB [mode[ , job-id or mailbox-id[ , password]]];
```

## Parameters

### *mode:*

mode of deletion:

1 = Deletes temporary jobs

2 = Deletes permanent jobs

8 = Deletes the jobs in the virtual mailbox specified by *mailbox-id*

9 = Deletes the virtual mailbox specified by *mailbox-id*

15 = Resets all virtual mailboxes to a clean state

### *job-id or mailbox-id:*

an integer or character string that specifies the job ID or mailbox ID

0 = for modes 8, 9, and 15 only, affects all the mailboxes

1 to 255 = tray ID (specified by JOBS)

Character string = job ID or alias of virtual mailbox, must be enclosed by single or double quotation marks

### *password:*

four-digit number specified by VMPW to secure the mailbox

## Function

The JOB command deletes the jobs stored in the hard disk. This command may be used to make more free space in the hard disk by deleting unnecessary jobs.

Modes 1 and 2 delete the temporary and permanent jobs, respectively. By giving a job ID (specified by the JOBS command), it deletes only the job having the matching job ID.

Modes 8, 9, and 15 are used for deletion of the jobs stacked in the virtual mailbox: Mode 8 deletes all jobs stored in the mailbox which is specified by *mailbox-id*. It does not affect the alias and password for the mailbox, if any. (For details on aliasing and password-protection of the mailbox, see VMAL and VMPW, respectively.) Mode 9 deletes the mailbox and its contents at once. The alias and password for the mailbox is also deleted. Mode 15 resets all mailboxes to a clean state by deleting all the contents in the mailboxes and clearing the aliases and the passwords altogether (JOB 15 , 0 , 0 ;).

## *Files*

To delete the temporary job with an ID of *28L016T50* from the hard disk:

```
!R! JOB 1, "28L016T50"; EXIT;
```

To delete all permanent jobs in the hard disk:

```
!R! JOB 2; EXIT;
```

To delete all temporary and permanent jobs in the hard disk:

```
!R! JOB; EXIT;
```

To delete the jobs stacked in virtual mailbox number 3, which has the password of 9999:

```
!R! JOB 8, 3, 9999; EXIT;
```

# JOB — print JOB List

## Format

JOB mode ;

## Parameter

mode:


- 1 = prints a list of temporary jobs in the hard disk
- 2 = prints a list of permanent jobs in the hard disk
- 8 = prints a list of virtual mailboxes to represent their usage status


## Function

The JOB command prints a list of all permanent jobs in the hard disk, or all temporary jobs, for checking the stored contents in the hard disk and to selectively delete jobs. The jobs stored can be directly printed by reading barcodes on the job list with the barcode reader BC-1.

The JOB 8; command outputs a list representing the usage status of virtual mailboxes.

*Example of VMB virtual mailbox usage status list output*

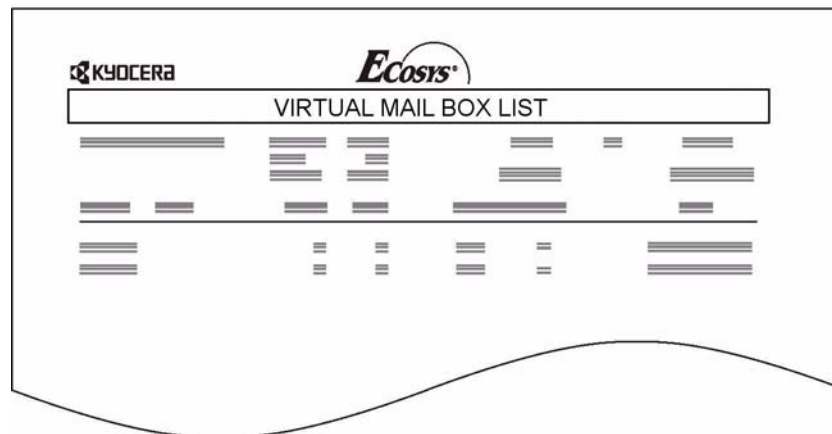

Regardless of whether mailboxes contain any data, information is displayed for mailboxes which have been used at least once. The information displayed for each mailbox is: the mailbox (Bin) number, the alias set for the mailbox, the number of jobs in the mailbox, the number of pages, the size of jobs held in that mailbox only, and the size of jobs entered in other mailboxes as well. A  is displayed over the mailbox number for virtual mailboxes which contain jobs. A *Full!!* is displayed next to the job size entry for virtual mailboxes containing jobs which caused an error during data is written to the mailbox. An error log indicating failure is also printed when jobs within such a mailbox are printed.



## *File*

To print a permanent job list:

```
!R! JOBL 2; EXIT;
```

# JOBO — JOB Output

## Format

`JOBO mode , 'job-id' or 'mailbox-id' [ , password ] ;`

## Parameters

### *mode:*

0 = normal  
8 = virtual mailbox

### *job-id (mode 0):*

job ID or page ID

### *mailbox-id (mode 8):*

mailbox ID from 1 to 255, or alias

### *password (mode 8 only):*

password for the mailbox

## Function

The JOBO command retrieves a temporary or permanent job or the jobs saved in the virtual mailbox and prints with the finishing arrangements previously made.

Mode 0 is used to retrieve and print a temporary or permanent job. The job to be retrieved may be specified by the job ID which is given internally by the printing system. It is also possible to specify the page ID if only a particular page is required to be printed. The page is automatically assigned and printed on a page when one of the ID barcode position parameters of 128 through 135 is specified for JOBS. A list of job names currently stored in the hard disk can be obtained by printing a job list (See *JOBL* on page 134).

Settings such as the number of pages to print, whether to print barcode ID on the printed pages, etc., for the job to be retrieved by JOBO can be made by issuing JOBP followed by a JOBO (See *JOBP* on page 138).

If the job name does not exist or the job is corrupted in hard disk, an error is messaged on the operator panel display as follows:

Hard Disk Error	Meaning
99	The job does not exist.
98	The job is corrupted.

Mode 8 retrieves jobs stacked on a virtual mailbox for printing. In mode 8, the ID number (or the alias, if the mailbox has one given) for the mailbox should be specified in place of *job-name*. The mailbox ID number should be 1 to 255. All jobs in the mailbox specified by its mailbox ID are printed at once. After printing is finished, all jobs in the mailbox are automatically deleted.

All jobs are delivered to the current output stack (all jobs to the same stack). Note however the jobs with stapling enabled will be forcibly sent to the stapler.

The master password, if set previously by VMPW, is valid for all virtual mailboxes for which a password is set. An error will be displayed on the operator panel if no password or an incorrect password is specified. An error will result also if no virtual mailbox corresponds to the alias given or if no job is present in the specified mailbox. It is not possible to select a virtual mailbox using the operator panel when no jobs are posted in the virtual mailbox.

If the CANCEL key is pressed during virtual mailbox job output, processing will halt and the printing system will return to Ready status. The job being output and jobs in the virtual mailbox can be printed.

## *Files*

To output the job with job ID *4H90058I0* in the hard disk, with no barcode printed, in 7 copies:

```
!R! JOBP 0, 7; JOBP 1, 2; JOBO 0, '4H90058I0';  
EXIT;
```

To print the jobs stacked on virtual mailbox number 3, for which no password is set:

```
!R! JOBO 8, 3; EXIT;
```

To output the jobs stacked on the virtual mailbox with the alias *Jonathan*, for which the password 9999 is set:

```
!R! JOBO 8, 'Jonathan', 9999; EXIT;
```

# JOBP — JOB, print with Print options

## Format

JOBP *print-option* , *parameter* ;

## Parameters

### *print-option*:

an integer that specifies the print option from the ones below

### *parameter*:

an integer, the letter m, or character string that specifies the parameter for the print option as indicated in the table below

print-option	Function	Parameter	Effective to:
0	Copy count	1 to 999	
1	Printing barcode	0 = first-page only 1 = whole page 2 = disabled	
2	Duplex printing	0 = off 1 = long edge binding 2 = short edge binding	JOBO
3	Destination stack	1 = face-down 2 = face-up 3 = finisher tray	JOBO
4	Stapling	0 = off 1 = bottom left, angled 2 = top left, automatic angled or upright 3 = two centered	JOBO
5	Barcode position	0 to 7 or 128 to 135 (printing page ID's)	
6	Staple count	M or m = staples the maximum number of sheets. For example, 20 sheets for models DF-30/31. 0 = does not staple jobs that exceed the maximum number of sheets. -1 = staple only the sheets that exceed the maximum number of sheets. 2 to 20 = staples the number of specified sheets.	
7	Center stitch	0 = off 1 = center stitch and stapling	
8	Punching	0 = off 1 = main position 2 = alternate position	
9	Transparency separator	0 = off 1 = blank separator 2 = duplicated separator	
10	Source for transparency separator	number representing the paper source (tray)	
11	Rotated collation	0 = off 1 = on	
12	Thumbnailing	number of pages printed per sheet, 1, 2, 4, 6, 9, or 16	

print- option	Function	Parameter	Effective to:
13	Booklet	0 = off 1 = longitudinal feeding, left binding 2 = longitudinal feeding, right binding 3 = lateral feeding, left binding 4 = lateral feeding, right binding	

## Function

The JOBP command implements printing a print job which was prologued by JOBS and epilogued by JOBT in the similar manner as the JOBO command (See *JOBO* on page 136.). Use of the JOBP command allows to use the different settings for copy count, duplex printing, stapling, etc., from those originally set for the print job. For example, it is possible to duplex-print the print job (in which duplex-printing was not originally implemented) by commanding JOBP 2, 1; or remove stapling from the print job (in which stapling was originally implemented) by commanding JOBP 4, 0;.

Print options 2, 3, 4, and 16 are valid only when the JOBP command follows the JOBO command to print the job. For example, the JOBP command sequence JOBP 2, 1; will not activate duplex printing if the preceding job to print was assigned by JOBS.

A JOBP command sequence is cancelled if the host interface of the printing system is switched from one to another after the timer has expired for the interface.

## Files

To print the print job 'monthlyreport,' disabling the original barcode printing option, in the number of copies of 15:

```
!R! JOBP 0, 15; JOBP 1, 2; JOBO 'monthlyreport'; EXIT;
```

# JOBS — JOB Start

## *Format*

```
JOBS save-mode, copy, barcode, barcode-position[ , share, 'job-name' ,  
'user-name' , 'time' ] ;
```

## *Parameters*

### *save-mode:*

save mode:  
0 = electronic sorting only  
1 = temporary  
2 = permanent  
8 = (Print to) virtual mailbox

### *copy:*

number of copies to print:  
1 to 999

### *barcode* (*starting-mailbox* when *save-mode* is 8):

a number representing the page(s) barcode is printed<sup>1</sup>:  
0 = On cover page only  
1 = On whole pages  
2 = None

### *barcode-position* (*ending-mailbox* when *save-mode* is 8):

a number representing the position of barcode:  
0 to 7 or 128 to 135 (See next page.)

### *share:*

reserved: Must be 0

### *job-name:*

job name, character string up to 80 bytes

### *user-name:*

user name, character string up to 80 bytes

### *time:*

time stamp, character string up to 80 bytes

---

<sup>1</sup> *Save-mode* must be permanent (2).

## Function


The JOBS command defines start of a job which is processed using e-MPS. The subsequent document is spooled in the hard disk or RAM disk. (Only HP mopier compatible spooling is possible if the printing system uses RAM disk.) Electronic sorting becomes possible in emulations other than PDL and KPDL. This command must be terminated by JOBT as exemplified in *Files* below on page 144.

Among the e-MPS finishing functions, not all of them require a hard disk. For example, using the staple function does not require a hard disk in the printing system.

If the size of the permanent jobs saved in the hard disk has reached the maximum limit while the first parameter specifies the permanent job saving mode, the printing system indicates 'harddisk error 97' meaning that no more permanent jobs are storable. The printing system forcibly uses save-mode 0.

With mode 0, 1, or 2, it is possible to print a barcode ID which is directly read by an option barcode scanner for reprinting the job at any later time. The position for the barcode ID can be one of the following positions depending according to the given barcode position parameter. Note that parameters 128 through 135 allow a human-readable barcode ID printed along the barcode ID.

### Barcode positions

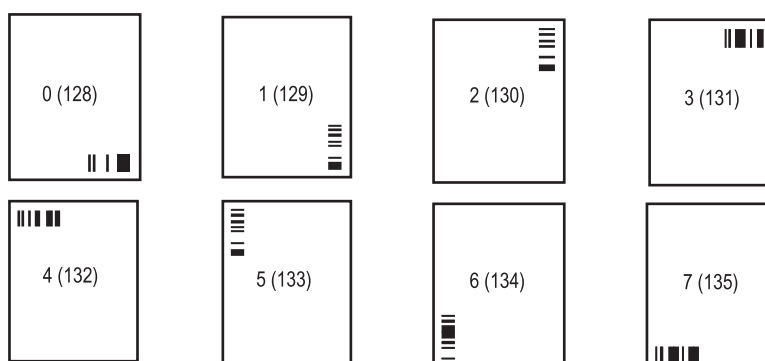

## Spooling to Virtual Mailbox

Specifying 8 for *save-mode* enables virtual mailbox spool mode.

The *starting-mailbox* value must be greater than the *ending-mailbox* value. Otherwise, only the starting mailbox becomes valid.

When no virtual mailbox corresponds to the alias given, the message display shows 'hard disk error 85 (see the *Technical Reference* manual.)' and information regarding the job which was thrown away is displayed in the error log.

If JOBS-JOBT pairs are nested or if they are not paired properly, the job defined between the innermost JOBS-JOBT pair will be valid.

The command is invalid if any of the job name, user name or time stamp exceed 31 bytes. Note that the job which would have been placed in a virtual mailbox will be immediately printed.

Note that if parameters *starting-mailbox* and *ending-mailbox* do not specify a valid virtual mailbox number (1 to 255), or if the JOBP command does not include a valid

virtual mailbox specification (See *JOBP* on page 138.), the job in question will not be saved to any virtual mailbox and no error will be displayed.

While jobs are being stacked on a virtual mailbox, a message indicating that jobs are being stacked on virtual mailboxes (when the VMB-compatible printer driver is being used) will be displayed on the message display instead of *Processing*.

## Files

To print 25 copies of the job named *Project-report1* with user name *T. Anderson*, and time stamp of *July 29, 2002*. The job is saved in HP mode.

```
!R! JOBS 0,25,0,0,0,
      'Project-report1',
      'T. Anderson',
      '07/29/02';
EXIT;
```

To print 3 copies of the job named *Beauty-parlor-list* with user name *Salt Lake* and time stamp of *January 12, 2002*. The job is saved in permanent mode.

```
!R!
JOBS 2,3,2,2,0,'Beauty-parlor-list', 'Saltlake','01/12/02';
TEXT 'Page 1...';
PAGE;
TEXT 'Page 2...';
PAGE;
TEXT 'Page 3...';
PAGE;
JOB;
JOB;
EXIT;
```

To print one copy of the job named *Inventory List 2002* with user name *Susan* and time stamp of *February 12, 2002*. The job is saved in temporary mode.

```
!R!
JOBS 1,1,1,0,0,'Inventory List 2002', 'Susan', '02/12/02';
TEXT 'Page 1...';
PAGE;
TEXT 'Page 2...';
PAGE;
TEXT 'Page 3...';
PAGE;
JOB;
JOB;
EXIT;
```

To stack the jobs between *JOBS* and *JOB* on the virtual mailbox named *Sales*.

```
!R! JOBS 8, 3, 'Sales', 0, 0, 'Invoice', 'Sales', '01/14/02
16:30:25';
UNIT C; MZP 5, 10; BOX 6, 6; PAGE; TEXT 'November Result';
PAGE; TEXT 'To Mr. Johnson'; PAGE;
JOB; EXIT;
```

To stack the jobs between *JOBS* and *JOB* on all virtual mailboxes having numbers 3 to 15.



```
!R! JOBS 8, 3, 3, 15, 0, 'Service', 'Repair', '01/14/02  
16:30:25';  
UNIT C; MZP 5, 10; BOX 6, 6; PAGE; TEXT 'ABCDE'; PAGE;  
TEXT 'Domestic'; PAGE;  
JOB; EXIT;
```

# **JOB T — JOB Terminate**

## *Format*

JOB T ;

## *Parameter*

None

## *Function*

The JOB T command terminates defining a job which is started by JOBS. The JOB T command is used in combination with JOBS to constitute a job definition. The printing system prints the job in the number of copies as specified by the repeat count commanded by JOBS or JOBP in the cyclic manner.

At execution, the JOB T command starts printing the job including stapling, job separation, job offset (if the relevant option device is installed).

## *File*

The file below sorts and prints the defined job in 40 copies. The pages between JOBS and JOB T are output to virtual mailbox number 3. Pages after JOB T are output to the current physical stack.

```
!R! JOBS 0,40,2,0;
      TEXT "Circulation Slip";
      PAGE;
      TEXT "Response Slip";
      PAGE;
      JOB T;
EXIT;
```

# JOG — JOG output stacks for separation

## Format

JOG;

## Parameter

None

## Function

It is possible to offset separate jobs in the output stack by explicitly repeating the JOG command so that the user can clearly distinguish his/her print jobs from the others. This command is only enabled when an optional stacker is attached. The STAK command must be used to explicitly forward printed pages to the optional stacker.

The optional stacker has two modes for 'jogging:' to jog only the first page or all pages of the job to the left or right. Selection of jog mode can be made by the FRPO S8 command as follows:

All pages	FRPO S8 = 0
First page only	FRPO S8 = 1

Unlike the job offset provided by HP PJI for each individual job, the JOG command affects any subsequent print jobs until another JOG command is issued. This is unaffected even by the reception of a command such as RES, FRPO and SEM which results in a reset of the printer.

When JOG is issued with a job defined by JOBS and JOBT, jogging affects the individual job (in the similar way as PJI). Therefore, JOG placed between JOBS and JOBT is ignored (except for the first page).

If used together with STPL, STPL overrides JOG, regardless of the order the commands are issued.

## File

The example below prints 3 copies of the job defined between JOBS and JOBT (job name: My Trial, user name: Halle Berry, date: January 12, 2002) with the electronic sorting function and deliver printed pages to the face-down tray of the optional stacker in offset mode or separation mode. (A barcode is output on the first page only. The barcode position is "0".)

```
!R!
STAK 3; CMNT Face-down;
JOG;
JOBS 0,3,0,0,0,"My Trial", "Halle Berry", "01/12/02";
TEXT "Page One: Testing how JOG works.";
PAGE;
TEXT "Page Two: Testing how JOG works.";
PAGE;
TEXT "Page Three: Testing how JOG works.";
PAGE;
JOBT;
EXIT;
```

# LAPI — LoaD API Program

## *Format*

LAPI *Program type* , *PRESCRIBE command* , *function name* ;

## *Parameters*

### *Program type:*

Type of the downloading program  
"PRE" PRESCRIBE command

### *PRESCRIBE command name:*

Name of the PRESCRIBE command to be stored  
Alphanumeric string of 2 to 4 characters  
(Only in the case of "PRE")

### *Function name:*

Name of the function that starts the user program  
(Only in the case of "PRE")  
Up to 31 characters

## *Function*

The LAPI command downloads the API program.  
As described in the example below, add the string "WRED" to the end of the downloading data as a terminator.  
It is possible to add a string other than "WRED." It is because if the downloading program includes the string "WRED," this must be changed. To change the terminator, use the RWRF T command.  
When storing a new PRESCRIBE command, if the specified command name has already been stored, the sending data will be invalid.  
Data downloaded with the LAPI command will be deleted (invalid) upon the system restart.

### *Example:*

```
!R! LAPI "PRE" , "XXXX" , "XXXXXXXX" ;[Program Data]WRED;
EXIT;
After "WRED" is changed to "TEST"
!R! LAPI "PRE" , "XXXX" , "XXXXXXXX" ;[Program Data]TEST;
EXIT;
```

# LDFC — Load Font Character

## *Format*

LDFC *font-number*, *code*, *height*, *width*, *y-offset*, *x-offset*,  
*cell-width*, *center*, *rotation*[, *resolution*]; *bit-map*;

## *Parameters*

### *font-number:*

font number (integer from 1000 to 65535). Same for all characters in the font. Must not duplicate any resident bitmap font number.

### *code:*

ASCII code of the character (0 to 255)

### *height:*

height of the character bitmap, in dots (integer from 0 to 3999)

### *width:*

width of the character bitmap, in dots (integer from 0 to 3999)

### *y-offset:*

distance from the baseline to the top of the character bitmap, in micro dots [1/32 dot] (integer from -32768 to 32767); positive – up, negative – down

### *x-offset:*

distance from the left edge of the character cell to the left edge of the character bitmap, in micro dots [1/32 dot] (integer from -32768 to 32767); positive – up, negative – down

### *cell-width:*

total width of the character cell, in micro dots [1/32 dot] (integer from 0 to 65535). This parameter is used in proportional spacing.

### *center:*

distance from the left edge of the character cell to center of the character, in micro dots [1/32 dot] (integer from 0 to 65535)

### *rotation:*

0 = portrait  
1 = upside-down landscape  
2 = upside-down portrait  
3 = landscape

### *resolution:*

resolution of the character, 300 [dpi], 600 [dpi], or 1200 [dpi]

### *bit-map:*

dot pattern of the character, coded as a character string

### *Function*

The LDFC command defines one character of a new bitmap font. It can be used to create special characters such as the one shown below, which is defined as the '+' symbol (character code 43) of font 1000. Details and another example appear in *Chapter 4* of the *Technical Reference* manual.

The *resolution* is valid only on a 600/1200 dpi printer model.

### *File*

```
!R!
LDFC 1000, 43, 39, 29, 1216, 0, 1216, 608, 0;
@@2@@0@@2@@0@@2@@0@@2@@0@@7@@0@@7@@0@@7@@0@@?'@0
@@?'@0@A?p@0@A?p@0@C?x@0@G?|@0@O?~@0@_?/@0@/?/'0
A/?/p0G/?/x0O/?/~0//?//8O/?/~0G/?/x0A/?/p0@/?/'0
@_?/@0@O?~@0@G?|@0@C?x@0@A?p@0@A?p@0@@?'@0@@?'@0
@@7@@0@@7@@0@@7@@0@@2@@0@@2@@0@@2@@0@@2@@0@@2@@0;

FONT 1000; SLM 1; SCPI 6; SLPI 6;
TEXT '+ + + + + + + + + + + + +', N;
TEXT ' + + + + + + + + + + + + +', N;
TEXT '+ + + + + + + + + + + + +', N;
TEXT ' + + + + + + + + + + + + +', N;
TEXT '+ + + + + + + + + + + + +', N;
EXIT;
```

### *Printout*



# LDFN C — generate bitmap character for LoaDing FoNt

## *Format*

LDFN C, *font-number*, *code*, *height*, *width*, *y-offset*, *x-offset*, *cell-width*;  
*bit-map*;

## *Parameters*

### *font-number:*

font number (integer from 1000 to 65535)

### *code:*

ASCII code of the character code (0 to 255 for European; 0 to 65533 for Japanese) or in hexadecimal notation (\$xxxx)

### *height:*

height of the character bitmap, in dots (integer from 1 to 65535)

### *width:*

width of the character bitmap, in dots (integer from 1 to 65535)

### *y-offset:*

bitmap Y offset, in 1/32 dots (integer from -32768 to 32767)

### *x-offset:*

bitmap X offset, in 1/32 dots (integer from -32768 to 32767)

### *cell-width:*

character width, in 1/32 dots (integer from 1 to 65535)

### *bit-map:*

bitmap transfer data (BBN format)

## Function


The LDFN C command defines bitmap characters for each character code for the downloaded font header already defined using LDFN F. Note that each character code defined must match the font number, symbol set (1- or 2-byte code), and other information of the font header already created. The bitmap data transferred at the end of this command is transferred under Kyocera's original BBN format. This is the transfer format used by the LDFC and LDKC commands.

This command is recommended for use with downloading bitmap fonts. In other words, this command is intended as an equivalent for the old LDFC and LDKC commands. Use this command when creating a new bitmap font. LDFC, LDKC and CRKF will be deleted in the future.

Units used in *height*, *width*, *y-offset*, *x-offset* and *cell-width* are dots of the resolution defined in the font header.

The coordinate system used when defining bitmap fonts with this command is defined as follows. Note the sign of the offset value.

### Font Registration Coordinate System

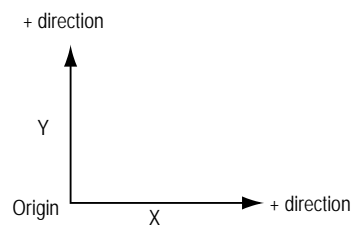

A command error will result and the command has no effect if any of the parameters are outside the given range. This command is ignored if even one parameter error occurs.



# LDFN F — create header for LoadIng FoNt

## Format

LDFN F, *font-number*, *resolution*, *name*, *symbol-set*, *spacing*, *width*, *height*,  
*style*, *stroke*, *type-face*, *type*;

## Parameters

### *font-number*:

font number: 1000 to 65535

### *resolution*:

resolution:  
0 = 300-dpi bitmap  
1 = 600-dpi bitmap  
3 = 1200-dpi bitmap (Fine mode)

### *name*:

font name (ASCII text string up to 31 characters long). This string must be enclosed in either single or double quotation marks.

### *symbol-set*:

symbol set:  
numeric value = 1-byte code symbol set (1 to 65535 [619: Shift JIS code])  
J = 2-byte JIS code

### *spacing*:

spacing:  
0 = fixed spacing  
1 = proportional spacing

### *width*:

font width (in dots set by *resolution*): 3 to 3000

### *height*:

font height (in dots set by *resolution*): 4 to 4165

### *style*:

font style: 0 to 32767

### *stroke*:

stroke weight: -127 to +127

### *type-face*:

type face: 0 to 32767

*type:*

font type:

0 = character codes from 32 to 127

1 = character codes from 32 to 127 and from 160 to 255

2 = character codes from 0 to 255

**Function**

The LDFN F command creates a font header for downloading a font to the printer. After the header is created, you must continue with downloading bitmap characters using the LDFN C command. This command only generates a font information header; it includes no character definition information. Since the font header defined by this command is capable of registering extensions to ANK codes (a 1-byte code), it is necessary to select a font after assigning fonts using the ASFN command when using 2-byte characters. Refer to the ASFN command page for details.

This command is recommended for use with downloading bitmap fonts. This command is intended as an equivalent for the old LDFC, LDKC and CRKF commands to create a new bitmap font. LDFC, LDKC and CRKF will be discontinued in the future.

Font Select Command	Description
FONT, SFNT	European character (1-byte code) emulation
KFNT, SKFT	Japanese character (2-byte code) emulation (linked using ASFN)

A command error will result and the command has no effect if any of the parameters are outside the given range. This command is ignored if even one parameter error occurs.

# LDFN S — LoaD truetype FoNt

## *Format*

LDFN S, *format*, *font-number*, *name*, *length*[ , *symbol-set*, *style*, *stroke*,  
*type-face*] ; *binary-data* WRED ;

## *Parameters*

### *format:*

font format:  
0 = TrueType font  
1 = Japanese TrueType font  
2 = Japanese TrueType Collection font

### *font-number:*

font number: 1000 to 65535  
Since there are two font headers for Japanese TrueType fonts, the printer automatically creates a font number increased by 1.

### *name:*

font name: ASCII text string of up to 31 characters long. This string must be enclosed in either single or double quotation marks.

### *length:*

font data length: number of bytes sent as *binary data*

### *symbol-set:*

font symbol set value: 1 to 65535 (619 = Shift JIS code)

### *style:*

font style: 0 to 32767

### *stroke:*

stroke weight: -127 to +127

### *type-face:*

type face: 0 to 32767

### *binary-data:*

font data (in TrueType format)

## *Function*

The LDFN S command allows outline fonts (TrueType fonts) to be downloaded to the printing system. A binary format is used to represent font data. The size of this data must match that given by *length* (font data length).

Always explicitly terminate font data using WRED ; . The five bytes represented by WRED ; are not counted as part of the font data length.

The maximum number of fonts that can be downloaded is up to the memory available or 256 fonts (512 when *format* is 2). Use FONT or SFNT command to select 1-byte fonts to be defined with this command.

TrueType fonts defined using this command cannot be completely deleted unless both DELF n; and DELF n+1; are specified.

A command error will result and the command has no effect if any of the parameters are outside the given range. This command is ignored if even one parameter error occurs.

Although *symbol-set*, *style*, *stroke* and *type-face* may be omitted, we recommend that all parameters be used to define font selection information.

# LGHT — adjust LiGHtness

COLOR

## Format

`LGHT mode , degree ;`

## Parameters

### mode:

mode of lightness adjustment:

0 = gamma control

1 = contrast control

### degree:

degree of saturation level:

number from -10 to 10 (Default is 0)

## Function


The LGHT command controls lightness and darkness balance based on the specified parameters. The gamma and contrast can be set independently of each other.

In gamma control mode, the color bars below represent the lightness gamma variation using hue R as an example. The top color bar represents the default lightness variation ( $\gamma = 1.0$ ) with its median indicated by the  $\Delta$  symbol. The left side represents the lower lightness range and the right side the higher lightness range. The middle color bar is an example lightness balance made brighter (set to  $\gamma > 1.0$ ). The bottom color bar is an example lightness balance made darker (set to  $\gamma < 1.0$ ).



Varying the lightness gamma allows the lightness of the image to vary. (You can achieve lightness variation, such as making dark images brighter by reducing low lightness areas, for example.)

In contrast control mode, the color bars below represent lightness contrast variations using hue R as an example. The top color bar represents the default contrast variation with its median indicated by the  $\Delta$  symbol. The left side represents the lower lightness range and the right side the higher lightness range. The middle color bar is an example application of strong contrast to the top bar. The bottom color bar is an example application of weak contrast to the top bar.

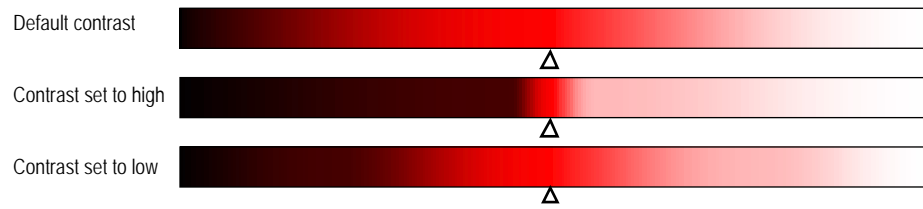

Varying the darkness contrast allows the difference between the light and dark shades of the image to be articulated and the intensity of control changes the difference between the light and dark shades of the image.

Lightness gamma and darkness contrast cannot be controlled hue by hue. However, since impressions vary with hue, you need to control with care.

The LGHT command is enabled for all color spaces, all color modes and all monitor simulation modes.

If ink simulation is set to other than none, this command is disabled. This mode is not held permanently in the printing system. For this reason, saturation is reset to its default state when the power is turned on.

# MAP — Move to Absolute Position

## Format

MAP *x-coordinate* , *y-coordinate* ;

## Parameters

### *x-coordinate*:

distance from the left margin

### *y-coordinate*:

distance from the top margin

## Function


The MAP command moves the cursor to a position specified relative to the top and left margins, measured in the units designated by the UNIT command. The coordinates may be positive or negative. Negative coordinates move the cursor outside the margin.

The MAP command is ignored in path mode graphics.

## File

```
!R! RES; UNIT C; STM 2; SLM 2;
SFNT 'Helvetica-Nr', 9;
MAP 0, 0; BOX 40, 40; SPD .2;
MAP 0, 1.4; TEXT '< = = = Margins';
MAP 0, 0; CIR .1; TEXT, L; TEXT ' MAP 0, 0;';
MAP 4, 0; CIR .1; TEXT, L; TEXT ' MAP 4, 0;';
MAP 0, 2; CIR .1; TEXT, L; TEXT ' MAP 0, 2;';
MAP 4, 2; CIR .1; TEXT, L; TEXT ' MAP 4, 2;';
MAP -1, -1; CIR .1; TEXT, L; TEXT ' MAP -1, -1;';
PAGE;
EXIT;
```

*Printout*

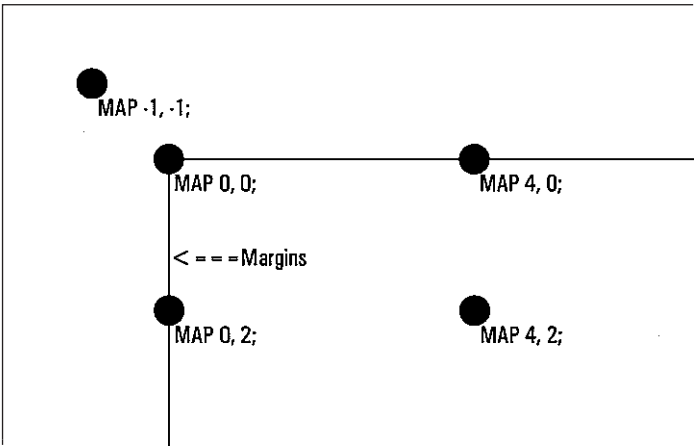

*Related Commands*

MRP, MZP, MRPA



# MCLR — Match CoLoR

**COLOR**

## *Format*

MCLR *mode* ;

## *Parameter*

### *mode:*

mode of color matching:

0 = none (default)

1 = auto

2 = vivid color

3 = display

## *Function*

The MCLR command selects the mode of color matching.

Color matching mode is changed according to the various conditions of emulation, paper type, and print quality. In monochrome mode, color matching is defaulted to 0 (none).

Mode 0 does not perform color matching. Mode 1 automatically selects color correction mode depending on the printing data. Text or vector graphics data are processed using Vivid Color; raster image data are processed using display mode. Mode 2 (Vivid color) performs correction on cyan color. Mode 3 (display) performs color correction suited to simulate the standard display monitor.

This command causes a form feed.

# MCRO — define MaCRO

## Format

```
MCRO name [ dummy-sign [ , comment ] ] ;
```

## Parameters

### *name*:

character string starting with a letter

### *dummy-sign*:

any character (default: % preceded by a space)

### *comment*:

any character string

## Function

The MCRO command assigns a name to the sequence of PRESCRIBE commands that follows, up to the ENDM (end macro) command. Thereafter, the entire sequence of commands can be executed by specifying the assigned name in a single CALL or AMCR (automatic macro) command.

The *name* can be any length but only the first four characters count. The rest will be ignored. The distinction between upper and lowercase letters is also ignored. For example, the following macro names are all the same:

```
ABCD
abcd
ABCDE
Abcdxyz
```

The name must start with a letter, but the other characters can include digits and special symbols such as hyphens. For example, F-1 and GRY2 are valid macro names.

*dummy-sign* (normally the percent sign) indicates dummy parameters in the body of the macro. Dummy parameters are given by writing the dummy sign followed by a number: %1 for the first dummy parameter, %2 for the second dummy parameter, and so on, up to a maximum of 19 dummy parameters. The same dummy parameter can be used any number of times. Values are assigned to dummy parameters when the macro is invoked by the CALL command.

If a macro with the same name has already been defined, the new definition is ignored. To redefine a macro, you must first delete the old definition with the DELM (delete macro) or DAM (delete all macros) command, or by switching power off.

See the *Technical Reference* manual for information on the limitations about the usage of macros.

The PCL5E command language, available in the mode 6 emulation, enables users to record HPGL/2 macros inside of HPGL/2 commands.

The following table shows the source of the PCL macros, the location in the printer, and the property value for the resource — important if resource protection mode is used. See also *Resource Protection* in the *Technical Reference* manual.

Macro	Location	Property
Downloaded	RAM	Temporary/Permanent
Memory card	Memory card	Permanent
Internal	ROM	Permanent

The internal printer firmware manages the PCL macros, recognizing the source, location and property value of the macros.

If the printer encounters PCL macros with the same macro ID, it will prioritize them in the following order: macros downloaded to RAM, macros residing on a memory card, and macros stored in the EPROM.

Memory card and EPROM based PCL macros cannot be deleted. Downloaded PCL macros, available for all FS-series printers, may be removed using the PCL reset or delete commands: <ESC>&f6X or <ESC>&f8X. Downloaded macros may also be sent to specific host buffers of the printer interfaces. The memory card and ROM macros will be available on all interfaces.

## File

```
!R! RES; FSET lp12v0s3b24580T;
MCRO SIGN %, string, length + 0.3;
SPD .03;
BOX %2, .3; MRP .15, .2;
TEXT %1; MRP -.15, .35;
ENDM;
CALL SIGN, 'CHECK ALL SWITCHES AND INDICATORS ...', 3.9;
CALL SIGN, 'BE SAFE; NOT SORRY', 2.1;
PAGE;
EXIT;
```

## Printout

**CHECK ALL SWITCHES AND INDICATORS ...**

**BE SAFE; NOT SORRY**

# MDAT — set MeDia type ATtribute

## *Format*

MDAT [ *media-type*[ , *paper-weight*, *fuser-mode*, *duplex*[ , *density*] ] ] ;

## *Parameters*

### *media-type*

- 1 = Plain
- 2 = Transparency
- 3 = Preprinted
- 4 = Label
- 5 = Bond
- 6 = Recycled
- 7 = Vellum
- 8 = Rough
- 9 = Letterhead
- 10 = Color
- 11 = Prepunched
- 12 = Envelope
- 13 = Cardstock
- 14 = Coated
- 15 = Second side
- 16 = Thick
- 21 = Custom 1
- 22 = Custom 2
- 23 = Custom 3
- 24 = Custom 4
- 25 = Custom 5
- 26 = Custom 6
- 27 = Custom 7
- 28 = Custom 8

### *paper-weight*

- 0 = Normal
- 1 = Heavy (Thick)
- 2 = Light (Thin)
- 3 = Extra thick
- 10 = Light
- 11 = Normal 1
- 12 = Normal 2
- 13 = Normal 3
- 14 = Heavy 1
- 15 = Heavy 2
- 16 = Heavy 3
- 17 = Extra heavy

*fuser-mode*

0 = High  
 1 = Middle  
 2 = Low  
 3 = Vellum

*duplex*

0 = Enable  
 1 = Disable

*density*

1 = Light  
 2 = Medium Light  
 3 = Normal  
 4 = Medium Heavy  
 5 = Heavy

**Function**

The MDAT command is used to customize the default attributes of a media type for optimization. The *paper-weight* attribute affects the printing system's transfer bias, *fuser-mode* affects the fuser temperature, and *duplex* determines whether the paper with that paper type is allowed for duplex printing or not.

If the parameters *paper-weight* and *fuser-mode* are omitted, this command resets the three attributes back to their defaults. If all the parameter are omitted (MDAT;), all the attributes for the all media types are reset to the default.

**File**

To set the transparency paper type to the thick paper weight and the high fuser temperature mode, disabling the duplex printing, command:

```
!R! MDAT 2, 1, 0, 1; EXIT;
```

**Related Command**

MTYP

# MID — Multi-tray ID

## Format

MID *tray-group*;

## Parameter

*tray-group*:

number from 1 (top) to the maximum

## Function

The MID command selects a group of trays in the sorter, which is assigned by the ASTK command and allows the subsequent SSTK (select Sorter STacKer) or CSTK (select Collator STacKer) command to deliver the output pages into the trays of that group for sorting or collating.

The MID command should be placed at the beginning of a file or program, or at the top of a new page. The selection of a tray group made by the MID command is effective until it is changed by another MID command (It is not reset by the RES command).

If the printer receives an ASTK command or one of the FRPO commands, the MID command is canceled (the output pages will be sorted in the normal sorter mode) and you must reselect the tray group by specifying the MID command.

The MID command is ignored while the multiple environment mode is interface-specific (FRPO S0, 2;) or off (FRPO S0, 0;). Refer to the sorter's *User's Manual*.



Note

This command is irrelevant to certain combination of photocopier models and option finisher models.

## File

To enable the multiple user mode (FRPO S0, 1;), to create three groups, to select the second group, and to deliver outputs in the fourth tray in the (second) group, send the following command sequence:

```
!R! FRPO S0, 1; ASTK 2, 5; MID 2; SSTK 2; EXIT;
```

This page must be delivered to the 4th tray in the sorter.

```
!R! RES; EXIT;
```

## Related Commands

ASTK, CSTK, MSTK, SSTK

# MPSS — e-MPS Storage

## *Format*

MPSS 'job-type' , 'limit' , size ;

## *Parameters*

### *job-type:*

CODE = temporary or permanent job  
VMB = virtual mailbox job  
JOBR = retention job

### *limit:*

TEMPLIMITSIZE = Limit of the capacity for temporary stored jobs  
PERMLIMITSIZE = Limit of the capacity for permanent stored jobs  
VMBLIMITSIZE = Limit of the capacity for virtual mailbox jobs  
QUICKLIMITCOUNT = Limit of the number of Quick Copy jobs

### *size:*

number from 0 to 9999 in unit of megabytes  
number from 1 to 50 for QUICKLIMITCOUNT

## *Function*

The MPSS command is used to allocate the limit values for the storage capacities to store temporary and permanent jobs, virtual mailbox jobs, and the number of Quick Copy jobs in the hard disk.

## *Files*

To set the maximum capacity for the permanent jobs to 600 MB:

```
!R! MPSS 'CODE' , 'PERMLIMITSIZE' , 600 ; EXIT ;
```

To set the maximum capacity of the virtual mailbox to 800 MB:

```
!R! MPSS 'VMB' , 'VMBLIMITSIZE' , 800 ; EXIT ;
```

To set the maximum number of Quick Copy jobs (Job Retention) to 50:

```
!R! MPSS 'JOBR' , 'QUICKLIMITCOUNT' , 50 ; EXIT ;
```

## MRP — Move to Relative Position

### *Format*

MRP *x-coordinate* , *y-coordinate* ;

### *Parameters*

#### *x-coordinate/y-coordinate:*

coordinates as measured from the current cursor position

### *Function*

The MRP command moves the cursor from its current position to a specified relative position, measured in the units designated by the UNIT command. The coordinates may be positive or negative.


The MRP command works in the standard mode graphics only. To move to a relative position in a path construction, use the PMRP (in Path, Move to Relative Position) command.

### *File*

```
!R! RES; UNIT C;
SFNT 'Helvetica-Bd';
CMNT MRP and baseball;
MRP 8, 8; CIR .2;
TEXT ' 1st';
MRP -2, -2; CIR .2;
TEXT ' 2nd';
MRP -2, 2; CIR .2;
TEXT ' 3rd';
MRP 2, 2; CIR .2;
TEXT ' Home';
PAGE;
EXIT;
```



*Printout*

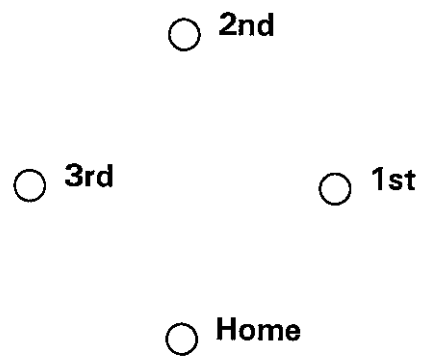

*Related Commands*

MAP, MZP, MRPA

# MRPA — Move to Relative Position specified by Angle

## *Format*

MRPA *distance* , *angle* ;

## *Parameters*

### *distance:*

distance to move

### *angle:*

angle in degree, measured clockwise from the vertical


## *Function*

The MRPA command moves the cursor from its current position across a specified distance using a specified angle. The distance is measured in the units designated by the UNIT command.

The MRPA command is ignored in the path mode graphics. To move to a relative position specifying angle in a path construction, use the PMRA (in Path, Move to Relative position by Angle) command.

## *File*

```
!R! RES; UNIT C;
CMNT Numbers indicate cursor movement;
SFNT 'Helvetica-Bd';
MAP 6, 12; CIR 1; TEXT '1';
MRPA 2, 60; CIR 1; TEXT '2';
MRPA 2, 120; CIR 1; TEXT '3';
MRPA 2, 180; CIR 1; TEXT '4';
MRPA 2, 240; CIR 1; TEXT '5';
MRPA 2, 300; CIR 1; TEXT '6';
PAGE;
EXIT;
```

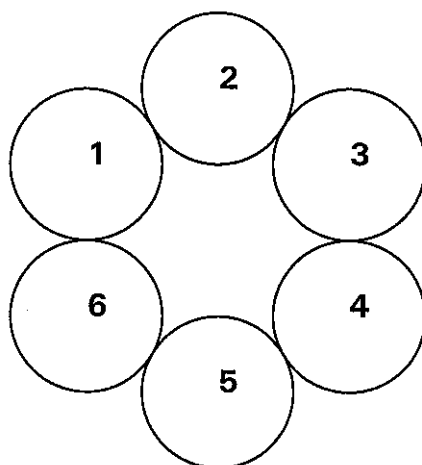*Printout**Related Commands*

MAP, MRP, MZP

# MSTK — select Mailbox STackEr

## *Format*

MSTK [*tray*, *tray*, ...]; or MSTK 0;

## *Parameter*

*tray*:

number from 1 to the maximum

## *Function*

The MSTK command is valid only when the option sorter is installed with the printing system. It instructs the printing system to deliver printed pages in the mailbox mode. In the mailbox mode, the printed pages are delivered to the trays in the reverse order of tray parameters. The printed pages are delivered first to the last specified tray until it becomes full; when the last specified tray becomes full, then the pages are delivered to the second to the last specified tray, and so on until the first specified tray becomes full. When the first specified tray becomes full, the bulk tray receives the overflowed pages until it also becomes full.

When the bulk tray becomes full, the printing system pauses and displays a message which urges the user to remove paper. By removing all the pages in the bulk tray and pressing the ON LINE key, printing commences.

If the tray parameters are omitted, all trays excluding the bulk tray are used.

Upon receiving the MSTK command, the printer automatically performs a page feed.

The MSTK 0; command is applicable only for the SO-6. This command cancels the mailbox mode and delivers all pages in the bulk output tray.

## *File*

```
!R! RES; MSTK; COPY; EXIT;
PAGE 1 (2 copies, bottom tray) !R! PAGE; EXIT;
PAGE 2 (2 copies, bottom tray) !R! PAGE; EXIT;
```

# MTYP — select Media TYPE

## Format

MTYP *media-type*;

## Parameter

### *media-type*:

- 1 = Plain
- 2 = Transparency
- 3 = Preprinted
- 4 = Label
- 5 = Bond
- 6 = Recycled
- 7 = Vellum
- 8 = Rough
- 9 = Letterhead
- 10 = Color
- 11 = Prepunched
- 12 = Envelope
- 13 = Cardstock
- 14 = Coated
- 15 = Second side
- 16 = Thick
- 21 = Custom 1
- 22 = Custom 2
- 23 = Custom 3
- 24 = Custom 4
- 25 = Custom 5
- 26 = Custom 6
- 27 = Custom 7
- 28 = Custom 8
- 99 = Not specified

## Function

The MTYP command automatically selects the paper source (tray or cassette) depending on the given *media-type*. When the MTYP command is issued, the printing system looks for the paper source which has the matching media type. To assign a paper type to the paper cassette, use the operator panel or the FRPO X0 – X7 commands.

For the MTYP command to work, the automatic cassette switching mode must be set to on in the printing system. To do this, command: !R! PSRC 100; EXIT;. For details see the PSRC (set paper source) command section in this manual.

To ensure that the paper having the correct size and type of media is always selected, it is recommended to place the SPSZ (set page size) command following the MTYP command. For example, to automatically print on the plain A4 paper in the cassette one (topmost cassette), first assign the plain paper type to the cassette 1 by FRPO X1, 1;, then command MTYP 1; SPSZ 8;.

This command is valid only for the print systems that support the automatic media type function.

## *File*

To print on the A4 label loaded on the printer's MP tray, set the MP tray size to A4 and the MP tray type to Labels (See the user's manual for details.)

```
!R! RES;  
PSRC 100;  
    CMNT Sets the printer to automatic cassette mode;  
    CMNT Depending on the current media type;  
    SPSZ 8; MTYP 4;  
    CMNT Paper size = A4, media type = label;  
RES; EXIT;
```

## *Related Commands*

PSRC, SPSZ

# MZIP — Move to Zero-relative Position

## Format

MZIP *x-coordinate* , *y-coordinate* ;

## Parameters

### *x-coordinate*:

distance from the left edge limit of paper

### *y-coordinate*:

distance from the top edge limit of paper

## Function


The MZIP command moves the cursor to a position specified relative to the top and left edge limits of the paper, measured in the units designated by the UNIT command. The coordinates may be positive or negative. Negative coordinates, however, move the cursor off the page, which should be avoided.

The MZIP command is ignored in the path mode graphics. To move to a zero-relative position in a path construction, use the PMZIP (in Path, Move to Zero-relative Position) command.

## File

```
!R! RES; UNIT C; STM 2; SLM 2;
SFNT 'Helvetica-Nr';
MZIP 0, 0; BOX 40, 40; SPD .2;
MZIP 0, 4; TEXT '< = = = Edge limits';
MZIP 0, 0; CIR .1; TEXT, L; TEXT ' MZIP 0, 0;';
MZIP 6, 0; CIR .1; TEXT, L; TEXT ' MZIP 6, 0;';
MZIP 0, 2; CIR .1; TEXT, L; TEXT ' MZIP 0, 2;';
MZIP 6, 2; CIR .1; TEXT, L; TEXT ' MZIP 6, 2;';
PAGE;
EXIT;
```

*Printout*

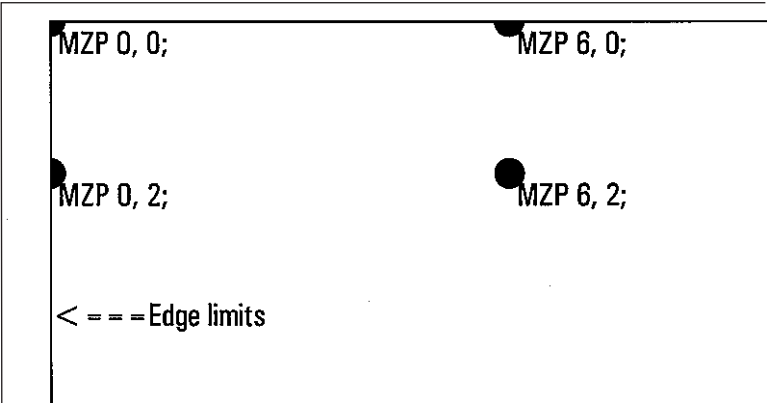

*Related Commands*

MAP, MRP, MRPA



# NEWP — start NEW Path

## Format

```
NEWP;
```

## Parameter

None

## Function

The NEWP command empties the current path and starts a new path. A path construction ends with the CLSP (CLoSe Path) command or with any painting operator that paints the path or draws a line along it (STRK, FILL).

For a full description of path, refer to *Chapter 1* of the *Technical Reference* manual.

## File

```
!R! RES; UNIT C;

NEWP;
PMZP 5, 5;
PDRP 1, -2, 3, 0, -1, 2, -3, 0;
STRK; CMNT Stroking the path;

NEWP;
PMZP 10, 5;
PDRP 1, -2, 3, 0, -1, 2, -3, 0;
GPAT .5; FILL 1; CMNT Filling the path;

PAGE; EXIT;
```

## Printout



## Related Commands

CLSP, FILL, STRK

# OTRY — select paper Output TRaY

## *Format*

OTAY *tray*;

## *Parameter*

### *tray*:

1 = printing system's face-down output tray  
2 = face-up output tray of the printing system or the option stacker  
3 = face-down output tray of the option stacker  
4 = face-up output tray of the option stacker (subtray)  
5 = job separator  
7 = face-down output tray of option stacher (subtray)  
11 = face-down output tray of the option mailbox 1  
12 = face-up output tray of the option mailbox 1  
13 = face-down output tray of the option mailbox (all trays)  
14 = face-up output tray of the option mailbox (all trays)  
21 = face-down output tray of the option mailbox 2  
22 = face-up output tray of the option mailbox 2  
31 = face-down output tray of the option mailbox 3  
32 = face-up output tray of the option mailbox 3  
41 = face-down output tray of the option mailbox 4  
42 = face-up output tray of the option mailbox 4  
51 = face-down output tray of the option mailbox 5  
52 = face-up output tray of the option mailbox 5  
61 = face-down output tray of the option mailbox 6  
62 = face-up output tray of the option mailbox 6  
71 = face-down output tray of the option mailbox 7  
72 = face-up output tray of the option mailbox 7

## *Function*

The OTRY command instructs the printing system to deliver pages to the corresponding output stack of the printing system or the option stacker. The selected tray remains in effect until changed by another OTRY command. The default value is 1: the printing system's face-down tray.

If an optional device such as a stacker, a document finisher, or a sorter is installed, the *tray* value 2 instructs the printing system to deliver printed pages to its face-up tray; the value 3 delivers the pages to its face-down tray. The *tray* values of 5, 7, 11, 12, 13, 14, 21, 22, 31, 32, 41, 42, 51, 52, 61, 62, 71, and 72 are valid for certain copiers installed with the applicable option device.

The OTRY command should be placed at the top of a file or program.

*File*

```
!R! OTRY 2; EXIT;
```

```
PAGE 1
```

On printers with only one paper tray this file will be delivered face-down as usual, page 1 first.

```
!R! PAGE; EXIT;
```

```
PAGE 2
```

PAGE 2 next, and so on, stacking in the correct order.

```
!R! PAGE; EXIT;
```

```
PAGE 3
```

But on printers with two paper trays this file will be delivered to the face-up tray with the pages in reverse order, page 3 on top.

```
!R! PAGE; EXIT;
```

# PAGE — start new PAGE

## *Format*

PAGE ;

## *Parameter*

None

## *Function*

The PAGE command causes a page break without resetting the printer. Subsequent data will be printed on a new page with no changes made to page formatting parameters such as spacing, margins, font selection.

If there is no printing on the current page, the PAGE command will have no effect. It does not feed out a blank page.

## *File*

```
!R! RES;  
SLM 1; STM 1;  
EXIT;  
Page 1:  
Following this line, a page break will occur.  
!R! PAGE; EXIT;  
Page 2:
```

# PANT — create PANTone color palette

## COLOR

### Format

PANT *color-number* or '*color-name*' ;

### Parameters

#### *color-number*:

Pantone color number, integer from 100 to 5999

#### *color-name*:

Pantone color name

### Function

The PANT command can be used to specify the PANTONE uncoated color by number or name. (See <http://www.pantone.com> for details on Pantone Colors.)

The following should be noted when specifying a color by its PANTONE number.

- In PANTONE numbers, a C or U symbol is added after the number to distinguish between coated and uncoated. These symbols are not necessary when a color is specified using the PRESCRIBE command. In fact, the command becomes invalid if one of these symbols is added to a number. If there is no color corresponding to the number specified in the valid range, then the color black is specified.

The following should be noted when specifying a color by its PANTONE name.

- Always enclose character strings in single quotation marks or double quotation marks. Character strings may be entered in either upper case or lower case.
- In names that contain a combination of words and numbers, such as *Red 032* and *Cool Black 2*, a space must be inserted between the words and number. If spaces are not inserted, the words and numbers will be recognized as a different name, in which case the color will not be specified correctly.
- If a nonexistent name is specified, the command is ignored.

When PANTONE is specified, a color space RGB palette is created, and a color corresponding to the specified color number is assigned to the palette and selected. The color is always assigned to index number 0.

Colors may be added to the palette or changed. However, when a color is assigned to index number 0, the colors created with the PANT command are discarded.

The palette remains valid unless a new one is generated. Therefore, colors created with the PANT command can be selected using SCOL 0;.

If the PANT command is issued multiple times (either in succession or not in succession), the color which is valid is the color corresponding to the last entered command. The colors corresponding to previously entered commands are deleted.

The palette ID number remains valid (active) and does not change.

A total of 45 colors can be specified by name (see list below). These colors must be spelled as shown, although the letters may be in upper case or lower case.

Process Yellow	Process Magenta	Process Cyan	Process Black
Process Blue			
Red 032	Warm Red	Rubine Red	Rhodamine Red
Blue 072 Reflex	Blue	Orange 021	Yellow
Green	Purple	Violet	
Black	Black 2	Black 3	Black 4
Black 5	Black 6	Black 7	
Warm Gray 1	Warm Gray 2	Warm Gray 3	Warm Gray 4
Warm Gray 5	Warm Gray 6	Warm Gray 7	Warm Gray 8
Warm Gray 9	Warm Gray 10	Warm Gray 11	
Cool Gray 1	Cool Gray 2	Cool Gray 3	Cool Gray 4
Cool Gray 5	Cool Gray 6	Cool Gray 7	Cool Gray 8
Cool Gray 9	Cool Gray 10	Cool Gray 11	

The PANT command may not work with certain printer models and versions. Set the print quality to Quick mode when this command is used with model FS-5800C.

PANTONE colors cannot be used by the PANT command in KPDL emulations.

## *File*

```
!R! PANT 'Cool Gray 1'; EXIT;
```

# PARC — in Path, draw ARC

## Format

PARC *x-coordinate*, *y-coordinate*, *radius*, *start-angle*,  
*end-angle* ;

## Parameters

*x-coordinate*, *y-coordinate*:

coordinates of the center of arc, measured from the left and top edge limits

*radius*:

radius of arc

*start-angle*:

starting angle, measured counterclockwise from the positive *x* axis

*end-angle*:

ending angle, measured counterclockwise from the positive *x* axis

## Function

This command first of all adds a line extending from the current position to the beginning of the arc, then adds an arc to the current path. Coordinates and radius are measured in the units designated by the UNIT command; the starting and ending angles are measured counterclockwise from the positive *x* axis.

To draw a simple arc as specified by the parameters, the cursor must be moved to the beginning of the arc by using the PMRA command. (See the example below.)


The arc is drawn at the starting angle through the ending angle in counterclockwise direction only. After the path is stroked, the cursor remains at the ending angle of the arc.

## File

```
!R! RES; UNIT C;
NEWP; SPD .1;
PMZP 5.0, 10.0;
PARC 6.5, 12.5, 1.5, 180, 270;
STRK;

NEWP;
CMNT This program draws a circle;
PMRA 6.5, 18, 1.5, 0;
CMNT Moves cursor 1.5 cm by 0 degree;
PARC 6.5, 18, 1.5, 0, 360;
STRK;
PAGE; EXIT;
```

*Printout*

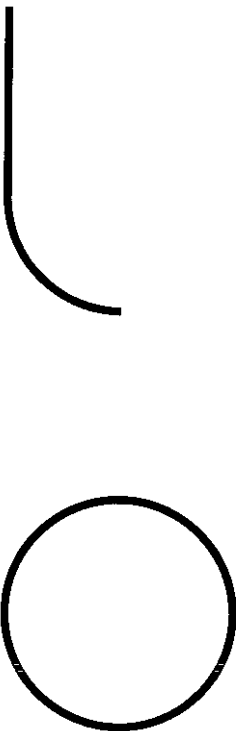



# PAT — select fill PATtern

## *Format*

PAT *pattern-number*[, *resolution*];

## *Parameters*

### *pattern-number:*

number from 1 to 60 or 100 to 105

### *resolution:*

300 [dpi], 600 [dpi], or 1200 [dpi]

## *Function*


The PAT command specifies the shading pattern used by the BLK and ARC commands and to fill a path.

The *pattern-number* should be any number between 1 through 60 if a resident pattern is selected. A full list of the printer's resident patterns appear on the following page.

Pattern numbers 100 through 105 are reserved for selecting the expanded patterns and can be generated by using the XPAT command. If you specify a pattern number between 100 and 105 when no expanded patterns are defined, the printer selects the No. 1 (solid black) resident pattern.

Variable resolution support is valid for 600 dpi and 1200 dpi models only.

## Resident Fill Patterns (300 dpi)

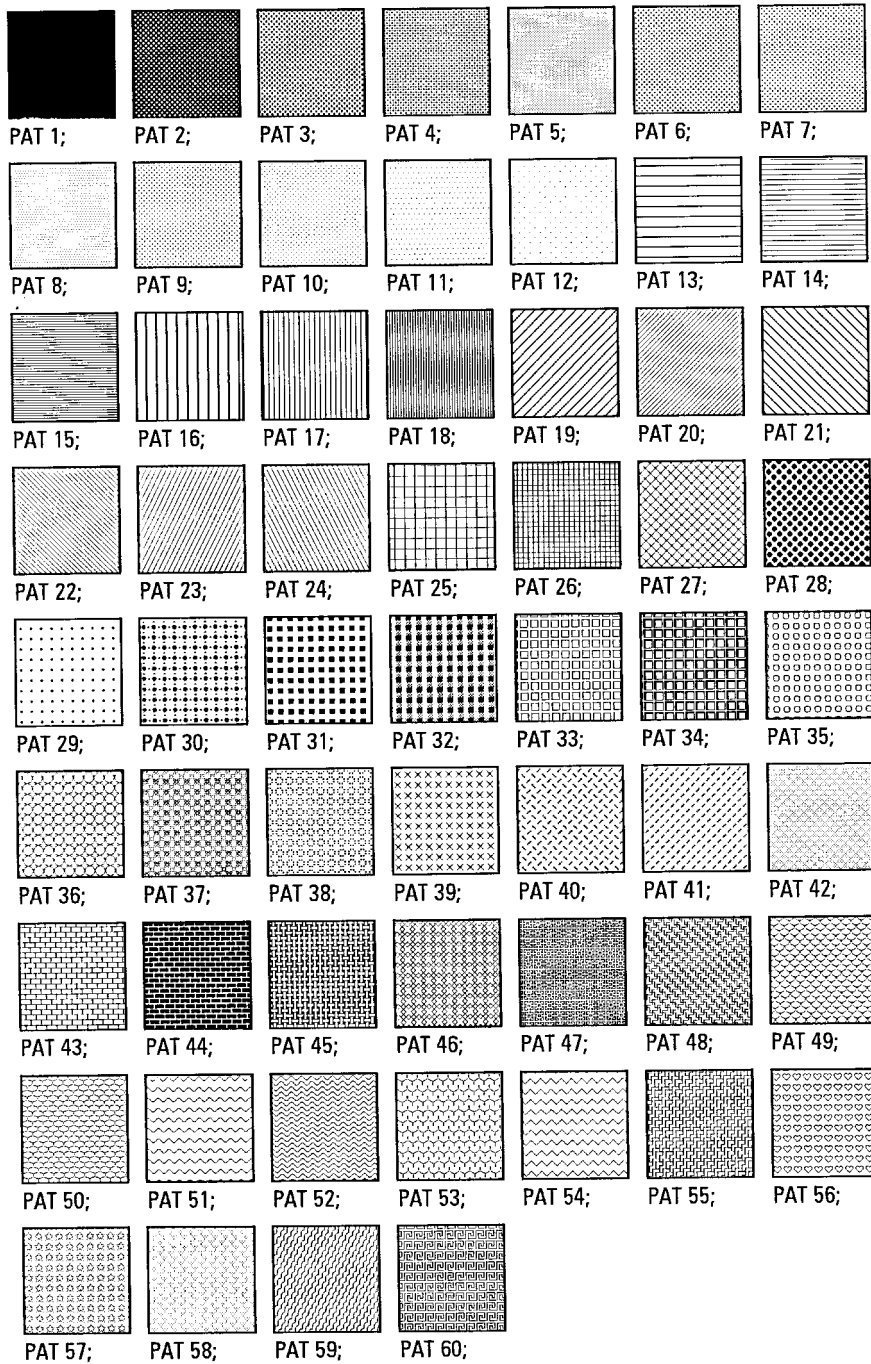

# PCRP — in Path, Curve to Relative Position

## Format

```
PCRP x1, y1, x2, y2, x3, y3;
```

## Parameters

*x1*, *y1*:

coordinates of the first control point as measured from the current cursor position

*x2*, *y2*:

coordinates of the second control point as measured from the current cursor position

*x3*, *y3*:


coordinates of the end point as measured from the current cursor position

## Function

The PCRP command adds a Bézier curve segment to the path, starting from the current cursor point, referred to as current position as shown at right, through two control points of (*x1*, *y1*) and (*x2*, *y2*), and ending at (*x3*, *y3*).

### Example:


```
NEWP ;
PMZP 5, 10 ;
PCRP 2.5, -4, 7, -5, 7, 0 ;
STRK ;
```

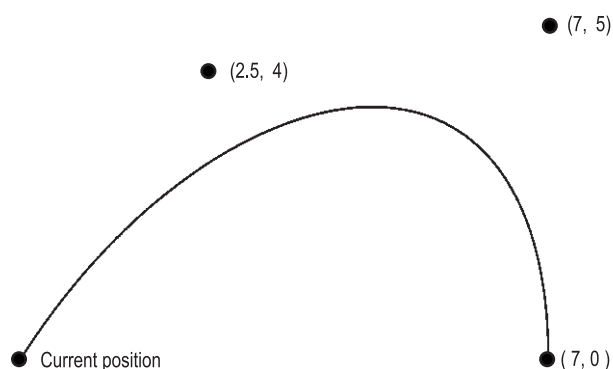

## File

```
!R! RES; UNIT C;
NEWP;
SPD .1;
PMZP 3, 3;
PCRP 4, 2, 5, 1.5, 6, 1.8;
STRK;
PAGE;
EXIT;
```


## Printout

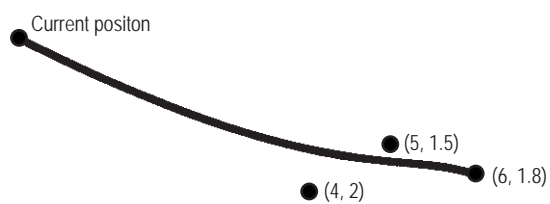

## File

```
!R! RES; UNIT C;
NEWP;
SPD .1;
PMZP 3, 3;
PCRP 5.5, 1.5, 1.5, 5.5, 7, 7;
STRK;
PAGE;
EXIT;
```

## Printout

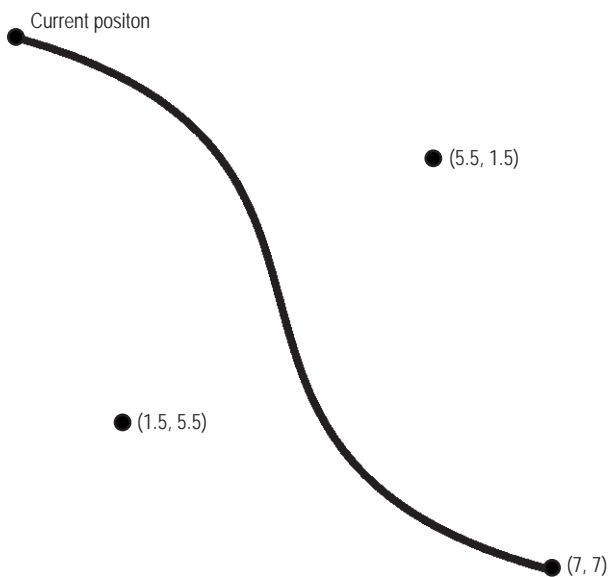

# PCZP — in Path, Curve to Zero-relative Position

## Format

PCZP  $x1$ ,  $y1$ ,  $x2$ ,  $y2$ ,  $x3$ ,  $y3$ ;

## Parameters

$x1$ ,  $y1$ :

coordinates of the first control point as measured from the left and top edge limits of paper

$x2$ ,  $y2$ :

coordinates of second control point as measured from the left and top edge limits of paper

$x3$ ,  $y3$ :


coordinates of end point as measured from the left and top edge limits of paper

## Function

The PCZP command adds a Bézier curve segment to the path, starting from the current cursor position through two controls points of ( $x1$ ,  $y1$ ) and ( $x2$ ,  $y2$ ), and ending at ( $x3$ ,  $y3$ ), measured from the left and top edge limits of the paper.

### Example:


```
NEWP ;
PMZP 1.5, 3.5 ;
PCZP 4.5, 1.5, 5.5, 5.5, 8, 3.5 ;
STRK ;
```

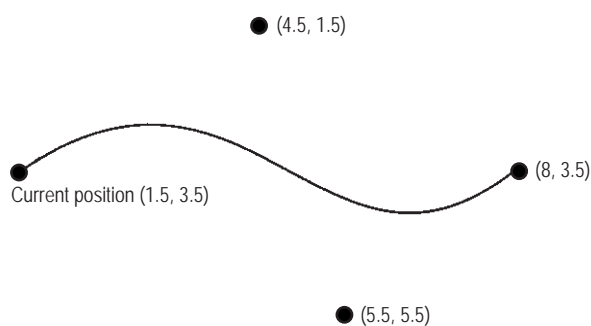

## *File*

```
!R! RES; UNIT C;  
PMZP 3, 6;  
PCZP 11, 3, 2, 2, 9, 6;  
STRK;  
PAGE;  
EXIT;
```

## *Printout*

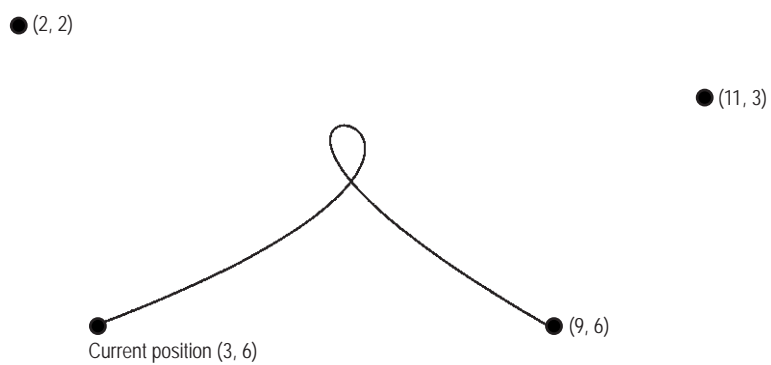

# PDIR — set Print DIRection

## *Format*

PDIR *angle* ;

## *Parameter*

### *angle:*

angle in degrees; in 90° increments in a counterclockwise direction

0 = portrait

90 = landscape

180 = reverse portrait

270 = reverse landscape

## *Function*


The PDIR command rotates the coordinates of the logical page by the degree represented by the value of the *angle* which orients the page in one of four directions. It does not change the current page orientation.

When the print direction is changed by the PDIR command, the logical page coordinate system is transformed so the margins maintain the same printable area (the area enclosed by the margins) as shown on next page. The current position uses the same coordinate values as the previous print direction; line-spacing, and the character-spacing of the current font are effected by the new print direction as are the raster and pattern graphics.


Scalable fonts should be used for printed text in different page directions. The PDIR command rotates only the coordinates of the logical page on the current page orientation and does not affect the current page orientation. A bitmap font prints text according to the current page orientation (it adheres to the current font mode).

The PDIR command does not cause a page break, so you can print text in four different directions on the same page as shown in the sample file on the next page.


Portrait (PDIR 0;)

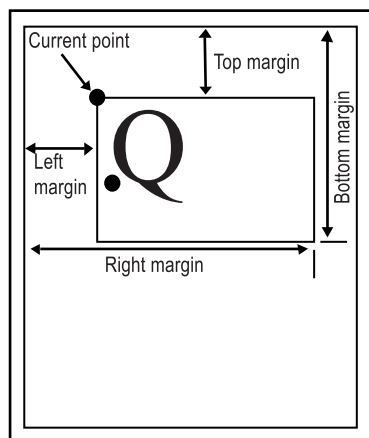


Landscape (PDIR 90;)

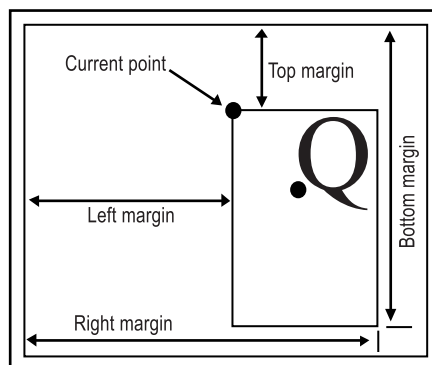

Reverse Landscape (PDIR 270;)

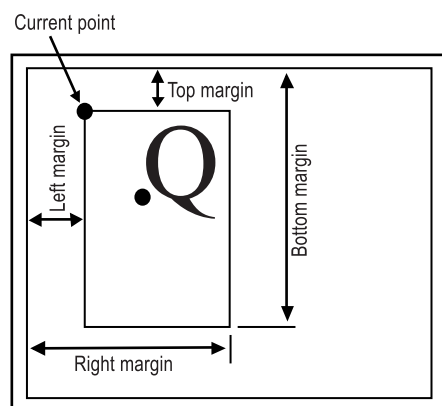

Reverse Portrait (PDIR 180;)

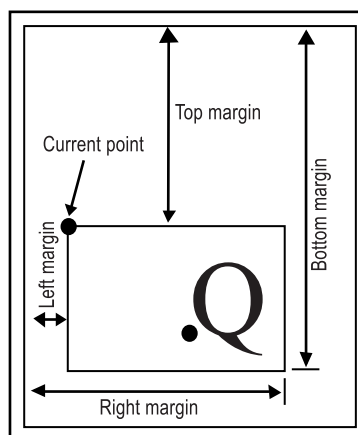

## *File*


```
!R! RES;
UNIT P; SFNT 'Helvetica', 8;
UNIT C; MZP 10, 12; SPD .144; CIR .075;

PDIR 270; TEXT ' ENDLESS VARIETY AND VERSATILITY';
PDIR 180; TEXT ' ENDLESS VARIETY AND VERSATILITY';
PDIR 90; TEXT ' ENDLESS VARIETY AND VERSATILITY';
PDIR 0; TEXT ' ENDLESS VARIETY AND VERSATILITY';

PAGE;
EXIT;
```



*Printout*

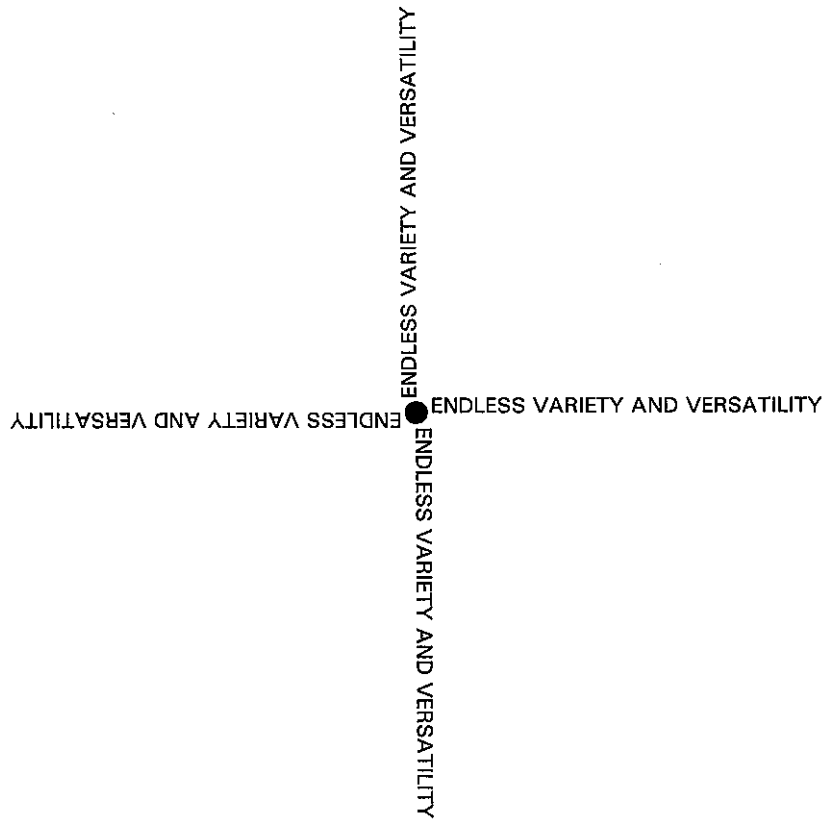

## PDRP — in Path, Draw to Relative Position

### *Format*

PDRP *x-coordinate* , *y-coordinate* , ... ;

### *Parameters*

#### *x-coordinate, y-coordinate:*

coordinates as measured from the current cursor position

### *Function*


The PDRP command adds a line to the current path from the current cursor position to a specified relative position, measured in the units designated by the UNIT command. The cursor moves to the specified coordinates. The coordinates may be positive or negative. Negative coordinates may draw the line extending outside the current page. The thickness of the line is designated by the SPD command.

Multiple pairs of coordinates may be specified. The printer then draws a connected series of line segments, proceeding from one point to the next. For example, PDRP 1, 2, 3, 4; is equivalent to PDRP 1, 2; PDRP 3, 4;.

### *File*

```
!R! UNIT C; SPD .3;
  CMNT Cube;
  NEWP;
  PMZP 5, 15;
  PDRP 4, 0, 2, -2, 0, -4, -4, 0, -2, 2, 0, 4;
  CLSP;
  PMRP 4, 0;
  PDRP 0, -4, -4, 0, 4, 0, 2, -2;
  STRK;
  PAGE;
EXIT;
```

*Printout*

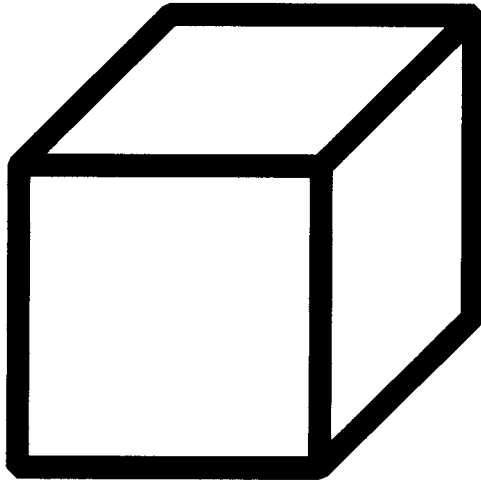

*Related Command*

PDZP

## PDZP — in Path, Draw to Zero-relative Position

### *Format*

PDZP *x-coordinate* , *y-coordinate* ;

### *Parameters*

*x-coordinate, y-coordinate:*

coordinates as measured from the left and top edge limits of the current page


### *Function*

The PDZP command adds a line to the current path from the current cursor position to a position specified relative to the top and left edge limits of the current page, measured in the units designated by the UNIT command. The cursor moves to the specified coordinates.

The coordinates may be positive or negative. Negative coordinates may draw the line extending outside the current page. The thickness of the line is designated by the SPD command.

### *File*

```
!R! RES; UNIT C;
      NEWP;
      PMZP 0, 0; PDZP 0, 5;
      PMZP 1, 0; PDZP 0, 4;
      PMZP 2, 0; PDZP 0, 3;
      PMZP 3, 0; PDZP 0, 2;
      PMZP 4, 0; PDZP 0, 1;
      PMZP 5, 0; PDZP 0, 0;
      STRK;
      PAGE;
EXIT;
```

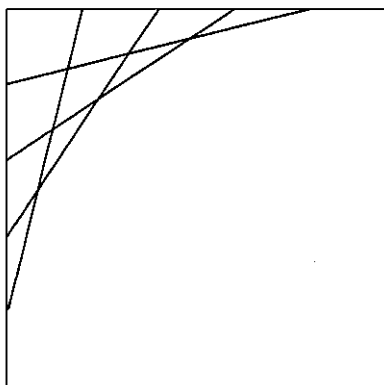*Printout**Related Command*

PDRP

## PELP — in Path, draw ELLipse

### *Format*

PELP *x-diagonal*, *y-diagonal* [ , *x-start*, *y-start*, *x-end*, *y-end* [ , *ellipse-path* ] ] ;

### *Parameters*

#### *x-diagonal:*

X-coordinate of diagonal point of bounding box

#### *y-diagonal:*

Y-coordinate of diagonal point of bounding box

#### *x-start:*

X-coordinate of start control point of the ellipse

#### *y-start:*

Y-coordinate of start control point of the ellipse

#### *x-end:*

X-coordinate of end control point of the ellipse

#### *y-end:*

Y-coordinate of end control point of the ellipse

#### *ellipse-path:*

ellipse options:

N = define an ellipse path


C = define an ellipse-based arc path

P = define an ellipse-based pie shape path

### *Function*

The PELP command adds an ellipse-based path to the current path. This command cannot paint figures by itself. In addition, STRK or FILL is required. A complete ellipse path will be defined if the parameters in brackets are omitted. Executing this command will close current sub-paths.

An error will result and the command has no effect if the bounding box is specified as a straight line or a point.

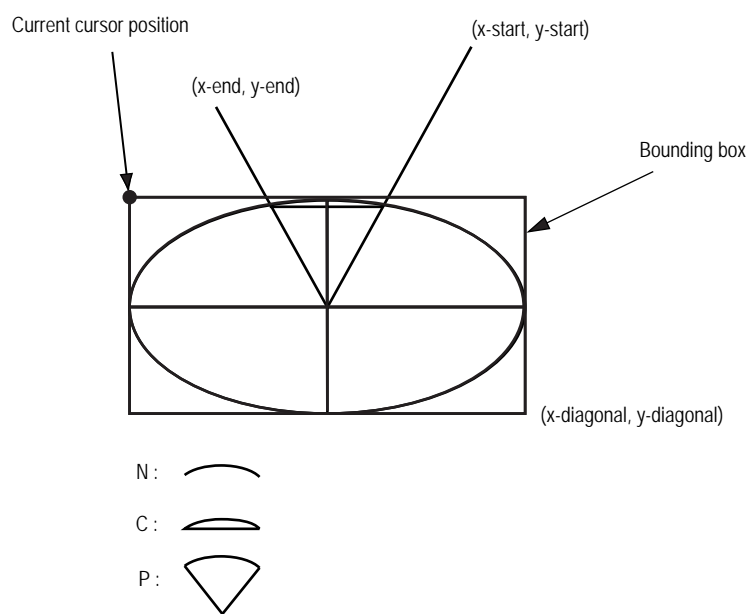

## File

```

!R!
RES;
UNIT C;

MZP 0, 0;
BOX 2, 3;
NEWP;
PMZP 0, 0;
PELP 2, 3, 2, 0, 0, 0, 0, N;
STRK;

MZP 5, 5;
BOX 2, -3;
NEWP;
PMZP 5, 5;
PELP 2, -3, 2, 0, 0, 0, 0, N;
STRK;

MZP 10, 5;
BOX -2, -3;
NEWP;
PMZP 10, 5;
PELP -2, -3, -2, 0, 0, 0, 0, N;
STRK;

MZP 15, 0;
BOX -2, 3;
NEWP;
PMZP 15, 0;
PELP -2, 3, -2, 0, 0, 0, 0, N;
STRK;

RES;
EXIT;

```

## PIE — draw PIE chart

### *Format*

PIE *radius*, *starting-angle*, *slice-size*, ...;

### *Parameters*

#### *radius:*

radius of the pie chart

#### *starting-angle:*

position of the first slice

#### *slice-size:*

relative sizes of the slices

### *Function*

The PIE command is a standard mode graphics command which draws a pie chart centered at the current cursor position. The sizes of the slices may be specified using any convenient non-negative integers. (PIE commands are ignored if they contain negative slices, or slices with decimal fractions.) The sum of the slice sizes should not exceed 9999. The total length of the command must not exceed 255 characters.


The printer automatically converts the slice sizes to angles totaling 360 degrees. It draws the first slice starting at the position specified by the second parameter (0 = vertically up), then draws the other slices in order, proceeding in a clockwise movement. The line thickness is designated by the SPD command.

### *File*

```
!R! RES; UNIT C;  
  MZP 10, 10;  
  PIE 3, 0, 10, 20, 30, 40;  
  PAGE;  
EXIT;
```



*Printout*

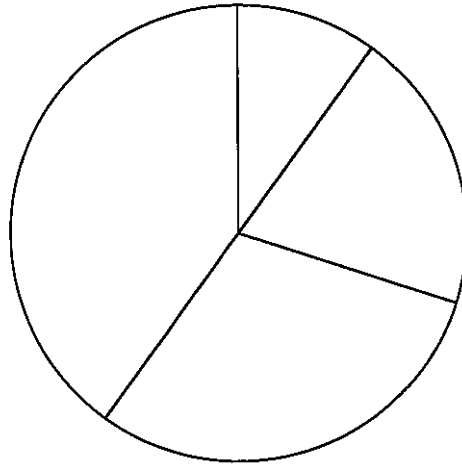

## PMRA — in Path, Move to Relative position specified by Angle

### Format

PMRA *x-coordinate* , *y-coordinate* , *distance* , *angle* ;

### Parameters

#### *x-coordinate, y-coordinate:*

coordinates as measured from the left and top edge limits of the page

#### *distance:*

distance specified in increments governed by the unit value.

#### *angle:*


angle in degrees, measured counterclockwise from the positive *x* axis

### Function

The PMRA command moves the cursor to a position in a path construction, specified relative to the left and top edge limits of the page, then across a distance specified relative to the *x*- and *y*-coordinate and at a specified angle.

It should be noted that the *x* and *y* coordinates are measured from the top and left edge limits of the page, and not from the current cursor position.

The coordinates and distance are measured in the units designated by the UNIT command. The angle is measured counterclockwise from the positive *x* axis.

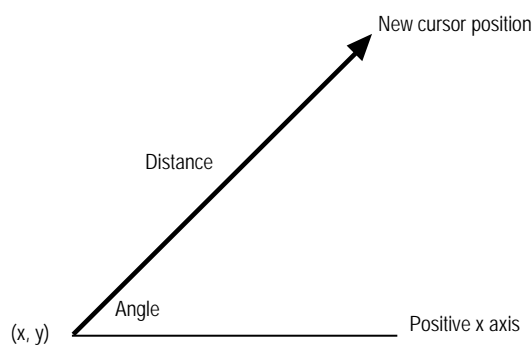

### *File*

```
!R! RES; UNIT C; SPD 0.2;
```

```
NEWP;
```

```
PMRA 10, 19, 5, 45;
```

```
PARC 10, 19, 5, 45, 135;
```

```
STRK;
```

```
PAGE; EXIT;
```

### *Printout*



## PMRP — in Path, Move to Relative Position

### *Format*

PMRP *x-coordinate* , *y-coordinate* ;

### *Parameters*

*x-coordinate, y-coordinate:*

coordinates as measured from the current cursor position

### *Function*


The PMRP command moves the cursor from its current position to a specified relative position in a path construction, measured in the unit value designated by the UNIT command.

The coordinates may be positive or negative.

### *File*

```
!R! RES; UNIT C;
NEWP;
PMZP 5, 5;
PDRP 5, 0, 0, 5, -5, 0, 0, -5; GPAT .2; FILL 1;
PMRP 4, 4;
PDRP 5, 0, 0, 5, -5, 0, 0, -5; GPAT .8; FILL 1;
PAGE;
EXIT;
```

*Printout*

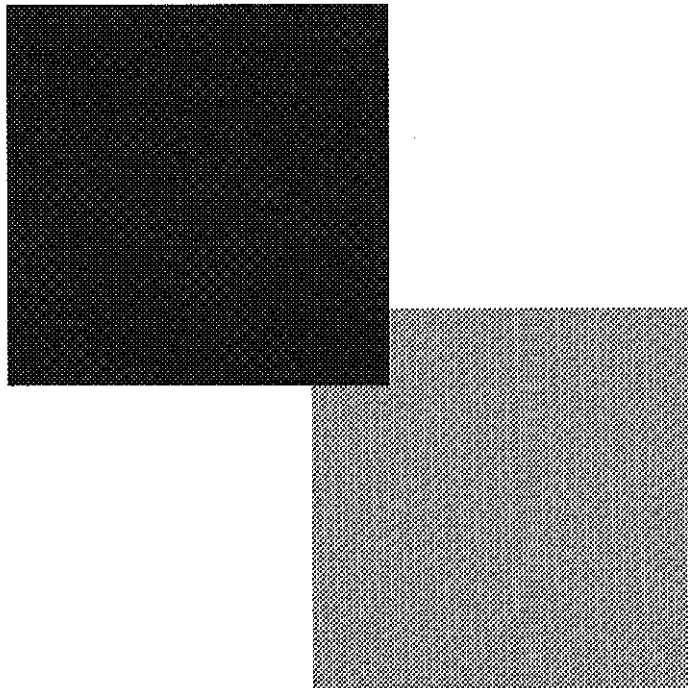

*Related Command*

PMZP

# PMZP — in Path, Move to Zero-relative Position

## Format

PMZP *x-coordinate* , *y-coordinate* ;

## Parameters

*x-coordinate*, *y-coordinate*:

coordinates as measured from left edge limit of the current page

## Function


The PMZP command moves the cursor to a position in a path construction, specified relative to the top and left edge limits of the current page, and measured in the units designated by the UNIT command.

The coordinates may be positive or negative. Negative coordinates move the cursor off the current page.

## File

```
!R! RES; UNIT C; STM 2; SLM 2;
SFNT "Helvetica-Nr";
NEWP;
PMZP 0, 0; SPD .2;
PMZP 0, 4; FONT 13; TEXT '< = = = Paper edge limits';
PMZP 0, 0; PARC 0, 0, .1, 0, 360;
PMRP 0, .333; TEXT '    PMZP 0, 0;';
PMZP 4, 0; PARC 4, 0, .1, 0, 360;
PMRP 0, .333; TEXT '    PMZP 4, 0;';
PMZP 3, 6; PARC 3, 6, .1, 0, 360;
PMRP 0, .333; TEXT '    PMZP 3, 6;';
PMZP 7, 7; PARC 7, 7, .1, 0, 360;
PMRP 0, .333; TEXT '    PMZP 7, 7;';
STRK;
PAGE;
EXIT;
```

## Printout

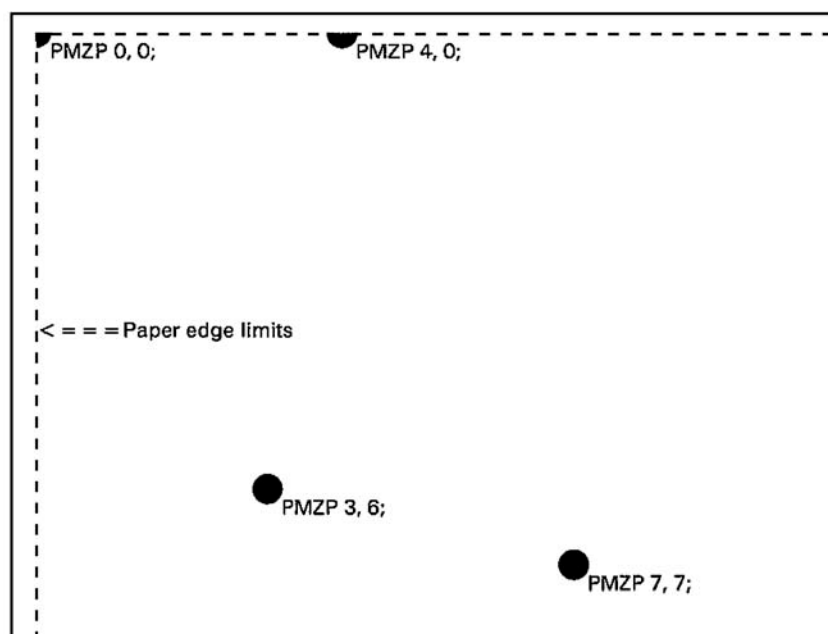

## Related Command

PMRP

# PNCH — PuNCH

## Format

```
PNCH[ mode ] ;
```

## Parameter

*mode*:

number of punched holes:

1 = 2 (Europe) or 3 (U.S.)

2 = 4 (Europe) or 2 (U.S.)

51 = 2 (Europe) or 3 (U.S.), left

52 = 4 (Europe) or 2 (U.S.), left

61 = 2 (Europe) or 3 (U.S.), right


62 = 4 (Europe) or 2 (U.S.), right

71 = 2 (Europe) or 3 (U.S.), top

72 = 4 (Europe) or 2 (U.S.), top

## Function

The PNCH command lets the option finisher perform punching through the printed page with the number of holes depending on the country. *mode* selects either the standard or additional number of holes for the country. For example, *mode 1* selects 2-hole punching for European countries and *mode 2* selects 4-hole punching for European countries.

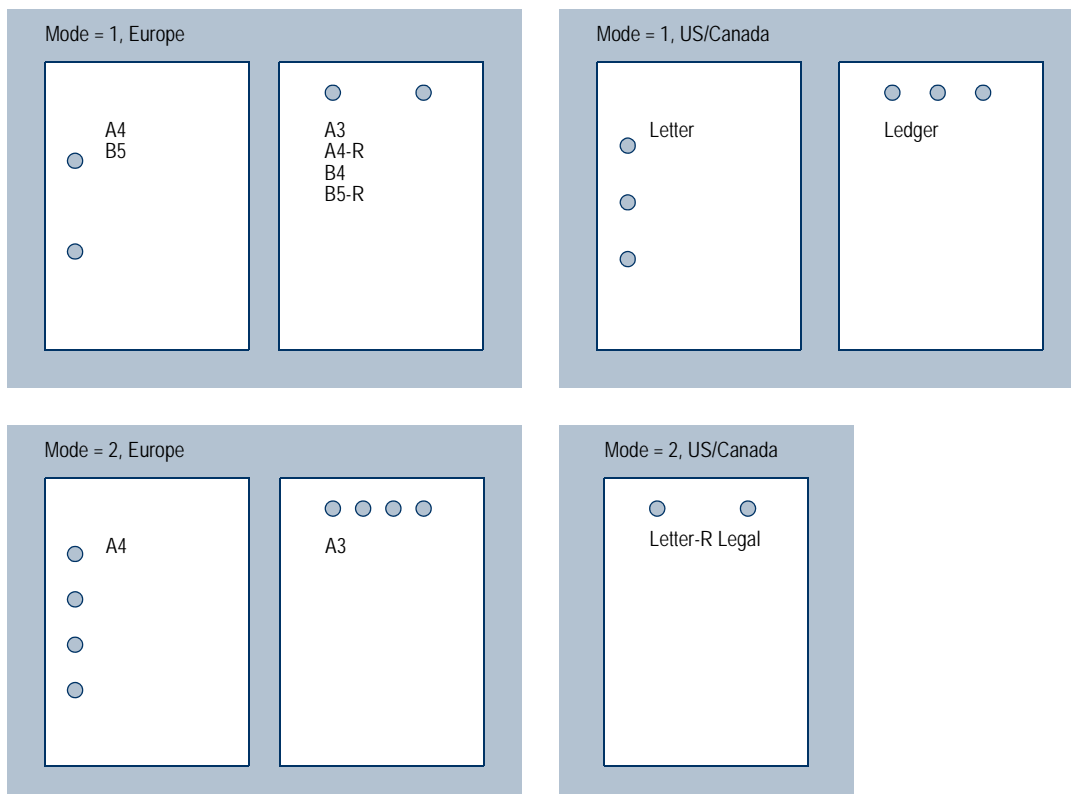



The *mode* parameters of 51, 52, 61, 62, 71, and 72 are valid for some copier models only. These parameters allow to position the holes in either of the left, right, and top sides of the page by logically aligning the page in reference to the punched holes.

Note that the *mode* parameter is valid for a finisher with the dual mode punching system, such as the DF-71, only. It becomes invalid if it is specified in a finisher with the standard punch unit. With a finisher with the standard punch unit only (e.g. the DF-75), the number of punched holes is uniquely determined according to the country of destination and paper size.

Like stapling and other finishing operations, punching is done per one job at a time. Therefore, this command is invalid unless it is used in combination with JOBS. See Page 140.

The option finisher is not switched automatically by this command to perform punching. Therefore, it is necessary in advance to specify the option finisher as the output destination using the STAK 3; command.

## *File*

The following example is for European countries.

```
!R!  
    STAK 3; CMNT Stack to the finisher;  
    PNCH 1;  
    JOBS 1, 1, 2, 0, 0;  
    TEXT 'This page is punched with two holes.';  
    JOBT;  
EXIT;
```

## PRBX — in Path, draw Round BoX

### *Format*

PRBX *width, height, radius;*

### *Parameters*

#### *width:*

width of round box

#### *height:*

height of round box


#### *radius:*

radius of round box corners

### *Function*

The PRBX command adds a round box path to the current path. This command close the sub-paths but does not stroke the path by itself. Therefore, STRK or FILL is required to follow this command.

The parameter value for the width, height and radius of the round box should be positive.

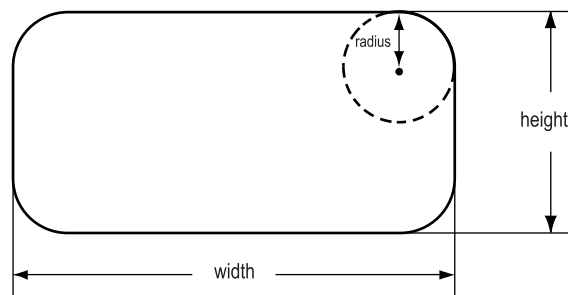

*File*

```
!R! RES; UNIT C;  
SPD 0.125; NEWP;  
PMZP 1, 1;  
PRBX 11.7, 1.7, 0.5; STRK;  
MZP 1.5, 2.15;  
SFNT "Helvetica-Bd", 24;  
TEXT "CAUTION: HOT SURFACE!";  
PAT 5; NEWP;  
PMZP 1, 4;  
PRBX 5, 2.4, 0.3; FILL;  
MZP 1.4, 4.7;  
SFNT "Helvetica-Nr", 12;  
TEXT "Barefoot Systems, Inc.", L;  
TEXT "4203 Charleston Avenue", L;  
TEXT "P.O. Box 150", L;  
TEXT "Edinburgh, CA 94039-1057";  
  
PAGE;  
EXIT;
```

*Printout*

**CAUTION: HOT SURFACE!**

Barefoot Systems, Inc.  
4203 Charleston Avenue  
P.O. Box 150  
Edinburgh, CA 94039-1057

# PRRC — in Path, at Relative position, draw aRC

## Format

PRRC *x-coordinate* , *y-coordinate* , *radius* , *start-angle* , *end-angle* ;

## Parameters

### *x-coordinate/ y-coordinate:*

coordinates as measured from the current cursor position

### *radius:*

radius of arc

### *start-angle:*

starting angle, measured counterclockwise from the positive *x* axis

### *end-angle:*


ending angle, measured counterclockwise from the positive *x* axis

## Function

The PRRC command first of all adds a line extending from the current position to the beginning of the arc which is centered at the coordinates relative to the current position, then adds the line and the arc to the current path.


Coordinates and radius are measured in the units designated by the UNIT command; the starting and ending angles are measured counterclockwise from the positive *x* axis. For example, the following example draws an arc extending over the center of the arc:

```
PRRC 1, 1, 0, 180;
```

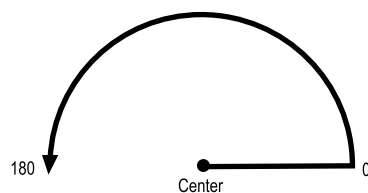

Whereas, the following command, having the reversed starting and ending angles, draws the arc under the center of the arc:

```
PRRC 1, 1, 180, 0;
```

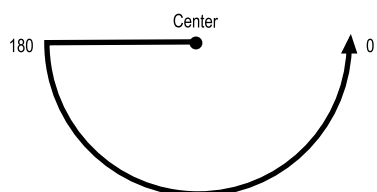


Negative values are acceptable for angle. For example, an angle of 315 degrees is the same as  $-45$  degrees.

### *File*

```
!R! RES;
  SPD 0.05;
  MZP 4.5, 5;
  NEWP;
  PRRC -1, 0, 1, 90, 270;
  PRRC 1, -2, 1, 0, 180;
  PRRC 2, 1, 1, -90, 90;
  PRRC -1, 2, 1, 180, 0;
  STRK;
  PAGE;
EXIT;
```

### *Printout*

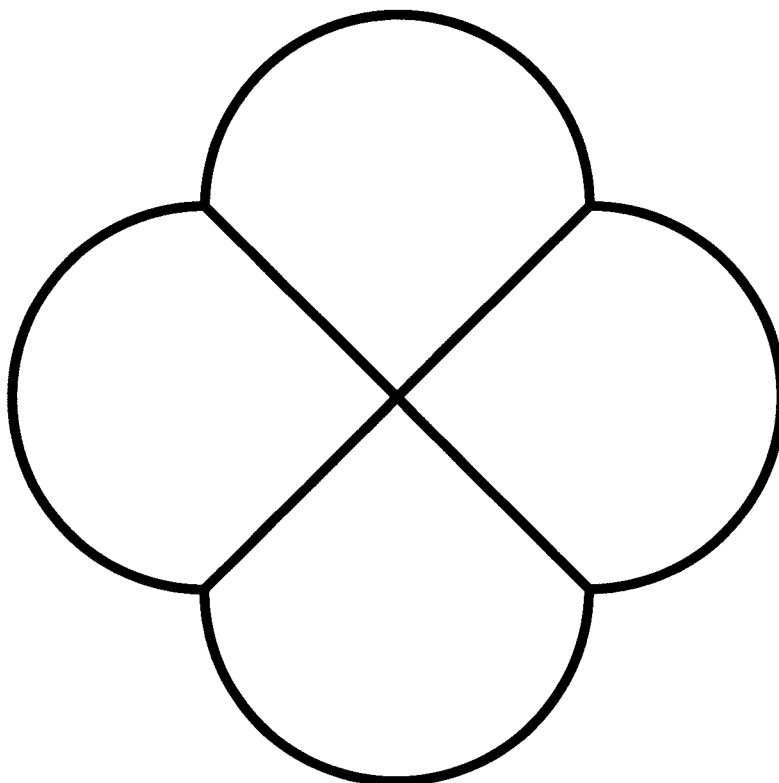

# PSRC — select Paper SouRCe

## Format

```
PSRC mode;
```

## Parameter

*mode*:

```
0 = multi-purpose tray
1 = Cassette 1
2 = Cassette 2
3 = Cassette 3
4 = Cassette 4
5 = Cassette 5
6 = Cassette 6
99 = envelope feeder
100 = automatic
```

## Function

The PSRC command selects whether to feed paper from the cassette, multi-purpose tray, cassettes of the paper feeders, or the envelope feeder. Each cassette of the paper feeder is assigned a cassette number in the order from the top as 1 through 6.

Mode 100 of PSRC enables the automatic cassette switching depending on media type and size. The printing system automatically selects the paper cassette having the paper that matches the type and size defined by MTYP and SPSZ respectively.

The PSRC command causes a page break, so it should be placed at the beginning of a file or program, or at the top of a new page. The current paper source will remain selected if the specified cassette is not installed.

## File

```
!R! RES; UNIT C;

SFNT "Helvetica-Nr", 24;
PSRC 1;
TEXT "This page is fed from the default cassette.";
PAGE;
PSRC 0;
TEXT "This page is fed from the multi-purpose tray."
PSRC 100; SPSZ 10;
TEXT "This page is printed on a A3 sheet that the print
system looks for automatically.";
PAGE;
EXIT;
```

# PXPL — PiXel PLacement

## Format

PXPL *mode* ;

## Parameter

*mode*:


pixel placement mode

0 = Grid intersection

1 = Grid centered

## Function

The PXPL command determines how pixels are rendered in images. It selects whether pixels are centered at grid intersections or inside the boxes created by the grid. See the figure below.

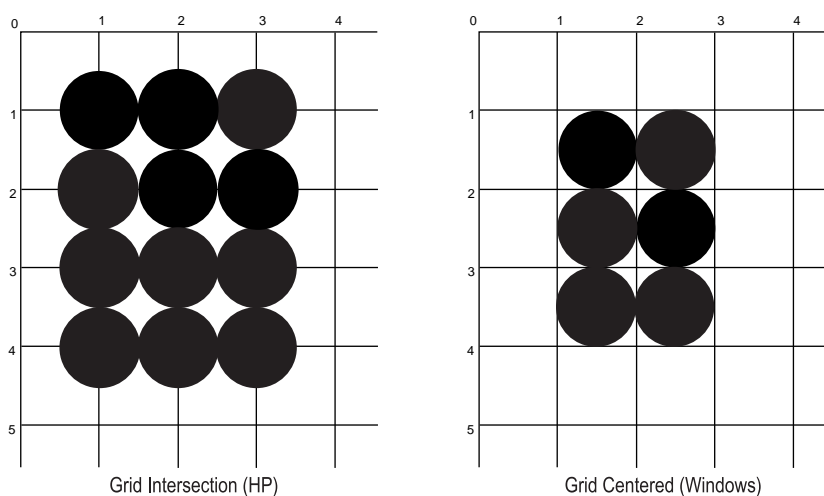

Assuming a rectangle extending from coordinate (1, 1) to coordinate (3, 4), a different result is obtained depending on each pixel placement mode. Grid intersection is default to HP PCL; and grid centered mode is used by Microsoft Windows.

This command is ignored when used with DAP, DRP, DRPA, DZP, BOX, BLK, CIR, ARC, or PIE. This command has no effect for text or images.

The printing system is reset to grid intersection mode by the RES command.

## **!R!** — PRESCRIBE start sequence

### *Format*

*!command-recognition-character!*

### *Parameter*

#### *command-recognition-character:*

capital R, unless changed by the SCRC or FRPO P9 command

### *Function*

When the printing system receives !R!, it enters PRESCRIBE mode and treats the following data as PRESCRIBE commands. The command that follows the !R! command should be separated from the !R! by a space or placed on a new line.

The command recognition character can be changed from capital R to another character. Temporary changes can be made using the SCRC (Set Command Recognition Character) command described later. The RES command restores the command recognition character to its FRPO-set value. Permanent changes can be made with the FRPO command described in *Chapter 6* of the *Technical Reference* manual.

If !R! is used by mistake when the printer is already in the PRESCRIBE mode, the printer ignores the mistaken !R! and whatever follows, up to the next semicolon.


### *File*

```
!R! SFNT 'Helvetica', 14; EXIT;  
Following these five  
lines, the printer  
enters PRESCRIBE  
mode to execute  
commands.  
!R! UNIT I;  
BOX 2, 2;  
BOX 1, 1, E;  
CIR 1;  
BOX 1, 1;  
PAGE;  
EXIT;
```



### *Printout*

Following these five lines, the printer enters PRESCRIBE mode to execute commands.

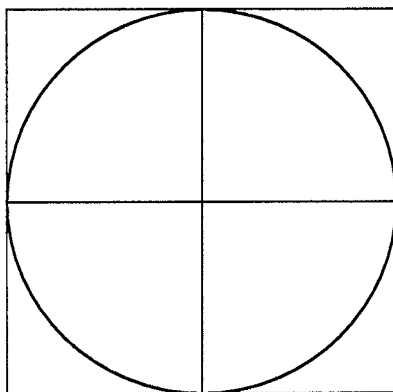

### *Related Commands*

EXIT, SCRC

# RCLT — Rotated CoLLaTion

## Format


RCLT ;

## Parameter

None

## Function

The RCLT command instructs the printing system to stack the sets on the tray in alternating orientations. The RCLT command require a hard disk installed in the printing system or a RAM disk.

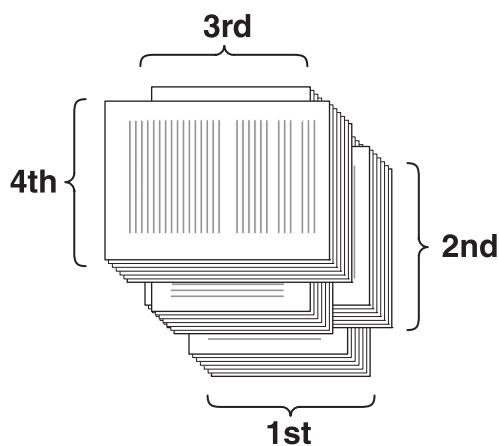

The RCLT command is available when printing using A4, B5 and letter size paper. During printing, the same size paper must be loaded into two separate cassettes. For example, Portrait (A4) and Landscape (A4-R) would be used when printing onto A4 paper. The MP tray can also be used as a paper source.

## File

```
!R! RES; RCLT; STAK 1;
JOBS 0, 5, 0, 0;
TEXT "Page 1"; PAGE;
TEXT "Page 2"; PAGE;
TEXT "Page 3"; PAGE;
JOBT; EXIT;
```

# RDMP — Received-data DuMP

## *Format*

RDMP ;

## *Parameter*

None

## *Function*

The RDMP command causes all subsequent data to be printed in hexadecimal form (two hexadecimal digits per character) until an ENDD (END Dump) command is received, or until the printing system runs out of data and times out.

## *Related Command*

ENDD

## Sample

```

1B 25 2D 31 32 33 34 35 58 40 50 4A 4C 20 45 4E      .%-12345X@PJL EN
54 45 52 20 4C 41 4E 47 55 41 47 45 3D 50 43 4C      TER LANGUAGE=PCL
0A 1B 45 1B 26 6C 31 47 1B 26 6C 31 58 1B 26 6C      ..E.&l1G.&l1X.&l
30 53 1B 26 6C 30 6F 32 61 34 64 31 65 34 32 46      0S.&l0o2a4dle42F
1B 26 6C 31 48 1B 2A 74 33 30 30 52 1B 2A 70 30      .&l1H.*t300R.*p0
59 1B 2A 70 30 58 1B 2A 70 32 33 32 58 1B 2A 70      Y.*p0X.*p232X.*p
2B 33 39 39 59 1B 2A 62 32 4D 1B 2A 72 31 41 1B      +399Y.*b2M.*r1A.
2A 62 31 36 57 00 01 F8 FF 00 E0 F8 00 01 1F F0      *b16W.....
F3 00 01 3F E0 1B 2A 72 42 1B 2A 70 2D 31 59 1B      ...?..*rB.*p-1Y.
2A 70 31 32 38 38 58 1B 2A 72 31 41 1B 2A 62 33      *p1288X.*r1A.*b3
57 01 FE 1F 1B 2A 72 42 1B 2A 70 2D 31 59 1B 2A      W....*rB.*p-1Y.*
70 31 35 39 32 58 1B 2A 72 31 41 1B 2A 62 31 36      p1592X.*r1A.*b16
57 00 03 FD FF 00 E0 E1 00 00 07 FD FF 02 E1 FF      W.....
E0 1B 2A 72 42 1B 2A 70 32 33 32 58 1B 2A 72 31      ..*rB.*p232X.*r1
41 1B 2A 62 32 33 57 00 01 F8 FF 04 E0 7F FF FF      A.*b23W.....
F0 FD 00 03 01 FF FF 80 F5 00 02 03 FF FE 1B 2A      .....*
72 42 1B 2A 70 2D 31 59 1B 2A 70 31 32 38 30 58      rB.*p-1Y.*p1280X
1B 2A 72 31 41 1B 2A 62 35 57 03 07 FC 7F 80 1B      .*r1A.*b5W.....
2A 72 42 1B 2A 70 2D 31 59 1B 2A 70 31 35 39 32      *rB.*p-1Y.*p1592
58 1B 2A 72 31 41 1B 2A 62 32 34 57 00 1F FD FF      X.*r1A.*b24W....
00 E0 EB 00 04 01 FF FF FF C0 FC 00 00 07 FD FF      .....
02 E1 FF FC 1B 2A 72 42 1B 2A 70 32 33 32 58 1B      .....*rB.*p232X.
2A 72 31 41 1B 2A 62 32 34 57 00 01 F8 FF 04 E0      *r1A.*b24W.....
7F FF FF F0 FD 00 03 03 FF FF C0 F5 00 03 0F FF      .....
FF 80 1B 2A 72 42 1B 2A 70 2D 31 59 1B 2A 70 31      ...*rB.*p-1Y.*p1
32 38 30 58 1B 2A 72 31 41 1B 2A 62 35 57 03 1F      280X.*r1A.*b5W..
FD FF E0 1B 2A 72 42 1B 2A 70 2D 31 59 1B 2A 70      ....*rB.*p-1Y.*p
31 35 38 34 58 1B 2A 72 31 41 1B 2A 62 32 34 57      1584X.*r1A.*b24W
00 03 FC FF 00 E0 EB 00 04 01 FF FF FF C0 FC 00      .....
00 07 FD FF 02 E1 FF FF 1B 2A 72 42 1B 2A 70 32      .....*rB.*p2
33 32 58 1B 2A 72 31 41 1B 2A 62 32 34 57 00 01      32X.*r1A.*b24W..
F8 FF 04 E0 7F FF FF F0 FD 00 03 07 FF FF F0 F5      .....
00 03 1F FF FF E0 1B 2A 72 42 1B 2A 70 2D 31 59      .....*rB.*p-1Y
1B 2A 70 31 32 38 30 58 1B 2A 72 31 41 1B 2A 62      .*p1280X.*r1A.*b
35 57 03 3F F9 FF E0 1B 2A 72 42 1B 2A 70 2D 31      5W.?....*rB.*p-1
59 1B 2A 70 31 35 38 34 58 1B 2A 72 31 41 1B 2A      Y.*p1584X.*r1A.*
62 32 35 57 00 0F FC FF 00 E0 EB 00 04 01 FF FF      b25W.....
FF C0 FC 00 00 07 FD FF 03 E1 FF FF C0 1B 2A 72      .....*r
42 1B 2A 70 32 33 32 58 1B 2A 72 31 41 1B 2A 62      B.*p232X.*r1A.*b
32 34 57 00 01 F8 FF 04 E0 7F FF FF F0 FD 00 03      24W.....
0F FF FF F8 F5 00 03 1F FF FF F0 1B 2A 72 42 1B      .....*rB.
2A 70 2D 31 59 1B 2A 70 31 32 38 30 58 1B 2A 72      *p-1Y.*p1280X.*r
31 41 1B 2A 62 35 57 03 FF F9 FF F0 1B 2A 72 42      1A.*b5W.....*rB
1B 2A 70 2D 31 59 1B 2A 70 31 35 38 34 58 1B 2A      .*p-1Y.*p1584X.*
72 31 41 1B 2A 62 32 37 57 06 3F FF FE FF FF FF      r1A.*b27W.?.....
E0 EB 00 04 01 FF FF FF C0 FC 00 00 07 FD FF 03      .....
E1 FF FF F0 1B 2A 72 42 1B 2A 70 32 33 32 58 1B      .....*rB.*p232X.

```

# RES — RESet

## Format

RES ;

## Parameter

None

## Function

The RES command causes a page break and resets parameters as indicated below.

Some reset values can also be changed by the FRPO command. For these, the factory reset value is given, followed by the FRPO parameters that can be used to change this value in parenthesis.

In HP-7475A emulation, the RES command resets the printer environment in the same manner as the KC-GL DF instruction. Refer to section *HP 7550A Emulation [KC-GL] (Mode 8)* of the *Technical Reference* manual.

The RES command does not:

- delete permanent macros or permanent fonts from memory
- delete positions or fonts stored by the SCP and SCF commands
- reset font attributes set by the SFA command
- change any values in permanent memory (Refer to the FRPO INIT command page.)

Parameter	Value after reset (Related FRPO parameter)			Related PRE- SCRIBE Com- mands
	LaserJet (PCL)	IBM/Epson	Diablo	
Command recognition character	R (P9)	←	←	SCRC
Emulation mode	6 (P1) <sup>a</sup>	←	←	SEM
Unit of measurement	Inches	←	←	UNIT
Number of copies per page	1 <sup>a</sup>	←	←	COPY
Cassette	Cassette 1 (main cassette) (R4) <sup>a</sup>	←	←	PSRC
Paper tray	Face-down (R0) <sup>a</sup>	←	←	STAK
Paper size	Cassette size (R2) <sup>a</sup>	←	←	SPSZ
Top margin	1/2 inch (150 dots)	0 (A1/2)	←	STM
Left margin	Left logical	0 (A3/4)	←	SLM
Right margin	Right logical	Max. size (A5/6)	←	SRM, SPW
Bottom margin	1/2 inch (150 dots)	Max. size (A7/8)	←	SBM, SPL, SLPP
Page orientation	Portrait (Orientation of font C5/2/3)	Portrait (Orientation of font C5/2/3)	Portrait (C1) <sup>†</sup>	SPO
Line spacing	6 lpi (U0/1)	←	←	SLS, SLPI
Character spacing	10 cpi (Spacing of font C5/2/3)	10 cpi (U2/3)	←	SCS, SCPI

Parameter	Value after reset (Related FRPO parameter)			Related PRE- SCRIBE Com- mands
	LaserJet (PCL)	IBM/Epson	Diablo	
Underline thickness and distance below baseline	4 dots, 7 dots	←	←	SULP
Current font	Font 1 (C5/2/3) or V3 (scalable font) <sup>†</sup>	Font 8 (IBM) Font 1 (Epson)	Font 1 (C5/2/3) or V3 (scalable font) <sup>a</sup>	FONT, FSET, SFNT
Alternate font assignment	None	See <i>Emulation of the Technical Reference manual</i> .	←	SETF
Country code	0 (U6) <sup>†</sup>	←	←	INTL
Symbol set	Roman-8 (U6/7)	See <i>Emulation of the Technical Reference manual</i> . <sup>†</sup>	US ASCII (U7) <sup>†</sup>	CSET, INTL
Current path	Empty	←	←	NEWP
Graphics pen diameter	3 dots	←	←	SPD
Line cap	Square	←	←	SCAP
Line join	Beveled join	←	←	SLJN
Miter limit	10	←	←	SMLT
Flatness	1	←	←	FLAT
Dash pattern	Solid line	←	←	DPAT, SDP
Clipping rectangle	Size of printable page		←	CLPR
Fill pattern	Solid black	←	←	PAT, FPAT, GPAT
Image model	Transparent [3]	←	←	SIMG
Graphics resolution	75 dpi	←	←	STR
CR action	CR	CR (P2)	←	–
LF action	LF	LF (P3)	←	–

<sup>a</sup> These values can be set as permanent using the prin system's operator panel only when the FRPO C6 (panel keep) is active with a parameter of 1 (default).

## RESL — select RESolution

### *Format*

RESL *resolution* ;

### *Parameter*

#### *resolution:*

300 [dpi], 600 [dpi] or 1200 [dpi]

### *Function*

The RESL command switches the resolution of the printing system between 300 dpi, 600 dpi, and 1200 dpi. When this command is received, the image data currently remaining is forcibly output on paper. This does not affect the current unit of measure, but the system's memory will be reconfigured, causing PCL resources (fonts, macros, patterns, and symbol sets) which have been downloaded into RAM to be purged.

The printing system's resolution setting enabled by this command is reset to default (FRPO N8), if a command which results in reset (RES, FRPO and SEM) is received. Actual resolution may be decreased to 300 dpi even though printing resolution is set to 600 dpi or 1200 dpi when there is insufficient memory because a duplex unit is installed and duplex mode has been set or because the video memory size has been increased for page protection.

Printing resolution cannot be switched from 300 dpi to higher resolutions for the following emulations: line printer, IBM ProPrinter, Diablo 630, EPSON LQ850.

# RGBL — control RGB Level

## COLOR

### Format

`RGBL color, level;`

### Parameters

#### *color:*

0 = red  
1 = green  
2 = blue


#### *level:*

number from -10 to 10 (Default = 0)

### Function

The RGBL command controls balance for each level of RGB. It individually corrects the gamma for each color.

The color bars below represent color balance variations for each of RGB. The top bar represents the default saturation variation. The output result for an input value is maintained in linear form. The middle color bar is an example showing an increase in output for the input value. Indicates  $\gamma > 1.0$  when being equivalent to the gamma curve. The bottom color bar is an example showing a decrease in output for the input value. Indicates  $\gamma < 1.0$  when being equivalent to the gamma curve.

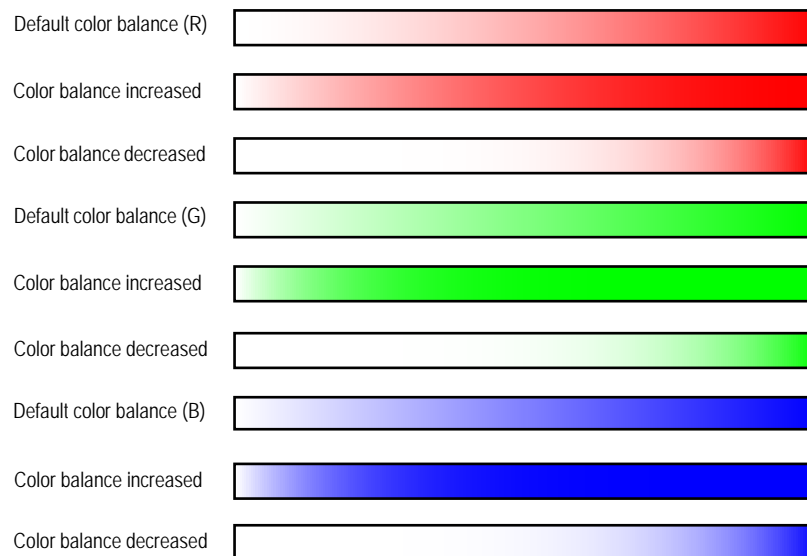

Varying color balance allows the output image results to vary. Issuing this command resets hue, saturation, and luminosity control values to their default settings.



This command is enabled for all color spaces, all color modes and all monitor simulation modes.

If ink simulation is set to other than none, this command is disabled. The RES command resets saturation to its default state.

This mode is not held in the printing system. For this reason, color balance is reset to its default state when the power is turned on.

# RGST — offset ReGiSTration

## *Format*

RGST *horizontal-offset*, *vertical-offset*;

## *Parameters*

### *horizontal-offset:*

horizontal offset value from the absolute coordinate (0, 0) for the physical paper feed direction, in current unit. The coordinates may be positive or negative.

### *vertical-offset:*

vertical offset value from the absolute coordinate (0, 0) for the physical paper feed direction, in current unit. The coordinates may be positive or negative.

## *Function*

This command moves the coordinate origin by the offset (physical horizontal and vertical directions) as measured from the values specified. The intersection (shared area) of the current printable area and the printable area shifted by the new offset registration is defined as the valid printable area.

No page break is caused when this command is received. The offset values set using this command are valid even when the printing system is in HP emulation mode.

Since this command is PCL command-compatible (<ESC>&l #U, <ESC>&l #Z), the offset values are cleared to zero only by a software reset (<ESC>E). In other words, the offset is only cleared by PRESCRIBE (RES and FRPO INIT commands) when the emulation is HP.

An error will result and the command has no effect if a command format other than the above is used. An error will result and the value in question will be ignored if *horizontal-offset* or *vertical-offset* is specified as a value exceeding the physical dimensions of the current paper size.

# RPCS — Return to Previous Code Set

## *Format*

RPCS ;

## *Parameter*

None

## *Function*

The RPCS command resumes use of a code set saved by a previous SCCS (save current code set) command. The RPCS commands return to the code sets in reverse order in which they were nested.

## *File*

See *SCCS* on page 267.

## *Related Commands*

RPF, SCCS, SCF

## RPF — Return to Previous Font

### *Format*

RPF ;

### *Parameter*

None

### *Function*

The RPF command resumes use of a font saved by a previous SCF (save current font) command. The RPF commands return to the fonts in the reverse order in which they were saved.

SCF and RPF are particularly useful in macros.

### *File*

```
!R! RES; UNIT P;
MCRO SMALLPRINT;
SCF; FSET 10V; TEXT %1, E;
RPF;
ENDM;
SFNT 'Helvetica', 12; SLS 14;
EXIT;
Computer literature is littered with acronyms such
as !R! CALL SMALLPRINT, 'CPU, DOS, EEPROM';
EXIT; and the like. Small capitals
make these easier to read. Compare the effect of
printing CPU, DOS, and EEPROM in regular capitals.
!R! PAGE; EXIT;
```

### *Printout*

Computer literature is littered with acronyms such as CPU, DOS, EEPROM and the like. Small capitals make these easier to read. Compare the effect of printing CPU, DOS, and EEPROM in regular capitals.

# RPG — Return to Previous Graphics state

## *Format*

RPG ;

## *Parameter*

None

## *Function*

The RPG command restores the graphics state most recently saved by a SCG (Save Current Graphics) command. The following items of graphics state revert to the state saved previously.

- Path and cursor position (if defined)
- Pen diameter (line width)
- Line join type
- Line cap type
- Miter limit
- Dash pattern
- Flatness
- Fill pattern (16 × 16 dots)
- Clipping rectangle
- Raster resolution
- Image model


It is useful to save the graphics state then later restore it when you want to use a path for both stroking and filling. One such example is shown below.

The RPG command does not affect other printing system parameters such as page orientation, unit of measurement, etc. (See *RES* on page 219.)

## *File*

```
!R! RES; UNIT C;
NEWP;
PMZP 4, 2;
PARC 3, 3, 1, 90, 270;
PARC 5, 3, 1, 270, 90;
CLSP;
SCG;    CMNT Saves the graphics state;
STRK;   CMNT Strokes the path;
RPG;    CMNT Restores the graphics state;
GPAT .5;
FILL 1; CMNT Fills the path;
PAGE;
EXIT;
```

*Printout*

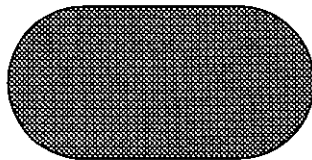

*Related Command*

SCG

# RPP — Return to Previous Position

## *Format*

RPP ;

## *Parameter*

None

## *Function*


The RPP command moves the cursor to a position saved by a previous SCP (save current position) command. If the RPP command is executed by mistake when no previous position has been saved, the resulting cursor movement is unpredictable.

The RPP command can be used in both standard mode and path mode graphics.

## *File*

```
!R! RES; UNIT P;
SFNT 'Helvetica-BdOb', 16;
UNIT C;
MAP 8, 8; CIR .2;
MRP -.1, .1;
CMNT Save this position seven times;
SCP; SCP; SCP; SCP; SCP; SCP; SCP;
MRPA 2, 0; TEXT 'N';
RPP; MRPA 2, 45; TEXT 'NE';
RPP; MRPA 2, 90; TEXT 'E';
RPP; MRPA 2, 135; TEXT 'SE';
RPP; MRPA 2, 180; TEXT 'S';
RPP; MRPA 2, 225; TEXT 'SW';
RPP; MRPA 2, 270; TEXT 'W';
RPP; MRPA 2, 315; TEXT 'NW';
PAGE;
EXIT;
```

*Printout*

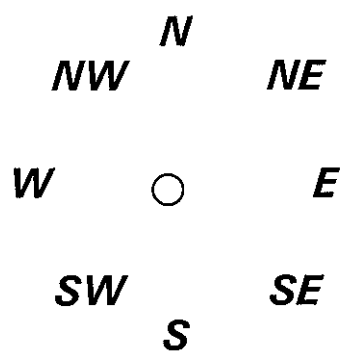

*Related Command*

SCP



# RPPL — Return to Previous PaLette

**COLOR**

## *Format*

RPPL ;

## *Parameter*

None

## *Function*

The RPPL command restores the color palette most recently saved by a SCPL (save current palette) command. A color palette restored using the RPPL command immediately becomes active.

If the saved palette does not exist, this command is ignored.

## *File and Printout*

See *SCPL* on page 277.

# RPU — Return to Previous Unit

## *Format*

RPU ;

## *Parameter*

None

## *Function*

The RPU command brings the unit of measurement (inches, centimeters, points, or dots; as specified by the UNIT command) back to the unit saved by the SCU (save current unit) command.

## *File/Printout*

See SCU on page 282.

## *Related command*

SCU

# RTTX — RoTate TeXt

## Format

RTTX *angle*, '*string*' [ , *U-option* ] ;

## Parameters

### *angle*:

angle of rotation in degrees

### *string*:

character string

### *U-option*:

Underline text

## Function

Taking the normal output angle for text as zero, the RTTX command rotates a character string around its starting point by the angle of rotation specified.

After this command is executed, text output returns to original orientation.

This command is ignored if the current font is a bitmap font.


## File

```
!R! RES; PSRC 1;
```

```
SFNT "Helvetica", 10;
MZF 3, 3;
RTTX 15, " ----- Leo, 23 - August 22";
RTTX 45, " ----- Cancer, 22 - July 22";
RTTX 75, " ----- Gemini, 21 - June 21";
RTTX 105, " ----- Taurus, 20 - May 20";
RTTX 135, " ----- Aries, 21 - April 19";
RTTX 165, " ----- Pisces, 19 - Mar 20";
RTTX 195, " ----- Aquarius, 20 - February 18";
RTTX 225, " ----- Capricorn, 22 - January 19";
RTTX 255, " ----- Sagittarius, 22 - December 21";
RTTX 285, " ----- Scorpio, 24 - November 21";
RTTX 315, " ----- Libra, 23 - October 23";
RTTX 345, " ----- Virgo, 23 - September 22";

PAGE; EXIT;
```

*Printout*

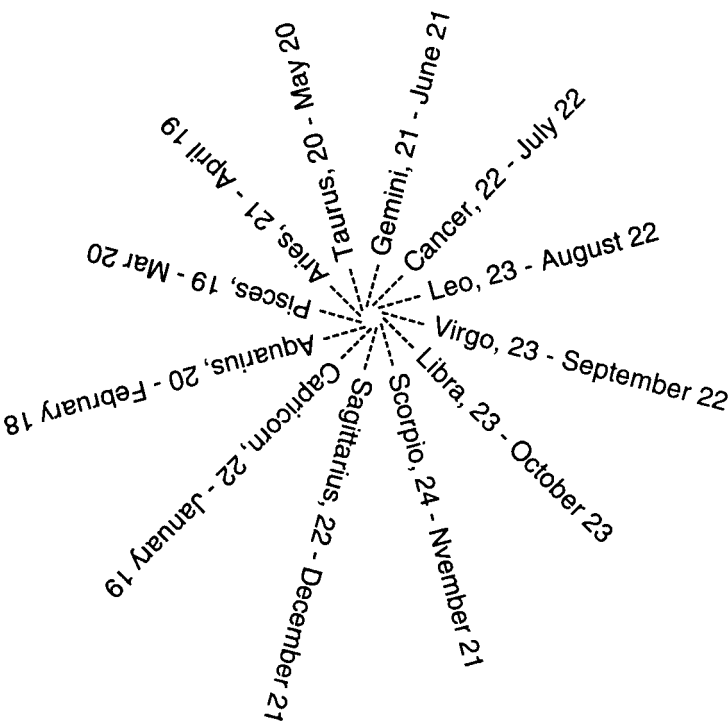

# RTXT — print Right-aligned TeXT

## *Format*

```
RTXT[ 'string' ][ ,option ][ ,U-option ] ;
```

## *Parameters*

### *string:*

any character string

### *option:*

B = Leave cursor at back end of string  
E = Move cursor to front end of string  
L = Move cursor down one line  
N = Move cursor to beginning of next line

### *U-option:*

Underline text

## *Function*

The RTXT command prints the given string, ending at the cursor location, then moves the cursor as designated by the option. It accepts either a bitmap font or a scalable font to print the string.

The string must be enclosed in either single or double quotation marks. (If the string includes one kind of quotation mark, use the other kind to enclose it.) If the string is omitted, nothing is printed. If the option is omitted, the cursor is not moved (same as option B). If the U-option is specified, the string is underlined. The underline thickness and location can be set by the Sulp command.

The RTXT command can be used to position a line of text so that it ends at an exact location. The RTXT command should be executed between left and right margins.

The length of the string is unlimited, except that the command as a whole may not be longer than 255 characters. Carriage-return and linefeed codes in the string are ignored.

The RTXT command can be used both in the standard mode and path mode graphics.

*File*

```
!R! RES;  
UNIT P;  
SFNT 'TimesNewRoman';  
UNIT I;  
MCRO PF;  
MRP .15, 0;  
BOX .1, -.1; MRP .5, 0;  
BOX .1, -.1; MRP -.65, 0;  
ENDM;  
MAP 3, 3; TEXT 'Pass      Fail', L, U;  
CALL PF;  RTXT 'Unit test', L;  
CALL PF;  RTXT 'Integration test', L;  
PAGE;  
EXIT;
```

*Printout*

	<u>Pass</u>	<u>Fail</u>
Unit test	<input type="checkbox"/>	<input type="checkbox"/>
Integration test	<input type="checkbox"/>	<input type="checkbox"/>

# RVCD — ReceiVe Compressed raster Data

## Format

RVCD[ *compression-mode* ]; *length*, *data*, . . . ;

## Parameters

### *compression-mode*:

0 = uncompressed  
 1 = run-length encoding  
 2 = TIFF (Tagged Image File Format) [rev. 4.0]

### *length*:

bytes of raster data

### *data*:

binary raster data, 0H to FFH

## Function

The RVCD command transfers and encodes the subsequent raster data by the amount of bytes represented by the *length* parameter.

The STR (SeT dot Resolution) command sets the dot resolution for raster graphics which starts at the current cursor position. The SRO (Set Raster Options) command specifies the orientation of the raster image in either physical (default) or logical page direction.

If the *compression-mode* value is zero [or omitted], the printing system simply transfers raster data in an uncompressed binary format. A single bit means a single dot. Seventh bit in the first byte refers to the starting dot within that raster row and bit 0 refers to the eighth dot and continues.

In the *run-length* encoding mode, the printing system treats raster data in pairs of bytes. The first byte of each pair is the repetition count for the data in second pattern byte. The repetition count accepts any value within a range of 0H to FFH.

*compression-mode* 2, TIFF rev. 4.0, translates raster data to be *packbits* in which a control byte precedes the raster data. A TIFF rev. 4.0 encoded data arrangement appears below.

*control byte* (1 byte) + data (1–128 bytes) + *control byte*  
 (1 byte) + data (1–128 bytes) ...

A control byte with a negative value from -127 to -1 (81H to FFH) means the repetition count for the subsequent data. A zero to 127 (0H to 7FH) indicates the number of data bytes that follow. A control byte of -128 (80H) represents a non-operative control byte.

## Related Commands

ENDR, STR

# RVCL — ReceiVe CoLor raster data

**COLOR**

## Format

RVCL [*compression-mode*, ] *length*, *data*;

## Parameters

### *compression-mode*:

0 = uncompressed (Default)  
1 = run-length encoded  
2 = TIFF (Tagged Image File Format) [rev. 4.0]

### *length*:

bytes of raster data

### *data*:

binary raster data, 0H to FFH

## Function

The RVCL command is the color version of the RVCD (ReceiVe Compressed raster Data) command. It transfers the color raster data. Color specification must be made to each pixel. An 8 bps color specification is used for the color data for each pixel. Also, this command is only valid for an RGB color space. Accordingly, 3 bytes of data must be sent for each pixel to be drawn when transferring color images.

Although this command handles monochrome or color data for encoding, since it relies on the active palette, the correct palette matching the print data must be used.

The end of raster data must be declared by the ENDR (END Raster) command.

When transferring color data using RVCL (ReceiVe CoLor raster data), always specify a palette using the CID (Configure color-Image Data) command. Data will not be properly processed if the palette is specified using the SIMP (SIMPlE color palette) or PANT (PANTone color palette) commands.

If the image data actually sent exceeds the width or height of the specified source data, the excessive portion will be truncated, resulting a clipped image.




# RVRD — Receive Raster Data

## Format

RVRD; *number of data*, *data*, . . . ;

## Function

The RVRD command declares the start of raster data. Raster data represents dot lines encoded as numeric values as shown below. Each dot line is divided into 8-dot segments. Each segment is converted to a number by the same system of column weights as used in the FPAT (Fill PATtern) command.

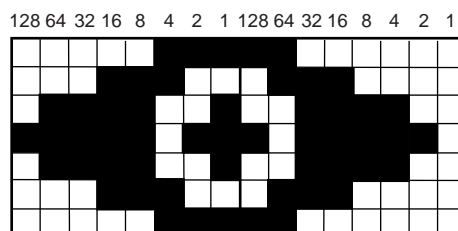

The first segment in the example above encodes to 7 as follows:

$$0+0+0+0+0+4+2+1 = 7$$

The second segment encodes similarly to 192:

$$128+64+0+0+0+0+0+0 = 192$$

In the printing system command language, the segments are being treated as bytes of data in which the black dots are 1s and the white dots are 0s. The raster data values are the decimal values of the bytes.

Each line of raster data starts with a positive integer (1 to 511) indicating the number of segments in the line (2 in the example shown). The raster data follows, separated by commas. Each data value is an integer from 0 to 255. A semicolon ends the line. Spaces occurring anywhere in the line are ignored.

Carriage returns following commas are also ignored, so long as raster lines can be broken up if necessary, as shown below. The carriage return must be placed after a comma, as follows:

```
34, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1,
1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1;
```

There are no limits on the length of a raster line or the number of lines.

Zeros can be omitted, retaining only the delimiting commas. For zeros at the end of the line, the commas can also be omitted. The following example displays equivalent raster data lines:

```
7, 0, 0, 15, 0, 15, 0, 0; and 7, , , 15, , 15;
```

The following example demonstrates two ways to produce a blank raster line:

```
1, 0; or 1, ;
```

The following examples produce invalid raster data lines:

Wrong:

```
0, ; Count cannot be 0.  
1; Use 1, ; for a blank line.  
2, 1, 1, 1; Too many data values.  
2, -1, -1; Negative values are not allowed.  
2, 1  
, 1; Carriage return before comma.
```

An invalid raster data line is not printed, and invalidates all raster lines that follow.

Again, the following example demonstrates how to create the raster graphic on the previous page.

```
!R! STR 75; RVRD;  
2;A|0;  
2;GG0;  
2;^S;  
2;~{>>;  
2;^S;  
2;GG0;  
2;A|0;  
ENDR;  
PAGE; EXIT;
```

The value 2 in each raster data line indicates the number of data which follows. The subsequent data can be obtained by following the same procedure as explained in *Defining Fill Patterns* in Chapter 2 of the *Technical Reference* manual.

# RWER D — [Read/Write External Resource] Delete data on external media

## Format

RWER D, *medium*, *data-type*, '*partition-name*' ;

## Parameters

### *medium:*

0 = hard disk or RAM disk  
A = memory card

### *data-type:*

type of data to be deleted  
1 = Font data  
2 = Printable data  
16 = Macro data  
112 = File data  
128 = API data (downloadable program)

### *partition-name:*

Name of partition from which data is deleted

## Function

The RWER D command deletes data on any external media whether it is a memory card or the hard disk. This command has no effect if the media has been write protected using KPDL or PDL.

The partition name may be a maximum of 15 printable ASCII characters (20H through 7EH); upper and lower case letters are regarded distinct. A partition name may not have leading spaces, and in the command, the partition name must be enclosed in single or double quotation marks.

A partition list is not automatically printed when deleting data on external media, even though the automatic printing of partition information was enabled (by the RWER I command). ( See page 243.)

A command error results and the command has no effect if parameters other than the above are used.

This command causes a page break.

## RWER F — [Read/Write External Resource] Format external media

### *Format*

RWER F, *medium*;

### *Parameter*

#### *medium:*

0 = hard disk

A = memory card

### *Function*

The RWER F command formats any external media whether it is a memory card or the hard disk. The hard disk is physically formatted when it is specified. This command has no effect if the media has been write-protected using KPDL or PJJL.

A command error results and the command has no effect if parameters other than the above are used.

This command causes a page break and prints a format information page (if the medium is a compact flash card) when executed.

# RWER I — [Read/Write External Resource] automatically print partition Information

## *Format*

RWER I, *mode*;

## *Parameter*

### *mode:*

control mode:

E = Enable automatic printing of partition information

D = Disable automatic printing of partition information

## *Function*

The RWER I command toggles the automatic printing of partition lists for any external media whether it is a memory card or the hard disk. With the automatic printing of partition lists enabled (RWER I, E;), the printing system prints partition lists whenever data are written to external media.

The setting made with this command returns to default when the power is turned off.

A command error results and the command has no effect if parameters other than the above are used.

## RWER L — [Read/Write External Resource] print partition List

### *Format*

```
RWER L[ , medium ] ;
```

### *Parameter*

#### *medium:*

0 = hard disk or RAM disk  
A = memory card  
E = EPROM

### *Function*

The RWER L command explicitly prints partition lists for any external media whether it is a memory card, the hard disk, or the RAM disk. The lists of partitions for all external media can be printed by omitting parameter *medium*.

Disk capacity, font cache capacity and data type are listed, with login file names for file data output in separate columns.

A command error results and the command has no effect if parameters other than the above are used.

# RWER R — [Read/Write External Resource] Read data from external media

## Format

RWER R, *medium*, *data-type*, '*partition-name*' ;

## Parameters

### *medium*:

0 = hard disk or RAM disk  
A = memory card  
E = EPROM

### *data-type*:

2 = Printable data  
128 = API data (downloadable program)

### *partition-name*:

Name of partition from which data is read, a maximum of 15 printable ASCII characters

## Function

The RWER R command reads data from any external media whether it is a memory card, hard disk, EPROM, or RAM disk.

Only data types 2 and 128 are allowed. Note that reading data of other data types, such as fonts and macros, does not require this command since the printing system automatically reads them at power up.

If the same partition name exists on different external media, the priority with which data is read is as follows.

High	>	Low
Card		Hard disk (RAM disk)      EPROM

The partition name may be a maximum of 15 printable ASCII characters (20H through 7EH); upper and lowercase letters are regarded as distinct. A partition name may not have leading spaces, and in the command, the partition name must be enclosed in single or double quotation marks.

This command causes a page break.

### Reading data from a memory card:

To read partition *DataS001* from the memory card:

```
!R! RWER R, A, 2, 'DataS001'; EXIT;
```

# RWER S — [Read/Write External Resource] Store TrueType font

## Format

RWER S, *medium*, *font-type*, *file-name*, *font-name*, *length*[, *value*, *style*, *weight*, *type-face*] ; *binary-data* WRED ;

## Parameters

### *medium*:

drive specification:

0 = hard disk or RAM disk

A = memory card

### *font-type*:

font type:

0 = TrueType font

1 = Japanese TrueType font

2 = Japanese TrueType Collection font

### *file-name*:

file name: (string of up to 11 characters; the extension .INF is added internally.) This string must be enclosed in either single or double quotation marks.

### *font-name*:

font name (ASCII text string up to 31 characters long; only up to 28 characters if *font-type* = 2). This string must be enclosed in either single or double quotation marks.

### *length*:

font data length (number of bytes sent as *binary data*)

### *value*:

font symbol set value (1 to 65535, 619: Shift JIS code)

### *style*:

font style (0 to 32767)

### *weight*:

stroke weight (-127 to +127)

### *type-face*:

type face (0 to 32767)



*binary-data:*

font data (TrueType format)

*Function*

The RWER S command allows outline fonts (in TrueType format) to be downloaded to the printing system and to be stored on the specified media as font data. TrueType fonts particularly can be defined easily just by adding the TrueType font format as *binary-data*.

Always explicitly terminate the end of font data using WRED;. The five bytes represented by WRED; are not counted as part of the font data length.

Since *value*, *style*, *weight* and *type-face* represent font attributes they have an affect during font selection. Although they may be omitted, we recommend that all parameters be used to define font selection information.

In order to delete a Japanese TrueType font defined using this command, it is necessary to delete two separate file names using RWER D, 'xxxxxxx' and RWER D, 'xxxxxxx.inf'. Up to 512 fonts may be registered on a single memory card or up to 4096 on a single hard disk. Note carefully that registration beyond this limit will result in data being interpreted as unneeded.

Only 28 characters are valid for Japanese TrueType font names when *font-type* = 2 is specified because the system automatically appends ( P ) for proportional fonts and ( F ) for fixed pitch fonts.

A command error will result and the command has no effect if any of the parameters are outside the given range. This command is ignored if even one parameter error occurs.

The font data following the semicolon for this command must match the length given by *length*. An error will result and the font data will not be defined if the data length is shorter than specified.

## RWER T — [Read/Write External Resource] set Terminate string

### *Format*

```
RWER T[ , 'terminator' ] ;
```

### *Parameter*

#### *terminator:*

ASCII text string up to 4 bytes, enclosed in either single or double quotation marks

### *Function*

The RWER T command sets a terminator string for external media whether it is a memory card or the hard disk. This terminator is used when storing binary data to external media. See the RWER S command page (page 246) for example. WRED is set as the default terminator if parameter *terminator* is omitted.

A command error results and the command has no effect if parameters other than the above are used.

# RWER W — [Read/Write External Resource] Write data to external media

## Format

RWER W, *medium*, *data-type*[ , '*partition-name*' ] ;

## Parameters

### *medium*:

0 = hard disk or RAM disk  
A = memory card

### *data-type*:

1 = Font data  
2 = Printable data  
16 = Macro data  
112 = File data  
128 = API data (downloadable program)

### *partition-name*:

Name of partition to which data is written, in a maximum of 15 printable ASCII characters. If this parameter is omitted the printing system will automatically determine the partition name.

## Function

The RWER W command writes data to any external media whether it is a memory card or the hard disk.

Although all data types may be written up to the amount allowed by the storage size of the given media, note carefully that writing beyond this limit will result in data being interpreted as unneeded.

Even if data is written to a device using the same file name, that data will be written without overwriting the original file. A partition list will be printed as a warning when this happens.

A command error results and the command has no effect if parameters other than the above are used.

This command causes a page break and prints a write information page when executed.

The following example demonstrates how to send data from the computer to a memory card. Typically, partition names should be specified when writing to the card. If omitted, the partition names will be assigned automatically as follows:

*DataS001, DataS002 ... DataSnnn.*

Writing data to a memory card:

To write the contents of file *DATA123.DOC* to partition *DATA123* on the memory card:

1. Verify the printing system's message display indicates *Ready*.
2. Enter the following at the DOS prompt:

```
C:\>ECHO !R! RWER W, A, 2, 'DATA123'; >PRN
```

The message display will change from *Ready* to *Processing*, and then to *Waiting*. The printing system is now ready to receive data, so send the file from the computer to the printing system.

3. To do this, enter the following at the DOS prompt:

```
C:\>COPY DATA123.DOC PRN
```

4. The message display will change to *Processing* as the file is written to partition *DATA123* on the memory card. Next, check that the message display has changed to *Waiting*, and then send a *WRED* command, as follows:

```
C:\>ECHO WRED; EXIT, E; >PRN
```

The *WRED* command terminates writing to the memory card.

Note that in *W* mode the *ICCD* command is accompanied by a form feed.

If a partition name conflict occurs when writing a new partition to a memory card, the name of the new partition will be modified as follows:

- If a partition name of 11 characters or less conflicts with an existing partition name, '*Snnn*' (*nnn* represents a numeric value) is appended to the partition's name.
- If a partition name of 12 or more characters conflicts with an existing partition name, the 12th and following characters of the new partition's name will be replaced by '*Snnn*' (*nnn* represents a numeric value).

## *Related Command*

*WRED*

# RWRF D — [Read/Write Resource File] Delete data on external device

## *Format*

RWRF D, *medium*, *data-type*, "*file-name*";

## *Parameters*

### *medium:*

0 = hard disk  
A = memory card

### *data-type:*

"API" API program  
"FNT" Font data  
"MCR" Macro data  
"PRN" Printable data

### *file-name:*

ASCII text string up to 15 bytes

## *Function*

The RWRF D command deletes data that is written to an external device such as the hard disk.

This command has no effect if the media has been write protected using KPDL or PJL.

This command causes a page break.

Any write information page is not printed when the file is deleted.

### *Example:*

Delete macro file "TEST", which is registered in the hard disk.

```
!R! RWRF D,0, "MCR" , "TEST"; EXIT;
```

## RWRF F — [Read/Write Resource File] Format external device

### *Format*

```
RWRF F , medium ;
```

### *Parameters*

#### *medium:*

0 = hard disk

A = memory card

### *Function*

The RWRF F command physically and logically formats an external device such as the hard disk.

This command has no effect if the target device has been write-protected using KPDL or PDL.

This command causes a page break.

#### *Example:*

Format the hard disk.

```
!R! RWRF F , 0 ; EXIT ;
```

# RWRF L — [Read/Write Resource File] print resource file List

## *Format*

```
RWRF L [ , 'medium' ] ;
```

## *Parameters*

### *medium:*

0 = hard disk

A = memory card

Prints a resource file list for all devices if omitted.

## *Function*

The RWRF L command prints a resource file list registered in an external device.

### *Example:*

Print a resource file list in the hard disk.

```
!R! RWRF L , 0 ; EXIT ;
```

## RWRF P — [Read/Write Resource File] set hidden file

### *Format*

RWRF P , *medium* , *data-type* , "*file-name*" ;

### *Parameters*

#### *medium:*

0 = hard disk  
A = memory card

#### *data-type:*

"API"    API program  
"FNT"    Font data  
"MCR"    Macro data

#### *file-name:*

ASCII text string up to 15 bytes.

### *Function*

The RWRF P command sets the specified file as a hidden one.  
The specified file, which is hidden, cannot be accessed from any PC.  
This command causes a page break.

#### *Example:*

Set macro file "TEST" in the hard disk as a hidden file.

```
!R! RWRF P , 0 , "MCR" , "TEST" ; EXIT ;
```

Set macro file "TEST" in the memory card as a hidden file.

```
!R! RWRF P , A , "MCR" , "TEST" ; EXIT ;
```



# RWRF R — [Read/Write Resource File] Read

## *Format*

```
RWER R, medium, "PRN", 'partition-name' ;
```

## *Parameters*

### *medium:*

0 = hard disk  
A = memory card

### *partition-name:*

Name of partition from which data is read, a maximum of 15 printable ASCII characters

## *Function*

The RWRF R command reads data specified by file name from any external media. The data must be a printable data. When the file name is coexistent in both the hard disk and memory card that are installed in the printing system, the printing system will read the memory card first, then the hard disk.

The partition name may be a maximum of 15 printable ASCII characters (20H through 7EH); upper and lowercase letters are regarded as distinct. A partition name may not have leading spaces, and in the command, the partition name must be enclosed in single or double quotation marks.

The printing system will automatically read or execute the data in the media if it is stored under the file name of '02autostart' and saved in the PRE folder of the media. The printing system will look for the file when it is powered up. The RWRF R command is not required.

This command causes a page break.

### *Example:*

To read partition DataS001 from the hard disk:

```
!R! RWRF R, 0, "PRN", 'DataS001'; EXIT;
```

## RWRF T — [Read/Write Resource File] set Terminate string

### *Format*

```
RWRF T [ , 'terminator' ] ;
```

### *Parameters*

#### *terminator:*

ASCII text string up to 4 bytes  
Set to default "WRED" if omitted.

### *Function*

The RWRF T command changes a terminator (default: WRED).  
The terminator that was changed with this command is also available for the LAPI command to load the API program.  
Turning the power on again will return the changed terminator to "WRED".

#### *Example:*

Change the terminator to "TEST".

```
!R! RWRF T , "TEST" ; EXIT ;
```

# RWRF W — [Read/Write Resource File] Write data to external device (API program)

## Format

RWRF W, *medium*, "API", "*program-type*", *prescribe-command-name*, *API-program-start-function-name*, "*file-name*";

## Parameters

### *medium*:

0 = hard disk  
A = memory card

### *program-type*:

"PRE" prescribe command

### *prescribe-command-name*:

ASCII text string up to 4 bytes

### *API-program-start-function-name*:

ASCII text string up to 31 bytes  
Cannot be omitted.

### *file-name*:

ASCII text string up to 15 bytes  
Automatically set by the system if omitted.

## Function

The RWRF W command writes data to an external device such as the hard disk. The number of writable files, which is not limited, depends on the capacity of the external media. If the device runs out of free space during saving, the remaining data will be discarded. Duplicating a file name causes the system to rename the specified one and save data (without overwriting data).

### Example:

Write and register the FILT prescribe command.

```
!R! RWRF W , 0 , "API" , "PRE" , "FILT" ,  
"apl_main";[Program Data]WRED; EXIT;
```

# RWRF W — [Read/Write Resource File] Write data to external device (font)

## *Format*

RWRF W, *medium*, "FNT", *font-type*, "file-name", "font-name", *font-data-length*, *symbol-set-value*, *font-style*, *stroke-weight*, *typeface*;

## *Parameters*

### *medium:*

0 = hard disk  
A = memory card

### *font-type:*

0 = TrueType Font  
1 = Japanese TrueType Font  
2 = Japanese TrueType Font Collection  
RSF = RomSlotFormat

### *file-name:*

ASCII text string up to 11 bytes  
Up to 15 bytes for font type RSF

### *font-name:*

ASCII text string up to 31 bytes  
Up to 28 bytes for font type 2

### *font-data-length:*

Number of bytes in font data to be downloaded

### *symbol-set-value:*

1 to 65535 (619 = Shift JIS code)

### *font-style:*

0 to 32767

### *stroke-weight:*

-127 to +127

### *typeface:*

0 to 32767

## Function

The RWRF W command writes data to an external device such as the hard disk.

The available number of fonts is max. 512 in the same compact flash and max. 4096 in the hard disk.

Duplicating a file name causes the system to rename the specified one and save data (without overwriting data).

For Japanese TrueType Font Collection, the print system automatically appends (P) for proportional fonts and (F) for fixed pitch fonts. If TrueType Font Collection contains three or more fonts, the print system automatically appends (1), (2), (3)...(9).

You can omit the parameters ranging from symbol-set-value to typeface; however, you should not omit those font attributes to exactly select a font.

The length of the font data to be written must match the specified one. Failure to do so will result in an error, and disables you to write data.

Specify WRED; command following <binary data>. "WRED;" (five bytes) are not included in the font data length.

To delete the registered Japanese TrueType font, use the RWRF D command.

To write font data in the external media, you need to have the owner grant the intellectual property right for fonts.

### Example:

```
!R! RWRF W , 0 , "FNT" , "RSF" , "testfont"; [FontData]
WRED; EXIT;
!R! RWRF W , 0 , "FNT" , 0 , "testfile" , "testfont" , 619 ,
1 , 10 , 0 , 100; [FontData] WRED; EXIT;
```

# RWRF W — [Read/Write Resource File] Write data to external device (macro)

## Format

```
RWRF W, medium, "MCR", macro-type, "macro-ID or macro-name", "file-name" ;
```

## Parameters

### medium:

0 = hard disk  
A = memory card

### macro-type:

"PRE" prescribe macro  
"PCL" PCL macro

### macro-ID or macro-name:

macro-ID for PCL macro (0 to 32767)  
macro-name for prescribe macro (ASCII text string up to 4 bytes)  
file-name

### file-name:

ASCII text string up to 15 bytes  
Automatically set by the system if omitted.

## Function

The RWRF W command writes data to an external device such as the hard disk. The number of writable files, which is not limited, depends on the capacity of the external media. If the device runs out of free space during saving, the remaining data will be discarded. Duplicating a file name causes the system to rename the specified one and save data (without overwriting data).

### Example:

Write and register prescribe macro "TEST".

```
!R! RWRF W,0, "MCR", "PRE", "TEST", "test_macro"; %[Macro  
Data] WRED; EXIT;
```

Write and register the PCL macro (macro ID: 1111).

```
!R! RWRF W,0, "MCR", "PCL", 1111, "test_macro"; [Macro  
Data] WRED; EXIT;
```

# RWRF W — [Read/Write Resource File] Write data to external device (printable data)

## *Format*

```
RWRF W, medium, "PRN", "file name";
```

## *Parameters*

### *medium:*

0 = hard disk  
A = memory card

### *file-name:*

ASCII text string up to 15 bytes  
Automatically set by the system if omitted.

## *Function*

The RWRF W command writes data to an external device such as the hard disk. The number of writable files, which is not limited, depends on the capacity of the external media. If the device runs out of free space during saving, the remaining data will be discarded.

Duplicating a file name causes the system to rename the specified one and save data (without overwriting data).

As described in the example below, add the string "WRED" to the end of the file name.

### *Example:*

Write and register printable data "TEST" to the hard disk.

```
!R! RWRF W, 0, "PRN", "TEST"; !R! TEXT "TEST"; PAGE; EXIT;  
WRED; EXIT;
```

# SATU — adjust SATuration level

COLOR

## Format

`SATU degree;`

## Parameter

### *degree:*

degree of saturation level:


number from -10 to 10 (Default = 0)

## Function

The SATU command adjusts saturation level based on the specified parameter.

The color bars below show saturation variations using hue “R” as an example. The top color bar represents the default saturation variation. The  $\Delta$  symbol indicates the median.

The left side represents the lower saturation range and the right side the higher saturation range. The middle color bar is an example showing an increase in saturation. (The higher saturation range is increased.) The middle color bar is an example showing a decrease in saturation. (The lower saturation range is increased.)

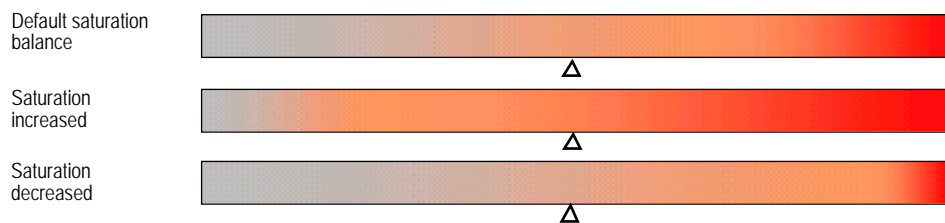

Varying saturation allows images in the lower saturation range to be more saturated and sharp or, conversely, images in the higher saturation range to be faint and shaded off.

Saturation cannot be controlled hue by hue. However, since impressions vary with hue, you need to control with care.

This command is enabled for all color spaces, all color modes and all monitor simulation modes.

If ink simulation is set to other than None, this command is disabled.

This mode is not held in the printing system. For this reason, saturation is reset to its default state when the power is turned on.



# SBM — Set Bottom Margin

## Format

`SBM length ;`

## Parameter

*length:*

distance from top of paper to bottom margin

## Function

The SBM command sets the bottom margin, as measured from the top edge limit of the paper in the units designated by the UNIT command.

If an attempt is made to print below the bottom margin, the characters will be printed on the next page.

A bottom margin setting in a document file should be placed at the beginning of the file or at a page break.

The SPL (set page length) and SLPP (set lines per page) commands also set the bottom margin, but these commands measure from the top margin position.

## File

```
!R! RES; UNIT C;
STM 1; SLS 1; SBM 11;
SFNT 'Helvetica-Nr';
EXIT, E;
Top margin at 1 cm, bottom margin at 11 cm. (Line 1)
Line 2
Line 3
Line 4
Line 5
Line 6
Line 7
Line 8
Line 9
Line 10
Line 11
Line 12
!R! PAGE; EXIT;
```

*Printout*

Top margin at 1 cm, bottom margin at 11 cm. (Line 1)	
Line 2	
Line 3	Line 11
Line 4	Line 12
Line 5	
Line 6	

# SCAP — Set line CAP

## Format

SCAP *mode* ;

## Parameter

*mode*:

line cap mode:

1 = square caps

2 = butt caps

3 = round caps

## Function

The SCAP command determines the shape of line ends (or a line cap) in a path where they are finally stroked. The default caps is *butt caps* (2).

*Square* caps have square ends which extend one-half of a line width beyond the endpoints of the line. *Butt* caps are similar to square caps but the caps are flush with the endpoints and do not extend beyond them. *Round* caps end the lines with semicircular caps with diameters identical to the line width.

Square caps (default)



Butt caps



Round caps



## File

```
!R! UNIT C; SPD .5;
NEWP; CMNT Round-capped on every end;
SCAP 3;
PMZP 6, 6;
SCP; SCP;
PDRP 1, -1; RPP;
PDRP 1, 1; RPP;
PDRP 5, 0;
STRK;
PAGE; EXIT;
```

*Printout*



# SCCS — Save Current Code Set

## *Format*

SCCS ;

## *Parameter*

None

## *Function*

The SCCS command instructs the printing system to remember the code set of the current font. This command may be used in conjunction with a SCF (save current font) command to prevent the font from losing the current code set after a command operation has been made, even if the command changes the code set (macro, etc.).

To return to the saved code set later, use the RPCS (return to previous code set) command. In the case of using the SCCS command together with a SCF command, it is recommended that the RPCS command be used with a RPF command.

The current code set can be saved up to eight times using a separate SCCS for each. RPCS commands retrieve the previously saved code set in reverse order.

## *File*

```
!R! RES; SFNT 'TimesNewRoman'; SCF; SCCS;
SLPI 3;
TEXT 'The following line is printed using ISO 6: ASCII', L;
TEXT '@ABCDEFG', L;
TEXT 'Now changing to Ventura Math, using a different
font', L;
SFNT 'Univers-Md'; CSET 5M; TEXT '@ABCDEFG', L;
RPF; RPCS;
TEXT 'Now bringing the previous font and code set back by a
RPF and RPCS command.', L;
TEXT '@ABCDEFG';
PAGE;
EXIT;
```

### *Printout*

The following line is printed using ISO 6: ASCII

@ABCDEFGG

Now changing to Ventura Math, using a different font

≅ABXΔEΦΓ

Now bringing the previous font and code set back by a RPF and RPCS command.

@ABCDEFGG

### *Related Commands*

RPCS, RPF, SCF

# SCF — Save Current Font

## *Format*

SCF ;

## *Parameter*

None

## *Function*

The SCF command saves the current font so that it can be retrieved later using the RPF (return to previous font) command. The font to be saved can be either a bitmap font or a scalable font.

Up to eight font numbers can be saved in the printing system's memory by SCF commands (using a separate SCF command for each).

The SCF command only instructs the printing system to remember the font. It does not move actual fonts in or out of memory.

## *File*

```
!R! RES;
SLM 1; STM 2;
SFNT 'TimesNewRoman', 12;
EXIT;
Affixed to the door was a large sign that read:
```

```
!R! SCF; SFNT 'Univers-BdIt', 20;
MRP 1, .423;
TEXT 'KEEP OUT';
RPF;
EXIT;
```

Being one of those people who assume that such signs are put up to be ignored, she reached out

*Printout*

Affixed to the door was a large sign that read:

***KEEP OUT***

Being one of those people who assume that such signs are put up to be ignored, she reached out

*Related Command*

RPF



# SCG — Save Current Graphics state

## *Format*

SCG ;

## *Parameter*

None

## *Function*

The SCG command saves the graphics state comprised of the following characteristics:

- Current path and cursor position
- Current pen diameter
- Current line join
- Current line cap
- Current miter limit
- Current dash pattern
- Current flatness
- Current current fill pattern (16 × 16 dots)
- Current current clipping path
- Current raster resolution
- Current image model

Once the current graphics state is saved, it can be retrieved later using the RPG (return to previous graphics state) command. Saving and retrieving the graphics state in this way simplifies recovery of paths which stroke a filled and outlined shape. Note that the FILL command clears the current path, leaving no strokable path.

The printing system holds as much graphics state information as the user memory area can accommodate; however, graphics state information larger than the memory area can cause a memory error.

## *File*

```
!R! RES; UNIT C;
NEWP;
PMZP 5, 5;
SFNT 'Helvetica-Bd', 72;
CPTH 'Mary';
SCG;
STRK;
RPG;
GPAT .9;
FILL 1;
PAGE;
EXIT;
```

*Printout*

Mary

*Related Commands*

FILL, RPG

# SCOL — Select COlor

**COLOR**

## *Format*

SCOL *number*;

## *Parameter*

### *number:*

number from 0 to 255 (Default is 0.)

## *Function*

The SCOL command selects a color from the currently active palette.

If no color is assigned to the specified number, this command is ignored. If the specified number exceeds the valid range, this command is invalid.

Color specification using SCOL affects the following objects to be printed:

- Texts
- Vector graphics
- Monochrome patterns
- Monochrome raster images

And, it does not affect the following objects:

- Color patterns
- Color raster images

Once a color is specified by SCOL, the active color does not change until the next color specification is made even if a palette is created, changed or deleted.

## *File and Printout*

See *ACLI* on page 12.

## *Related Commands*

ACLI

## SCP — Save Current Position

### *Format*

SCP ;

### *Parameter*

None

### *Function*

The SCP command instructs the printing system to remember the current cursor position, so that it can be retrieved later using the RPP (return to previous position) command.

Up to eight positions can be saved in the printing system's memory (using a separate SCP command for each). RPP commands return to the positions in the reverse order in which they were saved.

### *File and Printout*

See *RPP* on page 229.

### *Related Command*

RPP

# SCPI — Set Characters Per Inch

## *Format*

SCPI *number*;

## *Parameter*

### *number:*

number of characters per inch

## *Function*

The SCPI command sets the number of characters per inch (even if the UNIT command designates a non-inch unit).

When a proportionally-spaced font is used and the font mode (FTMD) is 0 to 3 or 8 to 11, SCPI 0 (zero) must be specified to obtain the innate spacing of each character. A non-zero specification results in unnatural spacing of proportional fonts.

SCPI 0 does not change the width of the space character.

The character spacing can also be controlled by the SCS (set character spacing) command.

## *File*

```
!R! RES; SLM 1; STM 2; EXIT;
This line has 10 characters per inch.
!R! SCPI 8; EXIT;
This line has 8 characters per inch.
!R! SFNT 'Helvetica', 10; SCS .2; EXIT;
This proportional font
is printed with fixed
spacing.
!R! SCS 0; EXIT;
This is correct proportional spacing.
!R! PAGE; EXIT;
```

## *Printout*

This line has 10 characters per inch.

This line has 8 characters per inch.

T h i s p r o p o r t i o n a l f o n t  
i s p r i n t e d w i t h f i x e d  
s p a c i n g .

This is correct proportional spacing.

## *Related Command*

SCS

# SCPL — Save Current PaLette

COLOR

## Format

SCPL;

## Parameter

None

## Function

The SCPL command saves the currently active palette, so that it can be retrieved later using the RPPL (return to previous palette) command.

Palettes can be saved as many as there is enough memory. If there is insufficient memory, a memory overflow will result and the palette will not be saved.

This command does not change the active palette. RPPL commands return to the saved palettes in the reverse order in which they were saved.

## File

```
!R! RES;
SEM 6;
UNIT C;
SFNT 'Incised901SWC-Black', 20;
SPAL 100; CID 0, 1; ACLI 1, 128, 64, 64; SCPL;
SPAL 101; CID 0, 1; ACLI 1, 128, 0, 128; SCPL;
MZP 1, 1; RPPL; SCOL 1;
TEXT 'This line is printed using palette 101.';
MZP 1, 2; RPPL; SCOL 1;
TEXT 'This line is printed using palette 100.';
PAGE;
EXIT;
```

## Printout

**This line is printed using palette 101.**  
**This line is printed using palette 100.**

# SCRC — Set Command Recognition Character

## *Format*

SCRC *character* ;

## *Parameter*

### *character:*

new command recognition character, any character from ASCII code 33 (!) to ASCII code 126 (~) except the apostrophe ('), quotation mark (") or semicolon (;).

## *Function*

The SCRC command changes the command recognition character between the exclamation points in the PRESCRIBE start sequence.

The change remains in effect until power is turned off or a RES (reset) command is executed.

Originally the command recognition character is the capital letter R within the PRESCRIBE start sequence of !R!.

One reason for changing the command recognition character is to print listings of files or programs containing PRESCRIBE commands. If the command recognition character is not changed, then instead of printing the PRESCRIBE commands, the printing system will execute them.

## *File*


```
!R! RES; UNIT C;
GPAT .7; BLK 1, 1; BOX 1, 1, E;
GPAT .5; BLK 1.3, 1.3; BOX 1.3, 1.3, E;
GPAT .3; BLK 1.6, 1.6; BOX 1.6, 1.6, E;

CMNT Now list the above commands;

SCRC L;
EXIT;

!R! RES; UNIT C;
GPAT .7; BLK 1, 1; BOX 1, 1, E;
GPAT .5; BLK 1.3, 1.3; BOX 1.3, 1.3, E;
GPAT .3; BLK 1.6, 1.6; BOX 1.6, 1.6, E;
PAGE; EXIT;
!L! RES; EXIT;
```

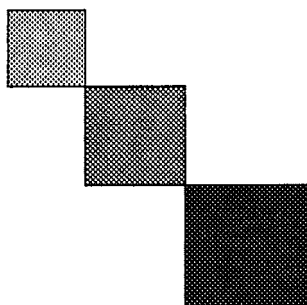

*Printout*

```
!R! RES; UNIT C;  
GPAT .7; BLK 1, 1; BOX 1, 1, E;  
GPAT .5; BLK 1.3, 1.3; BOX 1.3, 1.3, E;  
GPAT .3; BLK 1.6, 1.6; BOX 1.6, 1.6, E;  
PAGE; EXIT;
```

# SCS — Set Character Spacing

## *Format*

*SCS distance;*

## *Parameter*

### *distance:*

character-to-character spacing, or 0

## *Function*

The SCS command sets the distance from the beginning of one character to the beginning of the next character.

When a proportionally-spaced font is used and the font mode (FTMD) is 0 to 3 or 8 to 11, SCS 0 (zero) must be specified to obtain the innate spacing of each character. A non-zero specification results in unnatural spacing of proportional fonts.

SCS 0 does not change the width of the space character.

The character spacing can be set using either the SCS or the SCPI command.

## *File*

```
!R! RES; SLM 1; STM 2; EXIT;
This line has the default spacing.
!R! UNIT C; SCS .3; EXIT;
This line has a slightly wider spacing.
!R! SFNT 'TimesNewRoman', 10; SCS .2; EXIT;
This is a proportional font printed with fixed spacing.
!R! SCS 0; EXIT;
This is correct proportional spacing.
!R! PAGE; EXIT;
```

## *Printout*

This line has the default spacing.

This line has a slightly wider spacing.

This is a proportional font printed with fixed spacing.

This is correct proportional spacing.

# SCSZ — Set Custom paper SiZe

## *Format*

SCSZ *width, height, unit*;

## *Parameters*

### *width:*

width of custom paper size

### *height:*

height of custom paper size

### *unit:*

M = millimeters

I = inches

## *Function*

The SCSZ command sets the paper size when the user-defined size paper is used in the universal cassette. This command defines the width and height values for the custom paper size which is summoned by the SPSZ (set page size) 19; command.

The SCSZ command causes a page break, so it should be placed at the top of a file or program, or at the beginning of a new page. This command uses the unit set in the *unit* parameter of this command, regardless of the unit set in the UNIT command. The setting made with this command provides a non-printing area of 5 mm × 5 mm, independent of emulation mode.

## *File*

```
!R! SCSZ 260, 300, M; EXIT;
```

# SCU — Save Current Unit

## *Format*

SCU;

## *Parameter*

None

## *Function*

The SCU command instructs the printing system to save the current unit of measurement. Saving the current unit can prove useful when a macro containing a UNIT command changes the unit of measurement. The saved unit can be retrieved later using the RPU (return to previous unit) command.

The current unit can be saved up to eight times using a separate SCU command for each. RPU commands retrieve the unit of measurement in reverse order.

## *File*


```
!R! FRPO N8, 0; RES;
SENT "Univers-MdCd", 9;

UNIT C; SCU;
MZP 1.5, 1.5;
TEXT "THE DAYS ON THE ISLAND: PART I", U;

MCRO TITLE;
FSET 24V;
UNIT I;
MZP 4, 3;
CIR 2;
MRP -1.5, .125;
TEXT %1;
ENDM;

CALL TITLE, "CHAPTER 1: PROLOGUE";

RPU;
SLM 2;
STM 13;
FSET 12v;
EXIT;
My long anticipated vacation started at Mallorca
island which
```

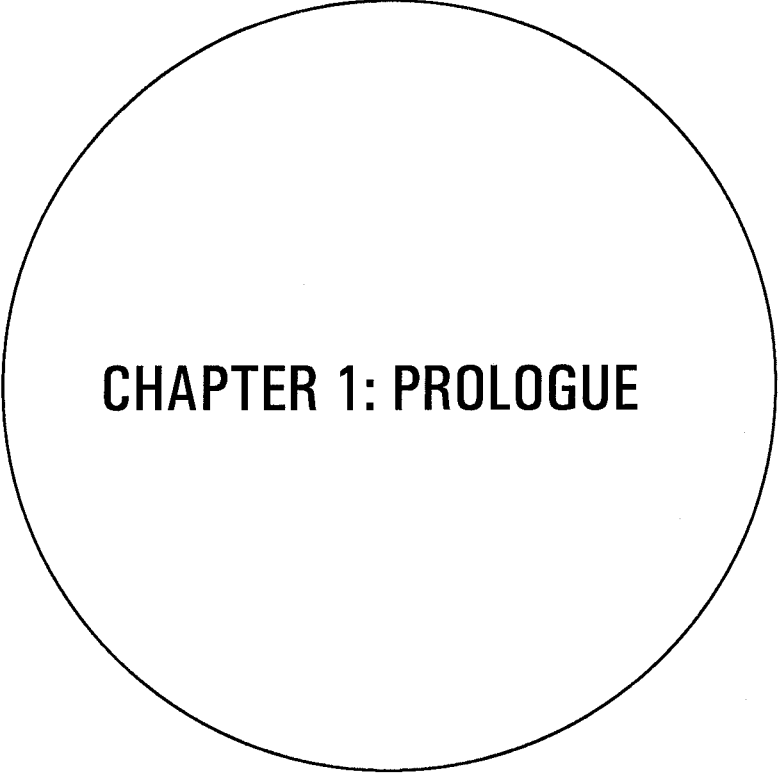*Printout*THE DAYS ON THE ISLAND: PART I

## CHAPTER 1: PROLOGUE

My long anticipated vacation started at Mallorca  
island which

*Related commands*

SCF, SCP, UNIT

# SDP — Store Dash Pattern

## Format

*SDP pattern-number, dash1, space1, dash2, space2, ..., dash10, space10;*

## Parameters

*pattern-number:*

number from 11 to 20

*dash1 ... 10:*

length of dash


*space1 ... 10:*

space between dashes

## Function

The SDP command generates a new dash pattern used by the DPAT (dashed pattern) command for stroking a path. The *dash* and *space* values represent the lengths of alternating black and white segments for stroking the line segment in the path, using the unit value designated by the UNIT command.

For example, SDP 11, 2, 2, 5, 5; stores the following dash pattern in pattern number 11:

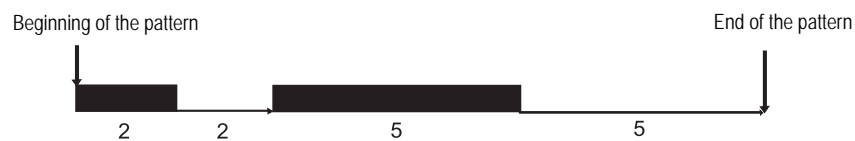


The maximum number of pairs of dash and space allowed for a SDP command is 10. If the dash pattern begins with a space, 0 must be specified for the first *dash* value (*dash1*). To end the pattern with a dash, the last *space* value may be omitted.

The user-defined dash patterns are valid until another SDP command changes the current definition or until the printing system is switched off.

## *File*

```
!R! RES; UNIT P;  
SDP 11, 2, 2, 5, 5;  
NEWP;  
UNIT C;  
SPD .2; PMRA 10, 10, 3, 0;  
DPAT 11; PARC 10, 10, 3, 0, 360;  
STRK;  
  
PAGE;  
EXIT;
```

## *Printout*

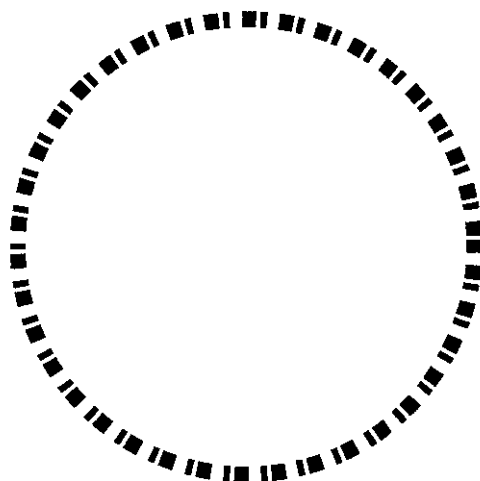

## *Related Command*

DPAT

# SEM — Set Emulation Mode

## *Format*

SEM *mode* ;

## *Parameter*

*mode*:

0 = Line Printer  
1 = IBM Proprinter X-24E  
2 = Diablo 630  
5 = Epson LQ-850  
6 = HP LaserJet/PCL  
8 = KC-GL (Plotter)  
9 = KPDL (an option on some models)

## *Function*

The SEM command temporarily changes the printing system's emulation mode. The new mode remains in effect until another SEM or an RES (reset) command is issued.

The SEM command also resets the margins and various other parameters. It should therefore be placed at the beginning of a program or file.

The SEM command does not change the power-up emulation mode. When power is switched off, the printing system loses the mode set by the SEM command. Upon power up, it retains the default emulation, which is set by the P1 parameter of the FRPO command.

If you usually work in 'emulation A' but occasionally use 'emulation B,' it is convenient to set 'emulation A' with the FRPO command and use the SEM command to change to 'emulation B' when necessary. In this case you must avoid using the RES command in 'emulation B,' because the RES command resets the printing system to 'emulation A.'

## *File*

```
!R! CMNT To work temporarily in the LQ-850 emulation;  
SEM 5;  
EXIT;
```



# SETF — SET alternate Font

## Format

SETF *alternate-number*, *font-number*;

## Parameters

### *alternate-number*:

a number from 0 to 31

### *font-number*:

a number from 0 to 65535

## Function

The SETF command assigns a font to an alternate number, so that it can be selected by the ALTF (alternate font) command. The font number can be one of the resident font numbers or the number of a nonresident font defined by LDFC (load font character) commands.

A scalable font can also be assigned to an alternate number when given a temporary font number in advance. See the SFNT (set font) command page.

In some emulation modes, default assignments are given to low alternate numbers so that SETF commands can be embedded for some word processing software. See *Emulation* of the *Technical Reference* manual.

## File

```
!R! RES;
SFNT 'Helvetica', 10, 2000;
SFNT 'Helvetica-BdOb', 10, 2001;
SETF 1, 2000;
SETF 2, 2001;
MCRO BIBLIO;
ALTF 1; TEXT %1, E; TEXT " ", E;
ALTF 2; TEXT %2, E; TEXT " ", E;
ALTF 1; TEXT %3, N;
ENDM;
ALTF 1; TEXT 'BIBLIOGRAPHY',N,U;
TEXT,N;
CALL BIBLIO, "Engelberger, Joseph L., ",
"Robotics in Practice,", "Kogan Page";
CALL BIBLIO, "Cohen, J., ",
"Human Robots in Myth and Science,", "Allen and Irwin";
CALL BIBLIO, "McCorduck, Pamela,",
"Machines Who Think,", "W. H. Freeman and Company";
CALL BIBLIO, "Asimov, Isaac,",
"I, Robot,", "Doubleday & Co.";
EXIT;
```

*Printout*

BIBLIOGRAPHY

Engelberger, Joseph L., ***Robotics in Practice***, Kogan Page  
Cohen, J., ***Human Robots in Myth and Science***, Allen and Irwin  
McCorduck, Pamela, ***Machines Who Think***, W. H. Freeman and Company  
Asimov, Isaac, ***I, Robot***, Doubleday & Co.

# SFA — Set bitmap Font Attributes

## *Format*

SFA *hmi*, *vmi*, *F/P*[ , *rotation*, *symbol-set*, *height*, *U/I*, *weight*, *type-face*][ , *font-type*];

## *Executable Parameters*

### *hmi:*

horizontal motion index; in a fixed font, the distance from the center of one character to the center of the next; in a proportionally spaced font, the width of the space character

### *vmi:*

vertical motion index—the line-to-line spacing

### *F/P:*

F = fixed spacing

P = proportional spacing

## *Non-executable Parameters*

### *rotation:*

0 = normal

1 = face-down

2 = upside down

3 = face-up (used in landscape mode)

### *symbol-set:*

symbol set (number from 0 to 65535):

4 = ISO 60 Norway

5 = Roman Extension

9 = ISO 15 Italian

14 = ECMA-94 Latin 1

19 = ISO 11 Swedish

21 = ISO 6 ASCII

37 = ISO 4 U. K.

38 = ISO 69 France

39 = ISO 21 Germany

53 = US Legal

75 = ISO

83 = ISO 17 Spain

277 = HP Roman-8

305 = PC Extension

341 = IBM PC-8

373 = IBM PC-8 (D/N)

405 = IBM PC-850

*height:*

maximum height of the font

*U/I:*

U = upright

I = italic

*weight:*

degree of bolding, from -7 (light) to +7 (bold)

*type-face:*

- 0 = Line Printer
- 1 = Pica 2 = Elite
- 3 = Courier
- 4 = Swiss 721
- 5 = Dutch 801
- 6 = Gothic
- 7 = Script
- 8 = Pret. Elite
- 9 = Caslon
- 10 = Orator

*font-type:*

- 0 = 7-bit, 96 characters (character codes 32 to 127)
- 1 = 8-bit, 192 characters (character codes 32 to 127 and 160 to 255)
- 2 = 8-bit, 256 characters (All character codes. The printing system must be set to the HP transparency mode. See *Emulation of the Technical Reference manual.*)

## ***Function***

The SFA command specifies the attributes of the current bitmap font. It can be used to change the default attributes of the bitmap font and will be ignored when the current font is a scalable font. The font retains its new attributes until they are changed by another SFA command or power is switched off. Font attributes are not reset by the RES (reset) command.

The SFA command has two types of parameters. The executable parameters adjust the intrinsic character and line spacing of the font. The non-executable parameters do not change the appearance of the font at all, but they affect the way in which the font is selected by word-processing software in the HP LaserJet emulation.

### **Executable Parameters**

The first three parameters are required in every SFA command. The *hmi* parameter sets the character spacing of a fixed font or the word spacing of a proportional font. The *vmi* parameter adjusts the line spacing. The *vmi* and *hmi* parameters both use the unit value designated by the UNIT command.

The third parameter designates the font as fixed or proportional. Normally you should specify F for a fixed font (example: font 1) and P for a proportional font (example: font 2).

If the font mode (FTMD) value is 15, the assigned attributes take effect immediately. If the font mode value is less than 15, some of the attributes, although assigned to the font,

will not take effect. If the font mode is 0 (the default value in the daisywheel emulation mode), none of the attributes will take effect.

#### Non-executable Parameters

The fourth and subsequent parameters of the SFA command are optional, although if one of these parameters is desired, then the preceding parameters must also be specified. The optional parameters are used to describe downloaded fonts for selection by embedded commands in the HP LaserJet emulation mode. The parameters can also redefine the attributes of resident fonts. However, they do not actually change the physical appearance of the font, only how the printing system interprets the font's attributes. The rotation parameter should be 0 for a portrait font or 3 for a landscape font. The values 1 and 2 are not normally used. You cannot change the orientation of a font with this parameter.

The symbol set parameter identifies the font's character set. Specifying this parameter does not actually change the character set. The height parameter is measured in the unit value designated by the UNIT command.

### *File*

```
!R! RES; FTMD 15;
UNIT C; SLM 2; STM 4;
FONT 1; SFA .25, 1, F;
FONT 2; SFA .15, .5, P;
FONT 1;
EXIT;
```

At these settings, in font mode 15, font 1 is double spaced (1 cm), !R! FONT 2; EXIT,E; while font 2 is single spaced (0.5 cm) with 1.5 mm spaces between words.

```
!R! FONT 1; EXIT,E;
The printer remembers
the spacing assigned
to each font.
```

## *Printout*

At these settings, in  
font mode 15, font 1 is  
double spaced (1 cm),  
while font 2 is single  
spaced (0.5 cm) with 1.5  
mm spaces between words.

The printer remembers  
the spacing assigned  
to each font.

# SFNT — Select current FoNT by typeface

## Format

```
SFNT 'type-face' [ , height [ , font-number [ , symbol-set , compression ,
shear ] ] ] ;
```

## Parameters

### *type-face*:

Name of the typeface of the font to be selected.

### *height*:

Height of the characters in points. The minimum value is 0.25 points and the maximum value is 999.75 points, in 0.25-point increments.

### *font-number*:

Integer from 1000 to 65535

### *symbol-set*:

Symbol set, number from 0 to 65535; Refer to LaserJet Symbol Sets in *Emulation of the Technical Reference* manual.

### *compression*:

1 for normal character width. Smaller values for narrow characters; and larger values for wider characters. The minimum value is 0.3 and the maximum value is 3.

### *shear*:

0 for normal (unitalicized) characters. Positive values give forward italicization; and negative values give backward italicization. The minimum value is -1 and the maximum value is 1.

## Function

The SFNT command selects the font which matches the *type-face* parameters. It enables the user to size its height, assign a font number and vary some of the font attributes so that characters can appear compressed or sheared. All parameters except *type-face* are ignored if a bitmap typeface is specified.

By designating a font number for a scalable font, it can later be retrieved by using a FONT command. If you specify the symbol set, compression, and shear parameters together, the FONT command recalls the font with these effects intact.

*type-face* should be a name from the font table in Section 4.2. of the *Technical Reference* manual. Specify the full name exactly as it appears in the table, including case sensitivity. This command is ignored and the current font is not changed if the typeface name is not in the table or is not typed correctly.

*height* defines the size of the font, using the unit of points regardless of the current unit setting. The SFNT command is ignored if the *height* value is out of the range. If the

*height* parameter is omitted, the printing system sizes the font to the height of the current font. The following example displays a range of font heights.

54 RRRRRRRRRR  
 39 RRRRRRRRRRRR  
 30 RRRRRRRRRRRRRR  
 24 RRRRRRRRRRRRRRRR  
 20 RRRRRRRRRRRRRRRRRR  
 16 RRRRRRRRRRRRRRRRRRRR  
 14 RRRRRRRRRRRRRRRRRRRR  
 13 RRRRRRRRRRRRRRRRRRRR  
 12 RRRRRRRRRRRRRRRRRRRR  
 11 RRRRRRRRRRRRRRRRRRRR  
 10 RRRRRRRRRRRRRRRRRRRR  
 9.5 RRRRRRRRRRRRRRRRRRRR  
 9 RRRRRRRRRRRRRRRRRRRR

You can assign any number from 1000 to 65535 as a temporary *font-number*, as long as you do not duplicate the number of a bitmap font or a font number already in use. If the number matches one already assigned to another font, the printing system ignores the SFNT command.

*symbol-set* uses HP PCL matching code to change the font's symbol set. Unsupported symbol set values, if specified, are ignored.

*compression* squeezes or expands characters in the horizontal direction.

Compression = 0.3 M Compression = 1 M Compression = 3 M

*shear* imparts a slant to the characters: forward if the angle value is positive; backward if it is negative. Zero gives upright characters.

Shear = -1 M Shear = 0 M Shear = 1 M

Changes made with SFNT to a scalable font in its height, symbol set, compression, and shear remain effective until another font selection command is encountered. To retrieve this scalable font later, use the FONT command.

## File

```
!R! RES; SPO P;
SFNT 'Helvetica-Nr', 10, 3000, 277, 2, .3;
EXIT;
```



This is 10-point Helvetica-Nr,  
with Roman-8 symbol set, compression is 2, and  
shear is .3. You can later recall this font by the  
FONT 3000; command.  
!R! PAGE; EXIT;

### *Printout*

*This is 10-point Helvetica-Nr,  
with Roman-8 symbol set, compression is 2, and  
shear is .3. You can later recall this font by the  
FONT 3000; command.*

# SGPC — Set kcGI Pen Color

COLOR

## *Format*

SGPC *pen-number*, *color*;

## *Parameters*

### *pen-number:*

number from 1 to 8 corresponding to FRPO G1 to G8 parameter

### *color:*

0 = Black  
1 = Red  
2 = Green  
3 = Yellow  
4 = Blue  
5 = Magenta  
6 = Cyan  
7 = White

## *Function*

The SGPC command sets the color of a pen 1 through 8 for use with KCGL to a specified color. The specified value is permanently saved in the printing system.

# SHMI — Set HMI

## Format

```
SMHI hmi;
```

## Parameter

### *hmi:*

horizontal motion index; in a fixed font, the distance from the center of one character to the center of the next; in a proportionally spaced font, the width of the space character

## Function

The SHMI command sets the HMI. The parameter is measured in the unit value specified by the UNIT command.

## File

```
!R! RES; SLM 1; STM 2; EXIT;
This line has the default spacing.
!R! UNIT C; SHMI .3; EXIT;
This line has a slightly wider spacing.
!R! SFNT 'TimesNewRoman', 10; SHMI .3; EXIT;
Proportional fonts are not influenced.
!R! PAGE; EXIT;
```

## Printout

```
This line has the default spacing.

This line has a slightly wider spacing.

This is a proportional font printed with wider spacing.

This is a proportional font printed with default spacing.
```

# SIMG — Set IMaGe model

## Format

SIMG *operation-mode* ;

## Parameter

*operation-mode*:

	<i>Source image</i>	<i>Pattern image</i>
1 =	Transparent	–
2 =	Opaque	–
3 =	Transparent	Transparent
4 =	Transparent	Opaque
5 =	Opaque	Transparent
6 =	Opaque	Opaque


## Function

The SIMG command sets the mode for controlling the transparency and opaqueness of an image and the current pattern when they are overlaid on each other.


In the table above, the *source image* can be a rectangular area, characters, or a raster graphics image preceded by an SIMG command. The fill patterns and gray shade rendered with the PAT (pattern), FPAT (fill pattern), and GPAT (gray pattern) commands can be used for *pattern images*.

With operation modes 1 and 2, the SIMG command takes care of the source image’s transparency only. The default operation mode is 1. The white pixels of the source image do not overlay on the destination. For example, you cannot pattern a character. With operation mode 2, the SIMG command applies the white pixels of the source image onto the destination directly.

SIMG=1

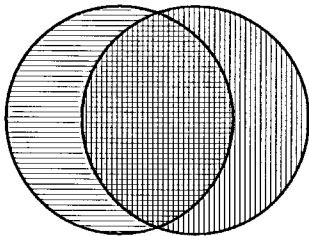

SIMG=2

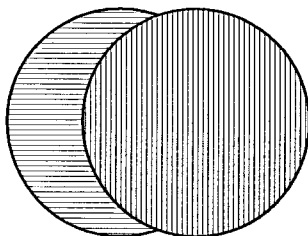

The figure on the next page illustrates the effects of operation mode 3 through 6. In this example, the letter A represents the source image overlaid with the pattern image, while the two rectangles are referred to as the destination image.

*operation-mode = 3*: Both the source image and pattern image are transparent. Since the source image is transparent, in the first example, the letter A is patterned and overlaid onto the destination image (two rectangles).


*operation-mode = 4*: The source image is *transparent* and the pattern image is now *opaque*. The pattern's white pixels overlay the destination image in the shape of the letter A.

*operation-mode = 5*: The source image is *opaque* and the pattern image is transparent. Being opaque, the source image (the letter A) as it is enclosed within a square comes overlaid onto the destination. The pattern image fills only the area on the destination which is covered by white pixels. Note that the letter A is patterned only with its opposing quarters.


*operation mode = 6*: Both source and pattern images are opaque, the entire letter A is patterned, and the full source image is overlaid onto the destination.

#### Operation Modes


Operation mode=3

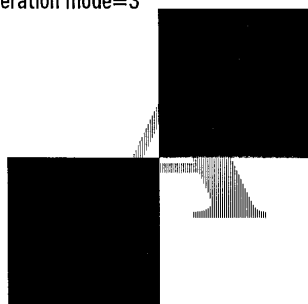


Operation mode=4

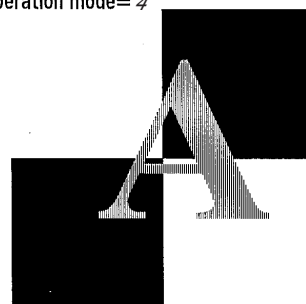

Operation mode=5

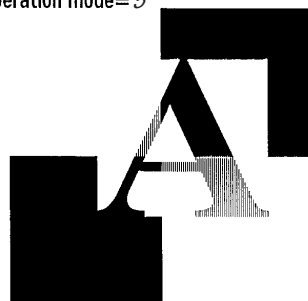

Operation mode=6

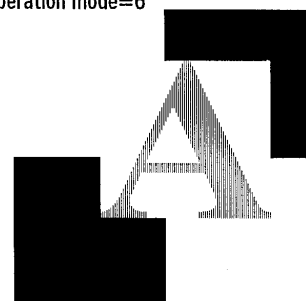

## *File*

```
!R! RES; UNIT C;  
NEWP;  
PMZP 5, 5;  
PDRP 2.5, 0, 0, 2.5, -5, 0, 0, 2.5, 2.5, 0;  
PAT 1; SIMG 4;  
FILL 1;  
MRP -1, 3.5; PAT 18;  
FSET 4158T3B0S1P108V; TEXT "A";  
FILL 1;  
PAGE; EXIT;
```

## *Printout*



# SIMP — create SIMPle color palette

COLOR

## Format

`SIMP palette ;`

## Parameter

*palette:*

- 1 = single plane K (Black) palette (Default)
- 3 = 3-plane device RGB palette

## Function

The SIMP command creates a palette already defined by the system from either a single plane (monochrome) or 3-plane (8-color) RGB palette. The default palette is a monochrome palette.

Colors and parameters specifiable by SCOL command for each palette are as follows:

palette	SCOL command parameter	Color
1 (single plane)	0	White
	1	Black
3 (3-plane)	0	Black
	1	Red
	2	Green
	3	Yellow
	4	Blue
	5	Magenta
	6	Cyan
	7	White

Color assignments (using the ACLI command) cannot be made to the palette created using the SIMP command.

The currently active palette ID does not change.

### *File*

```
!R! RES; UNIT C; SIMP 3;  
MCRO SIMP;  
NEWP;  
SCOL %2;  
PDRP 2, 0, 0, 2, -2, 0, 0, -2;  
FILL 1;  
PMRP .5, .5;  
ENDM;  
CALL SIMP,0,0;  
CALL SIMP,0,1;  
CALL SIMP,0,2;  
CALL SIMP,0,3;  
CALL SIMP,0,4;  
CALL SIMP,0,5;  
CALL SIMP,0,6;  
CALL SIMP,0,7;  
PAGE;  
EXIT;
```

### *Printout*





# SIR — Set Image Refinement level

## *Format*

*SIR level ;*

## *Parameter*

*level:*

- 0 = Off
- 2 = On (Medium)

## *Function*

The SIR command accesses different levels of Kyocera Image Refinement (*KIR*). The image refinement level remains in effect until the printing system receives a RES command or a different SIR command. The default value is On.

Refer to the *User's Manual* for details about how to obtain the optimum level of the image refinement.

## *File*

```
!R! SIR 0; CMNT KIR is off; EXIT;
```

# SLJN — Set Line Join

## Format

```
SLJN mode ;
```

## Parameter

*mode*:

line join mode:  
1 = Beveled join  
2 = Mitered join  
3 = Round join  
4 = Notched join

## Function

The SLJN command determines how two connected lines in a path are joined. The default join is *beveled* (1).

*Beveled* join ends the lines with butt caps (Refer to the SCAP command) and fills the larger angle between the lines with a triangle. *Mitered* join extends the edges of the lines until they touch. The current *miter limit* value affects this join type (Refer to SMLT command on page 312). *Round* join connects lines with a circular join noted by a diameter equal to the width of the lines. *Notched* join enables the lines to overlap.


Beveled join



Mitered join



Round join

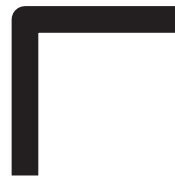

Notched join



*File*

```
!R! RES; UNIT C;
NEWP;

SPD .5;
SCAP 3;
CMNT Round-capped at the upper-left corner;
SLJN 3;
CMNT Round-joined at other corners;
PMZP 5, 16.5;
PDRP 3, 0, 0, 3, -3, 0, 0, -3;
STRK;

NEWP;
SCAP 1;
CMNT Square-capped at the upper-left corner;
SLJN 2;
CMNT Mitered-joined at other corners;
PMZP 11, 16.5;
PDRP 3, 0, 0, 3, -3, 0, 0, -3;
STRK;

PAGE;
EXIT;
```

*Printout*

## SLM — Set Left Margin

### *Format*

*SLM distance ;*

### *Parameter*

#### *distance:*

size of left margin

### *Function*

The SLM command sets the left margin, as measured from the left edge limit of the paper in the unit value designated by the UNIT command.

If the margin is moved to the right of the current cursor position, the cursor moves to the new margin.

When the left margin is moved to the right, the right margin does not change. But when the left margin is moved toward the left, the right margin moves with it, keeping a constant page width. To move the left margin to the left but leave the right margin in its original position, you must add an SRM command after the SLM command to restore the original right margin.

### *File*


```
!R! RES; UNIT C; FONT 2;  
SFNT "TimesNewRoman";  
SLM 1;  
EXIT;  
Location of 1-cm left margin
```

```
!R! SLM 2; EXIT;  
Location of 2-cm left margin
```

```
!R! SLM 3; EXIT;  
Location of 3-cm left margin
```

```
!R! PAGE; EXIT;
```

## *Printout*

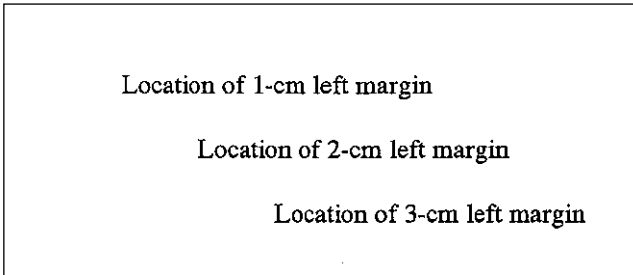

Location of 1-cm left margin

Location of 2-cm left margin

Location of 3-cm left margin

# SLPI — Set Lines Per Inch

## *Format*

*SLPI number;*

## *Parameter*

### *number:*

Number of lines per inch

## *Function*

The SLPI command sets the number of lines per inch (even if the UNIT command designates a non-inch unit).

## *File*

```
!R! RES; STM 2;  
SFNT "Helvetica";  
EXIT;  
These lines have the  
default spacing of  
six lines per inch.  
!R! SLPI 2; EXIT;  
These lines are  
spaced at two lines  
per inch.  
!R! PAGE; EXIT;
```

## *Printout*

These lines have the  
default spacing of  
six lines per inch.

These lines are  
  
spaced at two lines  
  
per inch.

## *Related Command*

SLS

# SLPP — Set Lines Per Page

## *Format*

*SLPP number;*

## *Parameter*

### *number:*

number of lines per page

## *Function*

The SLPP command sets the bottom margin for an exact number of lines per page based on the current line spacing. As long as you do not change the line spacing or use PRESCRIBE commands that move the cursor, you will get the specified number of lines per page.

To control the page size in terms of inches or centimeters instead of a number of lines, use the SBM (Set Bottom Margin) or SPL (Set Page Length) command. The advantage of the SLPP command is that it sets the bottom margin to accommodate an exact number of lines, so no excess is carried over to the next page.

A bottom margin setting in a document file should be placed at the beginning of the file or at a page break.

## *File*

```
!R! RES; UNIT C;
SFNT "TimesNewRoman";
STM 1; SLS 1; SLPP 10;
EXIT, E;
Top margin at 1 cm, with 10 lines per page. (Line 1)
Line 2
Line 3
Line 4
Line 5
Line 6
Line 7
Line 8
Line 9
Line 10
Line 11
Line 12
!R! PAGE; EXIT;
```

*Printout*

Top margin at 1 cm, with 10 lines per page. (Line 1)	
Line 2	
Line 3	
Line 4	
Line 5	Line 11
Line 6	Line 12
Line 7	
Line 8	
Line 9	
Line 10	



# SLS — Set Line Spacing

## *Format*

*SLS distance ;*

## *Parameter*

### *distance:*

Line-to-line spacing

## *Function*

The SLS command sets the distance from the base of one line to the base of the next line. The distance is measured in the unit value designated by the UNIT command.

The line spacing can be set by either the SLS or the SLPI (set lines per inch) command. SLPI sets the number of lines per inch. SLS sets the number of inches (or other units) per line.

## *File*

```
!R! RES; UNIT C; STM 5;
SFNT "TimesNewRoman";
EXIT;
These lines have the
default line spacing
of 0.423 cm (6 lpi).
!R! SLS .6; EXIT;
These lines are
spaced at intervals
of .6 centimeters.
!R! PAGE; EXIT;
```

## *Printout*

These lines have the  
default line spacing  
of 0.423 cm (6 lpi).

These lines are  
spaced at intervals  
of .6 centimeters.

## *Related Command*

SLPI

# SMLT — Set Miter Limit

## Format


SMLT *limit-value* ;

## Parameter

### *limit-value*:

Ratio of the length through a join to the width of line, expressed by the following formula (Default is 10. Minimum value is 1).

$$\text{limit-value} = \frac{\text{miter length}}{\text{line width}} = \frac{1}{\sin(a/2)}$$

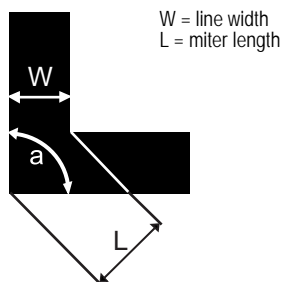

## Function

The *miter limit* value set by the SMLT command is the maximum ratio of the miter length through a join to the width of the lines connected to each other.

The default miter limit value is 10. In smaller miter-limit values, say 3, the miter join automatically switches to the beveled join. This switching prevents the problem of a spike extending beyond the intersection of the path because a small angle is used for the miter-join.




## File

```
!R! RES; UNIT C;  
NEWP;  
PMZP 5, 15;  
SPD .5;  
SLJN 2; CMNT Mitered join;  
PDRP 1.5, -2, 1.5, 2, 1.5, -2,  
      1.5, 2, 1.5, -2, 1.5, 2;  
SMLT 10; CMNT Miter limit is 10;  
STRK;
```

```
NEWP;  
PMZP 5, 19;  
SPD .5;  
SLJN 2; CMNT Mitered join;  
PDRP 1.5, -2, 1.5, 2, 1.5, -2,  
      1.5, 2, 1.5, -2, 1.5, 2;  
SMLT 1; CMNT Miter limit is 1;  
STRK;
```

```
PAGE;  
EXIT;
```

## Printout

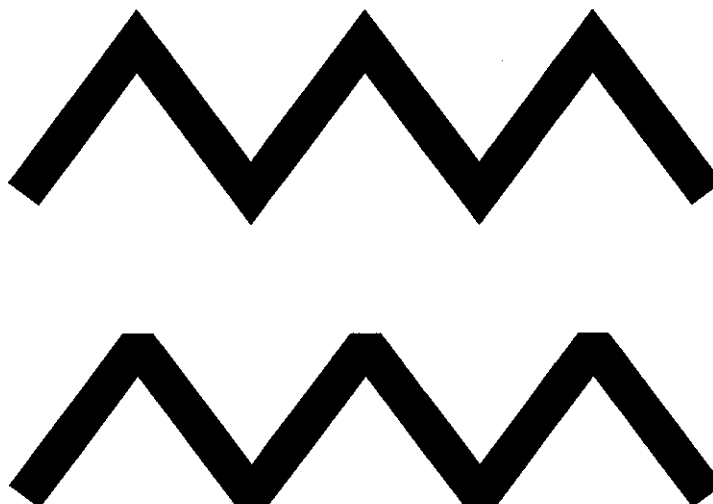

## Related Command

SLJN

# SMNT — Set MoNiTor simulation

COLOR

## Format

`SMNT monitor-type [,temperature, red-x, red-y, green-x, green-y, blue-x, blue-y, gamma] ;`

## Parameters

### *monitor-type:*

0 = None  
 1 = SMPTE 240M  
 2 = HDTV (sRGB) [default]  
 3 = Sony Trinitron  
 4 = Apple RGB  
 5 = NTSC  
 6 = KC-RGB  
 7 = Custom

### *temperature:*

color temperature  
 3500, 5000, 5500, 6500 (default), 6740, 7500, 9300

### *red-x/red-y/...*

chromaticity coordinates:  
 red-x: number from 0.0 to 3.0 (default = 0.64)  
 red-y: number from 0.0 to 3.0 (default = 0.33)  
 green-x: number from 0.0 to 3.0 (default = 0.30)  
 green-y: number from 0.0 to 3.0 (default = 0.60)  
 blue-x: number from 0.0 to 3.0 (default = 0.15)  
 blue-y: number from 0.0 to 3.0 (default = 0.06)

### *gamma*

value of gamma correction:  
 number from 1.0 to 3.0 (default = 2.2)

## Function

The SMNT command simulates a particular monitor or a monitor customized by specifying the color temperature, etc. Parameters except monitor-name are enabled only when monitor-name value is 7 (custom).

Resetting the printing system or switching emulation modes resets all custom parameters to the default states.

The simulation provided by this command is enabled only when the device-dependent color space is in use.

This command is irrelevant to some color printing system models. At the time of release of this manual, the command is irrelevant to model FS-5800C; and monitor-name values of 0 and 2 are valid for model FS-8000C.

Resetting the printing system and switching emulation mode reset all parameters to the default states.

# SPAL — Select PALETTE

COLOR

## *Format*

SPAL *id*;

## *Parameter*

*id*:

palette ID number: 0 to 32767 (default is 0)

## *Function*

The SPAL command selects the palette to activate from among the palettes that are currently available. If no palette is associated with the specified number, this command is ignored.

The palette activated by SPAL is deleted when a new palette is created by the CID command. The active palette number does not change. All palettes are deleted by the reset command, leaving only the default palette.

## *File and Printout*

See *ACLI* on page 12.

# SPD — Set Pen Diameter

## Format

`SPD diameter;`

## Parameter

### *diameter:*


line thickness

## Function

The SPD command sets the thickness of the line used in the graphics commands (DRP, PDRP, etc.). The thickness is specified in the unit value designated by the UNIT command. The maximum thickness is 4200 dots (14 inches or 35.56 centimeters) in path graphics mode, and 127 dots (0.42 inches or 1.08 centimeters) in standard graphics mode. The minimum thickness is 1 dot (about 0.01 centimeters or 0.0033 inches). The printing system rounds off all decimal values to the nearest integer value.

The SPD command affects graphics segments created by DZP, DAP, DRP, DRPA, BOX, CIR, and PIE commands. It also affects the width of the line and curve segments stroked as paths.


A slant line drawn by the standard graphics commands becomes thicker than specified by the SPD command. The effect may be most noticeable with a 45° slant. In the path mode graphics, however, the thickness of any slant lines is automatically adjusted so that the slant lines are maintained in constant thickness as specified by SPD. (See below.)

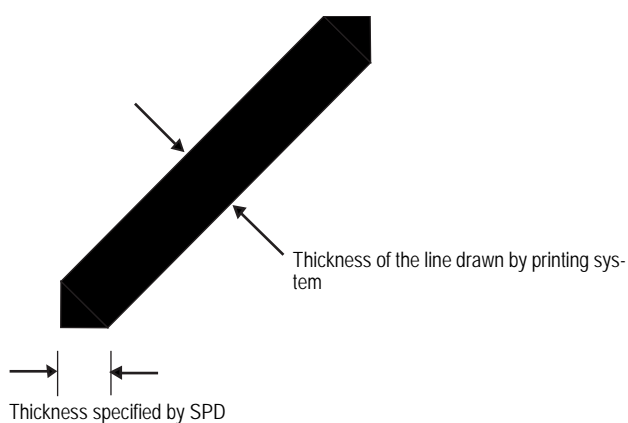

## *File*

```
!R! RES; UNIT C; STM 2; SLM 2; SLS .6;  
SFNT "Helvetica-Nr";  
SPD 0.01; DRP 5, 0; TEXT ' 0.01 cm', N;  
SPD 0.02; DRP 5, 0; TEXT ' 0.02 cm', N;  
SPD 0.05; DRP 5, 0; TEXT ' 0.05 cm', N;  
SPD 0.1; DRP 5, 0; TEXT ' 0.1 cm', N;  
SPD 0.2; DRP 5, 0; TEXT ' 0.2 cm', N;  
PAGE; EXIT;
```

## *Printout*

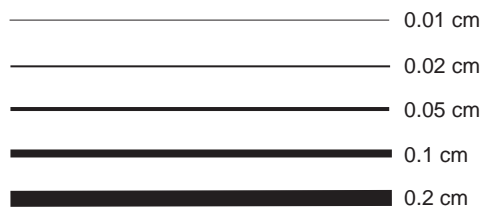



# SPL — Set Page Length

## *Format*

*SPL length ;*

## *Parameter*

### *length:*

distance from top margin to bottom margin

## *Function*

The SPL command sets the bottom margin, as measured from the top margin position in the unit value designated by the UNIT command.

If an attempt is made to print below the bottom margin, the characters are printed on the next page.

A page length setting in a document file should be placed at the beginning of the file or at a page break.

The SBM (Set Bottom Margin) and SLPP (Set Lines Per Page) commands also set the bottom margin.

## *File*

```
!R! RES; UNIT C;
SFNT "TimesNewRoman";
STM 1; SLS 1; SPL 10;
EXIT, E;
Top margin at 1 cm, with 10 cm page length. (Line 1)
Line 2
Line 3
Line 4
Line 5
Line 6
Line 7
Line 8
Line 9
Line 10
Line 11
Line 12
!R! PAGE; EXIT;
```

*Printout*

Top margin at 1 cm, with 10 cm page length. (Line 1)	
Line 2	
Line 3	
Line 4	Line 11
Line 5	Line 12
Line 6	
Line 7	
Line 8	
Line 9	
Line 10	

# SPO — Set Page Orientation

## Format

*SPO orientation ;*

## Parameter


*orientation:*

P = portrait (upright)  
L = landscape (lengthwise)

## Function

The SPO command instructs the printing system how to orient the page, laying text and graphics on the page in a vertical direction (portrait orientation) or a horizontal direction (landscape orientation).

When the orientation is changed, the margins are adjusted so that they remain the same distance from the four edges of the paper (provided cassette paper is being used). See the illustration.

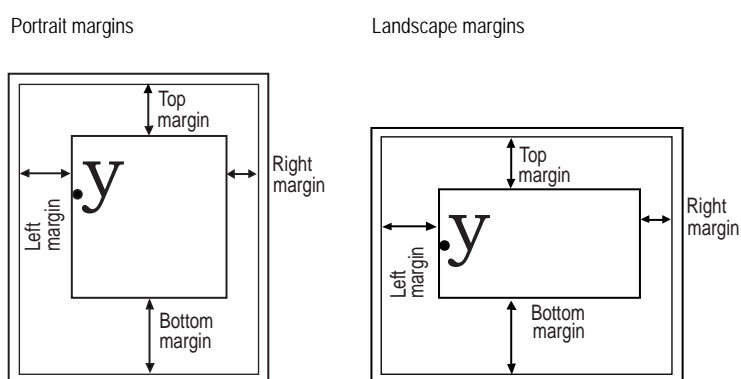

If the printing system cannot adjust the margins as described above, it sets them to the edge limits. For example, if you set a top portrait margin greater than the paper width, then switch to landscape orientation, the printing system resets the top margin to zero.



The printing system uses separate bitmap fonts for portrait and landscape orientations. When the font mode (FTMD) is 8 or higher, as it is in the IBM, Epson, and LaserJet III/4/4 Plus emulations, the printing system automatically sets the correct page orientation each time a new font is selected. Outside of the FTMD range, the printing system will not change orientation with a change in fonts. After using the SPO command, remember to select a font with the new orientation.

The orientation can be changed without starting a new page, as in the example below. It should be noted, however, the printable areas in portrait and landscape orientations are not symmetrical because the edge limits in each orientation are not identical. See the *Technical Reference* manual for details.

## File

```
!R! RES;  
SFNT 'TimesNewRoman-It', 10;  
CMNT This file is for an A4 cassette.;  
SPSZ 8;  
PAT 16, 300;  
UNIT C;  
MZP 4, 24; BOX 6, -6;  
MZP 7, 24; BOX 3, -3; BLK 3, -3;  
MZP 4, 24;  
TEXT, L;  
TEXT 'Portrait orientation';  
SPO L;  
MZP 12, 10; BOX 6, -6;  
MZP 15, 10; BOX 3, -3; BLK 3, -3;  
MZP 12, 10;  
TEXT, L;  
TEXT 'Landscape orientation';  
PAGE;  
EXIT;
```

## Printout

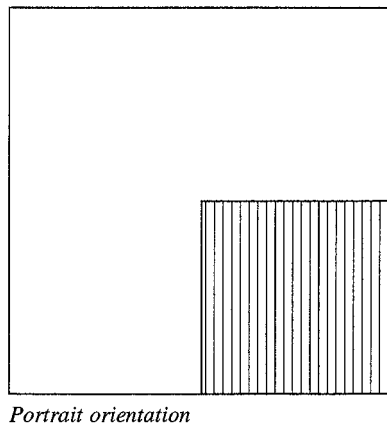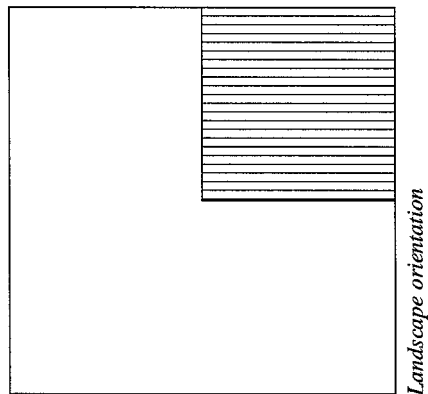

# SPSZ — Set Paper Size

## Format

SPSZ size-code [ , ratio];

## Parameters

### size-code:

- 0 = Same as the size of the paper cassette
- 1 = Monarch (3-7/8 × 7-1/2 inches)<sup>1</sup>
- 2 = Business (4-1/8 × 9-1/2 inches)<sup>2</sup>
- 3 = International DL (11 × 22 cm)<sup>†</sup>
- 4 = International C5 (16.2 × 22.9 cm)<sup>†</sup>
- 5 = Executive (7-1/4 × 10-1/2 inches)<sup>†</sup>
- 6 = US Letter (8-1/2 × 11 inches)
- 7 = US Legal (8-1/2 × 14 inches)
- 8 = A4 (21.0 × 29.7 cm)
- 9 = JIS B5 (18.2 × 25.7 cm)
- 10 = A3 (29.7 × 42 cm)
- 11 = B4 (25.7 × 36.4 cm)
- 12 = US Ledger (11 × 17 inches)
- 13 = A5 (14.8 × 21 cm)
- 14 = A6 (10.5 × 14.8 cm)<sup>†</sup>
- 15 = JIS B6 (12.8 × 18.2 cm)
- 16 = Commercial #9 (3-7/8 × 8-7/8 inches)<sup>†</sup>
- 17 = Commercial #6 (3-5/8 × 6-1/2 inches)<sup>†</sup>
- 18 = ISO B5 (17.6 × 25 cm)
- 19 = Custom (11.7 × 17.7 inches)<sup>††</sup>
- 30 = C4 (22.9 × 32.4 cm)<sup>††</sup>
- 31 = Hagaki (10 × 14.8 cm)<sup>††</sup>
- 32 = Ofuku-Hagaki (14.8 × 20 cm)<sup>††</sup>
- 33 = Officio II
- 36 = A3 Wide<sup>††</sup>
- 37 = Ledger Wide<sup>††</sup>
- 39 = 8K
- 40 = 16K
- 50 = Statement<sup>††</sup>
- 51 = Folio<sup>††</sup>
- 52 = Youkei 2<sup>††</sup>
- 53 = Youkei 4<sup>††</sup>

### ratio:

Enlargement/reduction ratio (for print systems handling A3/ledger):

- 0 = 100% [Cassette size to cassette size]
- 5 = 70% [A3 to A4, B4 to JIS B5, A4 to A5]
- 6 = 81% [B4 to A4, B5 to A5]
- 7 = 86% [A4 to JIS B5]
- 8 = 94% [A4 to letter]
- 9 = 98% [Cassette size to cassette size × 98% ]

<sup>1</sup> Inoperable if *ratio* is specified.

<sup>2</sup> Not supported by some print systems

## Function

The SPSZ command sets the paper edge limits to the dimensions of a standard paper size, allowing for a 5 mm border of all sides. The margins are set to the edge limits. This command is particularly useful for printing on envelopes (*size-code* 1 through 4, 16, and 17). If *size-code* is 0, the printing system adjusts the edge limits to match the cassette size. *size-code* defaults to 0 at power-up and after a reset.

Size codes 10 through 12, 19, and 30 are supported only by the printing system model that handles the A3 size paper. Support for other paper sizes and reduction ratios vary depending on models. For details, see the user's manual supplied with the printing system.

If your printing system model supports the A3 size paper, the *enlargement/reduction ratio* parameter controls reduction and enlargement of printing a page sized by the *size-code* parameter. Although the *enlargement/reduction ratio* parameter is optional, an enlargement/reduction ratio setting remains effective until an SPSZ command with new enlargement/reduction ratio specified or a reset command is encountered.

Note that the *enlargement/reduction ratio* parameter is ignored unless the source paper size and the cassette paper size does not match.

The SPSZ command causes a page break, so it should be placed at the top of a file or program, or at the beginning of a new page.

## Files

```
!R! CMNT Size the page as Monarch; SPSZ 1;  
EXIT;
```

```
!R! CMNT Size the page as A3 and reduce it to A4;  
      SPSZ 10, 5;  
EXIT;
```

```
!R! CMNT Size the page as letter and reduce it to  
      98%; SPSZ 6, 9;  
EXIT;
```

# SPW — Set Page Width

## *Format*

*SPW width ;*

## *Parameter*

### *width:*

width of page, from left margin to right margin

## *Function*

The SPW command sets the right margin, as measured from the left margin position in the unit value designated by the UNIT command.

If an attempt is made to print beyond the right margin, the characters are printed on the next line in the IBM and Epson emulation modes and discarded in the other emulations.

The SRM (Set Right Margin) command also sets the right margin, but it measures from the left edge limit of the paper.

## *File*

```
!R! RES; UNIT C; SLM 1;
CMNT Emulation mode is 1 (IBM);
SFNT "Univers-MdCd", 18; SLPI 4;
SPW 10;
EXIT;
Line with 1-cm left margin and 10-cm width
!R! SPW 8; EXIT;
Line with 1-cm left margin and 8-cm width
!R! SPW 6; EXIT;
Line with 1-cm left margin and 6-cm width
!R! PAGE; EXIT;
```

*Printout*

**Line with 1-cm left margin and 10-cm width**

**Line with 1-cm left margin and 8-cm  
width**

**Line with 1-cm left margin  
and 6-cm width**

*Related Command*

SRM



# SRM — Set Right Margin

## *Format*

SRM *width* ;

## *Parameter*

### *width:*

size of right margin

## *Function*

The SRM command sets the right margin, as measured from the left edge limit of the paper in the unit value designated by the UNIT command.

If an attempt is made to print beyond the right margin, the characters are printed on the next line in the IBM and Epson emulation modes and discarded in the other emulations.

The SPW (Set Page Width) command also sets the right margin, but it measures from the left margin position.

## *File*

```
!R! RES; UNIT C; SLM 1;
CMNT Emulation mode is 1 (IBM);
SFNT "Univers-MdCd", 18; SLPI 4;
SRM 11;
EXIT;
Line with 1-cm left margin and 11-cm right margin
!R! SRM 9; EXIT;
Line with 1-cm left margin and 9-cm right margin
!R! SRM 7; EXIT;
Line with 1-cm left margin and 7-cm right margin
!R! PAGE; EXIT;
```

*Printout*

Line with 1-cm left margin and 11-cm right margin

Line with 1-cm left margin and 9-cm right margin

Line with 1-cm left margin and 7-cm right margin

*Related Command*

SPW

# SRO — Set Raster Options

## *Format*

SRO *presentation-mode* [ , *width* , *height* ] ;

## *Parameters*

### *presentation-mode:*

0 = physical raster direction  
1 = logical page direction

### *width:*

width of raster area in dot; min. 1 to max. 4200 dots

### *height:*

height of raster area in dot; min. 1 to max. 4200 dots

## *Function*

The SRO command specifies the presentation mode which defines the orientation of the raster image. If the *presentation-mode* is 0 (default), the printing system creates the raster image along the width of the physical page regardless of the current page orientation. With the *presentation-mode* 1, however, the raster graphics prints in the orientation of the logical page. Presentation modes 0 and 1 are depicted in the next page.


The *width* and *height* options define the size of the raster area which has the current position as its left-top corner of the area. These options are measured in the dot unit regardless of the current designation of the UNIT command.

Raster data extending beyond the border along the width of the raster area is clipped in the increment of dot.

After a RVRD command sequence finishes, the current position is moved down by 1/300 inch.


### presentation-mode = 0

The width and height of the raster area are defined based on the physical page regardless of the current page orientation. The current page orientation affects the position of the current point, however.

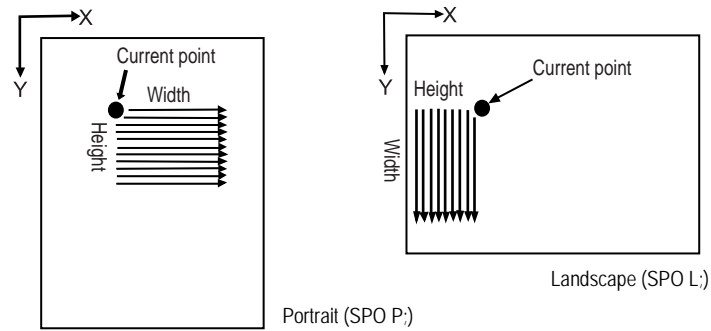

### presentation-mode = 1

The orientation of the logical page determines the width and height of the raster image. The current position also depends on the current page orientation.

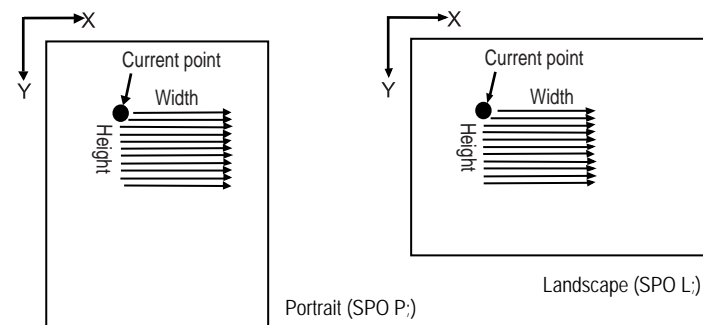

## File

```
!R! SPO L; SRO 0; STR 75;
RVRD;
2;A|0; 2;GG0; 2;^S<; 2;~{>;
2;^S<; 2;GG0; 2;A|0; ENDR;
PAGE;
EXIT;
```

# SROP — Set Raster OPeration

## Format

SROP *value* ;

## Parameter

### *value*:

logical operation value: 0 to 255

## Function

The SROP command applies logical functions (AND, OR, XOR, NOT) to source, texture, and destination. Possible logical operations provided by this command is 255. These logical operations directory map to their raster operations (ROP3).

Logical operation value is eset to the default of 252 by the RES command. An error results and this command has no effect if the ROP3 value is outside the range 0 to 255.

## File


```
!R!
DAM;
RES;

MCRO DBOX;
NEWP;
PMRP 0,0;
PDRP 0.5,0;
PDRP 0,0.5;
PDRP -0.5,0;
CLSP;
SROP 252;
GPAT 0;
FILL;
NEWP;
PMRP 0.2,0.2;
PDRP 0.5,0;
PDRP 0,0.5;
PDRP -0.5,0;
CLSP;
SROP %1;
PAT 25;
FILL;
MRP 0.8, -0.2;
ENDM;

MCRO TROP;
MZIP0,2;
CALL DBOX,0;
CALL DBOX,1;
```

```
CALL DBOX,2;  
CALL DBOX,3;  
RES; EXIT;
```

*Printout*

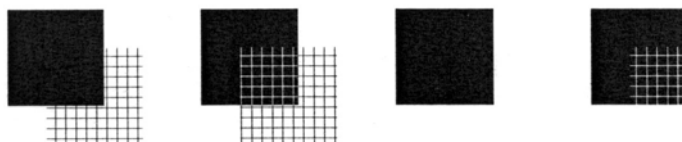

# SSTK — select Sorter STackKer

## Format

SSTK [*tray*, *tray*, ...]; or SSTK 0;

## Parameter

### *tray*:

number from 1 to the maximum (bottom)

## Function

The SSTK command is effective only when the optional sorter is installed to the printing system. It instructs the printing system to deliver printed pages in the sorter mode. Each specified tray receives a complete set of pages, one copy of each.

If the parameters are omitted, the top *n* trays are used, where *n* is the copy count (equal or less than the number of trays). If you specify the copy count which is greater than the number of the trays being selected, the bulk tray receives the overflowed pages. If the tray parameters are specified, the COPY command is unnecessary as the printing system automatically makes the copy count to be the same as the number of the tray parameters specified.

Upon receiving the SSTK command, the printing system automatically performs a page feed.

If the parameter is 0 for SSTK (SSTK 0;) this command disables sorting and delivers all pages to the bulk output tray.



This command is irrelevant to certain combination of photocopier models and option finisher models.

## File

```
!R! RES; SSTK 1, 3, 5; EXIT;
Three copies of this file will be printed.
The output goes to sorter trays 1, 3, and 5.
!R! PAGE; EXIT;
If the tray parameters were omitted (SSTK; COPY3;), sorter
trays 1, 2, and 3 would be used.
!R! PAGE; EXIT;
```

# STAK — select paper STAcKer

## *Format*

STAK *stacker*;

## *Parameter*

### *stacker:*

- 1 = printing system's face-down output tray
- 2 = face-up output tray of the printing system or the option stacker
- 3 = face-down output tray of the option stacker
- 51 = face-up output tray of the option mailbox
- 52 = face-down output tray of the option mailbox
- 61 = face-down output tray of the option job separator (or the DF-610 subtray)
- 62 = face-up output tray of the DF-610 subtray

## *Function*

The STAK command instructs the printing system to deliver pages to the corresponding output stack of the printing system or the option stacker. The selected tray remains in effect until changed by another STAK command. The default value is 1: the printing system's face-down tray.

If an optional device such as a stacker, a document finisher, or a sorter is installed, the *stacker* value 2 instructs the printing system to deliver printed pages to its face-up tray; the value 3 delivers the pages to its face-down tray. The *stacker* values of 51, 52, and 61 are valid for certain copiers installed with the applicable option device.

The STAK command should be placed at the top of a file or program.

## *File*

```
!R! STAK 2; EXIT;
PAGE 1
On printers with only one paper tray this file will be
delivered face-down as usual, page 1 first.
!R! PAGE; EXIT;
PAGE 2
PAGE 2 next, and so on, stacking in the correct order.
!R! PAGE; EXIT;
PAGE 3
But on printers with two paper trays this file will be
delivered to the face-up tray with the pages in reverse
order, page 3 on top.
!R! PAGE; EXIT;
```



# STAT — STATus

## Format

STAT [*mode*];

## Parameter

### *mode*:

- 0 = prints a user status page (default)
- 1 = prints a service person status page

## Function

The STAT command instructs the printing system to print a page of status information, starting on a new page. The status page lists the software version and release date as well as the following information:

- The current unit (inches, centimeters, points, or dots; not available in KPD mode)
- The current page orientation, font, and country code (not available in KPD mode)
- Current margins, line spacing, character spacing, and graphics line width, as measured in the current unit (not available in KPD mode)
- Current memory allocations

The above status settings are temporary conditions set by PRESCRIBE commands. They revert to their default values when power is switched off. Other status page information includes:

- Miscellaneous status: a list of options stored in permanent memory. See *Chapter 6* of the *Technical Reference* manual for the definitions of the option values. These values do not change when power is switched off. Only the FRPO command can alter them.
- Service information to inform a service person.
- Nonresident fonts in memory: Fonts generated by the LDFC command, downloadable soft fonts from software or read from a memory card. Font size and numbers appear alongside the font name. These fonts are lost when power is switched off.




Note


Items and values on the status page may vary among the printing system's firmware versions.

Depending on the parameters, different information may be printed on the status page. (There are two types of status pages: one intended for the end user, and one intended for service personnel.) Also, the printing system can print the status page in different languages in accordance with the language setting of the printing system's control panel. The default is the English status page.

## Sample Status Page

### User status page




**FS-1800+ Page Printer**

**STATUS PAGE**

[0A00/A002][C1][30.00 MDX][00]
Firmware version: 82.00-01\*
Released: 07/Aug/2001

**Hardware Information**

MP Tray	A4	Plain
Cassette 1	A4	Plain
EcoPrint mode	OFF	
Buzzer control	ON	
Host buffer size	200 KB	
Sleep timer	15 Minutes	
FF time out	30 Seconds	

**Page Information**

Resolution	300 DPI
Copies	1
Total page	2138

**Network Status**

**Memory**

Standard memory	8192 KB
Option memory	
Slot 1	Empty
Slot 2	Empty
Total	8192 KB
User available	3557 KB
RAM disk	OFF
Write protect	
Total	0 KB
User available	0 KB

**Installed Options**


Hard-disk drive	NO
Option ROM	NO
Memory card	NO

**Emulation**

Line printer  
IBM Proprinter  
Diablo 630  
Epson LQ-850  
PCL 6  
KPDL2

**Gauge**

### Service status page


**PAGE PRINTER STATUS PAGE FS-1800+**

Firmware version: 82.00-01\*
Released: 07/Aug/2001

Standard setting		Emulation		Paper		Margin		Memory	
Interfases	Unit	Line printer		Feeder	Size	Top		Total	
Serial	*Inch	*IBM Proprinter		MP Tray	A4 01	0.000		8192 KB	
*Parallel	Centimeter	Diablo 630		*Cassette 1	A4 01	Bottom	11.300	User available	3618 KB
	Dots	Epson LQ-850				Left	0.000	Font	
	Points	PCL 6				Right	7.876	1byte code	8
Copies	Page orientation	KPDL2							
1	*Portrait								
	Landscape								

Interface independent parameters				Interface dependent parameters			
Environment	Parameters	Serial	Parallel	Environment	Parameters	Serial	Parallel
Reserved	80 00			User top margin	A1+A2/100	00.00	00.00
Reserved	87 01			User left margin	A3+A4/100	00.00	00.00
Reserved	88 00			User page length	A5+A6/100	13.61	13.61
Default pattern switch	00 00			User page width	A7+A8/100	13.61	13.61
	00 00			Page orientation	C1	00	00
				Default font number	C2.C3.C5 *1	00000	00000
				Font switch	C8	00	00
				Font timeout	J2	06	06
				Font I/O	o0/o1/o2	70/01/02	
					P1	06	01
						01/01	01/02
						00/06	00/06

# STM — Set Top Margin

## *Format*

*STM distance ;*

## *Parameter*

*distance:*

size of top margin

## *Function*

The STM command sets the top margin, in the unit value designated by the UNIT command.

A top margin setting in a document file should be placed at the beginning of the file or at a page break.

If the top margin is moved below the current cursor position, the cursor moves to the new margin. But if the top margin is moved above the current cursor position, the cursor does not move.


## *File*

```
!R! RES; UNIT C;
SFNT "Helvetica-Nr", 18;
STM 2;
EXIT, E;
First page with 2-cm top margin

!R! RES; UNIT C;
SFNT "Helvetica-Nr", 18;
STM 4;
EXIT, E;
Second page with 4-cm top margin

!R! PAGE; EXIT;
```

*Printout*

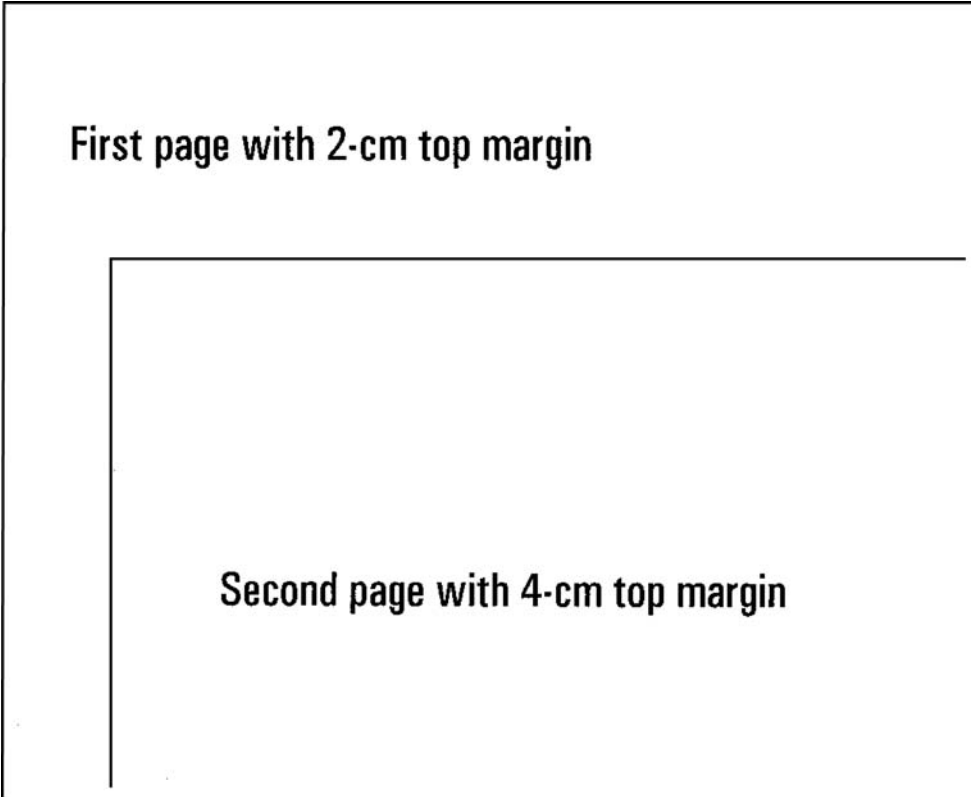

**First page with 2-cm top margin**

**Second page with 4-cm top margin**

# STPC — set STaPle Counter

## Format

STPC [ *staple-count* or letter M (or m) ] ;

## Parameter

### *staple-count*:

number of sheets to be stapled at a time (When this parameter is omitted, '0' is assumed):

2 to 50<sup>1</sup> = divides output pages into stacks of pages of this value and staples each of them. The odd stack is also stapled.

M = divides output pages into stacks of pages equal to the maximum allowable number of sheets of stapling and staples each of them. The odd stack is also stapled.

0 = same as M above but does not divide nor staple a job at all if the total number of pages of the job is more than the maximum allowable number of sheets of stapling. The odd stack is neither stapled.

-1 = same as 0 above but the odd stack is stapled.

## Function

The STPC command specifies the number of sheets that the stapler (finisher) staples a job. This command does not execute stapling therefore should be used with the STPL (staple) command.

For more simplified explanation on the staple-count, here is an example.

To print a 50-page job using a DF-31 finisher (20 pages stapler):

STPC parameter	Stapling operation
M or m	20 sheets, 20 sheets, and 10 sheets are stapled.
15	15 sheets, 15 sheets, 15 sheets, and 5 sheets are stapled.
0	No stapling occurs.
-1	Only the last 10 sheets are stapled.

## File

To staple every 5 sheets of a job at the center 2 staples, printing 15 copies of the job:

```
!R! STPL 3; STPC 5;
JOBS 2, 15, 1, 0, 1, "Interim Report 1", "Steve", "09/22/02
19:24";
TEXT "This is Interim Report 1 ..."; PAGE;
UNIT C; BOX 5,10; PAGE;
JOB; EXIT;
```

<sup>1</sup> This value depends on the stapler to be used.

# STPL — STaPLe

## Format

STPL [*position*];


## Parameter

### *position:*

stapling position:

- 1 = bottom left, one staple
- 2 = top left, one staple
- 3 = left, two staples (straight for Legal size)
- 50 = top left, one staple
- 51 = top right, one staple
- 52 = left, two staples
- 53 = right, two staples
- 54 = top, two staples

### *Staple parameters and positions*

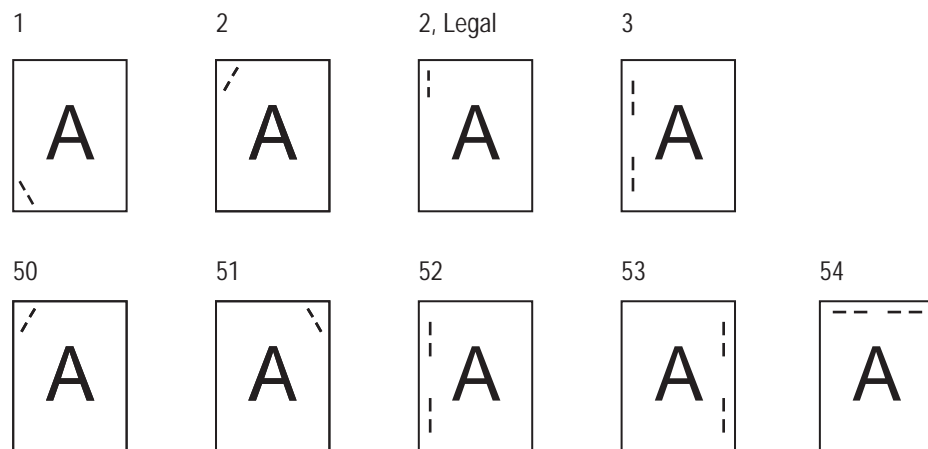

## Function

The STPL command staples the pages of a job at the position specified by the *position* parameter (See above.) using a document finisher incorporating the stapler unit. With position 2 (top left), stapling is automatically straightened (vertical) when Legal size paper is used.

Parameter values 50 to 54 are valid for certain copier models only.

The number of sheets that the stapler can staple at a time depends on the STPC command setting.

The job to be stapled must be defined by the JOBS command. Stapling is valid only when the STPL command is issued preceding a JOBS command sequence. The STPL command automatically deactivates Jog and Job Separation if these functions are enabled in advance. The output stack is enforced to be the stapler output ignoring the

current output stack which may be specified by STAK. (For the document finisher such as the DF-31, the MSTK command may be used to guide stapled pages to one of the output trays as desired.)

STPL command causes a page break.

## *File*

```
!R!
STPL 3; CMNT Two staples on the left;
JOBS 0,3,0,0;
TEXT "Stapling Test, Page 1";
PAGE;
TEXT "Stapling Test, Page 2";
PAGE;
TEXT "Stapling Test, Page 3";
PAGE;
TEXT "Stapling Test, Page 4";
PAGE;
TEXT "Stapling Test, Page 5";
JOB;
EXIT;
```

## *Related Commands*

STPC

# STR — SeT dot Resolution

## Format

*STR dot-resolution ;*

## Parameter

*dot-resolution:*


75, 100, 150, 200, 300, 600, or 1200

## Function

The STR command sets the dot resolution for raster graphics to 75, 100, 150, 200, 300, 600, or 1200 dots per inch. The 200, 600, and 1200 dpi resolutions are available only for the printing system models that support the 600 or 1200 dpi printing resolution. The default value is 75 dots per inch.

The STR command affects only PRESCRIBE raster graphics. It does not change the resolution of vector graphics commands or HP LaserJet raster graphics.

The following diagrams show examples of printing a raster graphics data using different dot resolution.

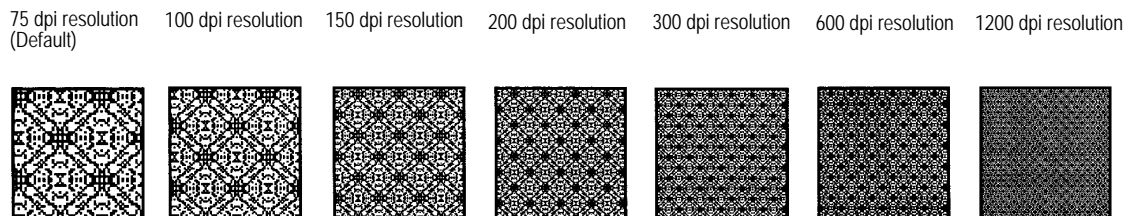



# STRK — STRoKe current path

## Format

```
STRK ;
```

## Parameter

None

## Function

The STRK command strokes the constructed path onto the current page according to the following current graphics state:

- Pen diameter (SPD)
- Dash pattern (DPAT)
- Fill pattern (FPAT)
- Line cap (SCAP)
- Line join (SLJN)
- Flatness (FLAT)

A path itself will not place a line or graphic on a page because PRESCRIBE path-construction commands only define the path. For the path to be drawn or filled as a line, box, character, etc., on the page, the STRK command must be issued.

After stroking the current path, the STRK command clears the path and moves the cursor to the end of the path.


## File

```
!R! RES; UNIT C;

NEWP;
PMZP 7, 17;
SPD .2;
PDRP -2.5, 0, 0, 2.5, 2.5, 0, 0, -2.5;
PDRP 2.1, 1.25, 1.25, -2.1, -2.1, -1.25, -1.25, 2.1;
PMRP 0, 2.5;
PDRP 2.1, -1.25, 1.25, 2.1, -2.1, 1.25, -1.25, -2.1;
STRK;

PAGE;
EXIT;
```

*Printout*

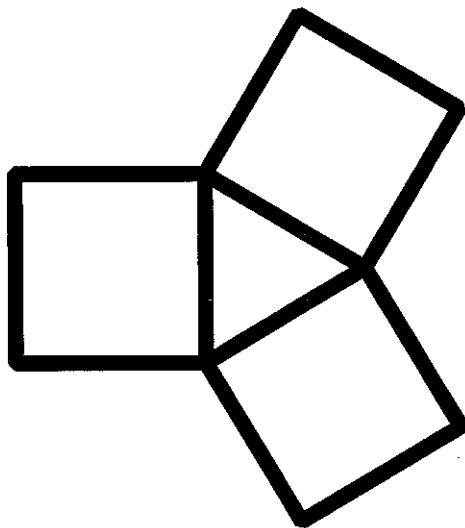

*Related Commands*

FILL, NEWP

# SULP — Set UnderLine Parameters

## Format

SULP *distance* , *thickness* ;

## Parameters

### *distance*:

distance below the baseline

### *thickness*:

thickness of the underline

## Function

The SULP command sets the thickness of any subsequent underlining as well as the distance below the baseline, in the unit value designated by the UNIT command. The distance parameter is limited only by the size of the page. Negative values can be used to obtain overlines.

The minimum underline thickness is one dot. The maximum underline thickness is 127 dots. The default values include:

- Distance below baseline: 7 dots
- Thickness of underline: 4 dots
- One dot equals approximately 0.0083 cm or 0.0033 inches.

The SULP command does not affect the underline character ( ), which is an independent character with ASCII code 95 (hex 5F). If your word-processing software writes underlines by backing up and printing the underline character instead of using the printing system's automatic underline feature, the SULP command will control only underlines printed by the U-option in PRESCRIBE commands such as TEXT.

## File

```
!R! RES; UNIT C; SLS 0.8;
SFNT 'Helvetica-Nr', 12;
TEXT 'Default paramaters', E, U; TEXT ' , ' , E;
SULP .2, .1;
TEXT 'heavier underlining', N, U;
TEXT 'and even', E;
SULP -.32, .04;
TEXT 'OVERLINING', E, U;
TEXT '!';
PAGE;
EXIT;
```

## *Printout*

Default parameters, heavier underlining  
and even OVERLINING!

# TATR — apply Tray ATtributes

## Format

TATR [*source* [ , *thickness* , *print-density* ] ] ;

## Parameters

### *source*

paper source:

0 = MP tray

1 = main cassette

2 = second cassette

### *thickness*

thickness of paper:

0 = normal (normal)

1 = thick

2 = thin

### *print-density*

print density:

lighter (1) to darker (5), default is 3.

## Function

The TATR command applies a paper source (MP tray or cassette) thickness of paper and print density. This enables the printing system to optimize the electrical properties (such as the fuser temperature and the transfer bias) so that the best print quality is achieved with different thicknesses of paper.

The attributes are reset for a tray when *thickness* and *print-density* parameters are omitted. All trays are reset when all three parameters are omitted.



This command is relevant to the FS-1000 printer only.

## File

To attribute the MP tray for thick paper and normal density:

```
!R! TATR 0, 1, 3; EXIT;
```

To reset the second paper cassette (option feeder) to the defaults:

```
!R! TATR 2; EXIT;
```

To reset all paper sources to the defaults:

```
!R! TATR; EXIT;
```

# TEXT — print TEXT

## *Format*

TEXT [ '*string*' ] [ , *option* ] [ , *U-option* ] ;

## *Parameters*

### *string:*

any character string

### *option:*

B = Leave cursor at beginning of string  
E = Move cursor to end of string  
L = Move cursor down one line  
N = Move cursor to beginning of next line

### *U-option:*

Underline text

## *Function*

The TEXT command prints the given string at the cursor location, then moves the cursor as designated by the option. The string to be printed must be enclosed in either single or double quotation marks. (If the string includes one kind of quotation mark, use the other kind to enclose it.) If the string is omitted, nothing is printed. TEXT , N ; can be used to print a blank line, for example. If the option is omitted, the cursor is not moved (same as option B). If the U-option is specified, the string is underlined. The underline thickness and location can be set by the Sulp command.

The TEXT command can be used to position a line of text at an exact location.

The length of the string is unlimited, except that the command as a whole may not be longer than 255 characters. Carriage-return and linefeed codes in the string are ignored.

## *File*

```
!R! RES; UNIT C; MAP 2, 2;  
SFNT 'Univers-MdCd';  
TEXT 'Check desired options:', L, U;  
FONT 2;  
BOX .1, -.1; TEXT 'Power steering', L;  
BOX .1, -.1; TEXT 'CD auto changer', L;  
BOX .1, -.1; TEXT 'Air conditioner', L;  
PAGE;  
EXIT;
```

## *Printout*

### Check desired options:

- ▣ Power steering
- ▣ CD auto changer
- ▣ Air conditioner

## *Related Commands*

CTXT, RTXT

## TPRS — Text PaRSing

### *Format*

TPRS *mode* ;

### *Parameter*

#### *mode:*

- 0 = ANK (alphabetic numeric and kana)
- 1 = shift JIS (2-byte code)

### *Function*

The TPRS command allows character codes to be interpreted as 1-byte or 2-byte character code while printing using a text command.

To parse such characters, the current font must supports 2-byte characters and a 2-byte symbol set such as Windows 3.1J (19K). The parsing method will automatically be shift JIS encoding (2) if the default font and symbol set is of 2-byte.

This command is valid only in HP emulation.



# TRSM — TRansparency Separate Mode

## Format

```
TRSM mode[, tray];
```

## Parameters

### *mode:*

Transparency separate mode:

0 = Off

1 = Inserting a blank page

2 = Inserting a page which the transparency content is printed on

### *tray:*

The number of the paper source which the inserting paper loads from: 1 or above. The number varies depending on the printing system and its configuration. When omitting the *tray* parameter, 1 is automatically set to the *tray* parameter.

## Function

The TRSM command instructs printing system to insert blank or printed page between each transparency. The printing system loads transparency from MP tray and inserting paper from the paper source other than MP tray. When face-down printing, the printing system print the transparency page first. When face-up printing, the printing system print the blank or printed page first.

## File

```
!R!
MTYP 2;
TRSM 1,1;
JOBS 0,1,2,0;
TEXT "page 1";
PAGE;
TEXT "page 2";
PAGE;
JOB;
EXIT;
```

# UNIT — set UNIT of measurement

## *Format*

UNIT *code* ;

## *Parameter*

### *code:*

I = inches  
C = centimeters  
P = points  
D = dots

## *Function*

The UNIT command sets the unit of measurement used in other PRESCRIBE commands.

The initial unit is inches. Other supported units of measurement can be calculated as follows:

- 1 inch = 2.54 centimeters
- 1 inch = 72 points
- 1 inch = 300 dots (300 dpi)/600 dots (600 dpi)/1200 dots (1200 dpi)


UNIT commands are not retroactive. They do not affect values set by previous commands.

## *File*

```
!R! UNIT C; MRP 3, 3;
SFNT "Univers-MdCd", 12;
MRP 3, 3;
CIR .35;
TEXT '          7mm pistol';
UNIT I; MRP 0, 1;
CIR .225;
TEXT '          .45 caliber pistol';
PAGE;
EXIT;
```

*Printout*

 7mm pistol

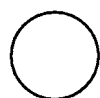 .45 caliber pistol

## UOM — Unit Of Measurement per dots

### *Format*

UOM *number*;

### *Parameter*

#### *number:*

96, 100, 120, 144, 150, 160, 180, 200, 225, 240, 288, 300, 360, 400, 450, 480, 600, 720, 800, 900, 1200, 1440, 1800, 2400, 3600, 7200

### *Function*

The UOM command applies only to the printing system models that support the 600 dpi resolution. It defines the unit of measurement in dots per inch for cursor movements. The command requires that the UNIT value be set to D.

The default unit of measurement is 300 (dpi). For example, the cursor movement of 50 dots equals 1/6 inches.

The command accepts only the above numbers for the unit of measurement. Any other numbers will be ignored when used with this command.

### *File*

```
!R! FRPO N8, 1; RES;
UNIT C;
SFNT "Helvetica-Nr", 9;


MZP 5, 5;
TEXT "UOM 120; BOX 100, 100;", L;
UNIT D;
UOM 120;
BOX 100, 100;

UNIT C;
MZP 5, 9;
TEXT "UOM 720; BOX 100, 100;", L;
UNIT D;
UOM 720;
BOX 100, 100;

PAGE; EXIT;
```

*Printout*

UOM 120; BOX 100, 100;

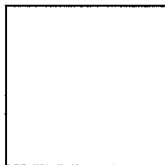

UOM 720; BOX 100, 100;

*Related Command*

UNIT

## VMAL — Virtual Mailbox ALias

### *Format*

```
VMAL mailbox, alias[ , password] ;
```

### *Parameters*

#### *mailbox:*

number from 1 to 255 or character string representing number or alias of virtual mailbox

#### *alias:*

Character string representing the alias being set for the virtual mailbox given by *mailbox* (up to 31 bytes)

#### *password:*

The password for the virtual mailbox given by *mailbox* if a password has been set for it.

### *Function*

The VMAL command sets an alias for a virtual mailbox. When an alias is set for a virtual mailbox using this command, that alias may be used to identify the mailbox just like the virtual mailbox number.

If this command is used on a virtual mailbox for which an alias has already been set, the old alias will be overwritten. If the alias specified has already been set for another virtual mailbox, an error will be displayed on the operator panel and the specification will be invalid.

If an alias is to be set for a virtual mailbox for which a password is set, that virtual mailbox's password is required. An error will be displayed on the operator panel if no password or the incorrect password is specified. (See the *Technical Reference* manual.)

Note that if command syntax is incorrect, such as when an alias longer than 31 bytes is specified, the command will be invalid and no error will be displayed on the operator panel.

The master password is valid for all virtual mailboxes.

### *File*

To set the alias *MyMailbox* for virtual mailbox number 3 for which the password 9999 has been set:

```
!R! VMAL 3, "MyMailbox", 9999; EXIT;
```

# VMOB — Virtual Mailbox Output Bin

## *Format*

VMOB *mailbox*;

## *Parameter*

### *mailbox:*

number from 1 to 255 or character string representing an alias

## *Function*

The VMOB command specifies virtual mailboxes that receive print jobs. It is possible to specify multiple virtual mailboxes by issuing multiple instances of this command.

If no virtual mailbox corresponds to the alias given, an error will be displayed on the operator panel. (See the *Technical Reference* manual.)



Note

This command is irrelevant to photocopy virtual mailbox function.

## *Files*

To stack jobs on virtual mailbox number 3:

```
!R! VMOB 3; EXIT;
```

To stack jobs on the virtual mailbox having the alias *MyMailbox*:

```
!R! VMOB "MyMailbox"; EXIT;
```

## VMPW — set Virtual Mailbox PassWord

### *Format*

VMPW *mailbox* , *current-password* , *new-password* ;

### *Parameters*

#### *mailbox:*

0 = Sets the master password  
1 to 255 = Number of virtual mailbox for which the password is set  
Character string = Alias of virtual mailbox for which the password is set

#### *current-password:*

1 to 65535 = Current password for the virtual mailbox specified by *mailbox*  
0 = Indicates no password is set for the virtual mailbox specified by *mailbox*

#### *new-password:*

1 to 65535 = New password for the virtual mailbox specified by *mailbox*  
0 = Indicates no password is to be set for the virtual mailbox specified by *mailbox*

### *Function*

The VMPW command sets the output password for a virtual mailbox.

If this command is used on a virtual mailbox for which a password is already set, that password must be specified by *current-password* or the command will be invalid and an error will be displayed on the operator panel. An error also will result if the password specification fails or no virtual mailbox corresponds to the alias given. For error displays, see the *Technical Reference* manual.

The master password is valid as the current password for all virtual mailboxes.

Virtual mailboxes for which a password has been set are not shown on the VMB LIST page (See page 134).



This command is irrelevant to photocopy virtual mailbox function.



## *Files*

To set 9999 as the password for virtual mailbox number 3 for which no password is set:

```
!R! VMPW 3, 0, 9999; EXIT;
```

To set no password for the virtual mailbox with the alias *MyMailbox* for which the password 9999 had been set:

```
!R! VMPW "MyMailbox", 9999, 0; EXIT;
```

To change the password for the virtual mailbox with the alias *Purchase Dept.* from 9999 to 3333:

```
!R! VMPW "Purchase Dept.", 9999, 3333; EXIT;
```

# WIDE — set WIDE A4 mode

## Format

WIDE *mode* ;

## Parameter

*mode*:


0 = Off  
1 = On

## Function

The wide A4 function widens the A4 printing width in order to prevent unnatural line breaks or clipping of graphics in cases where a document created as a letter-size document is output in A4 size. The WIDE command sets and clears the wide A4 function. The setting made with this command is initialized by the RES and FRPO commands.

### Printing area

- The width of the A4 printing area is set to that of Letter size.
- The width is increased symmetrically to the left and right.
- The width is always increased in the shorter direction (either width or height, whichever is shorter). Thus if the document is set to landscape orientation, the height is increased.
- The printing area for sizes other than A4 is not affected.

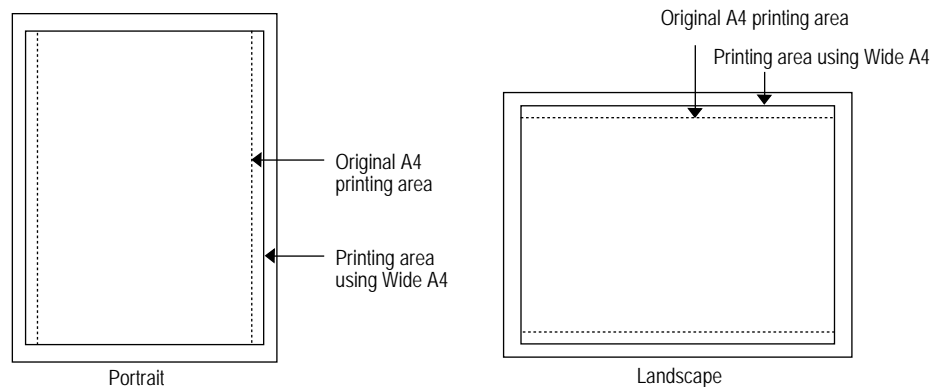

# WRED — WRite EnD

## *Format*

WRED ;

## *Parameter*

None

## *Function*

The WRED command terminates a sequence of writing data to the memory card or to the hard disk, using one of the commands listed below.

The WRED command can be renamed to a string of ASCII characters if necessary. For details, refer to the RWER T or RWRF T command (See page 248 or 256).

## *Related command*

RWER S, RWER W, RWRF W

# XBAR — print two dimensional barcode

## Format

```
XBAR [ data-length ] ; data-string ; ENDB ;  
or  
XBAR buffer-name ; ENDB ;
```

## Parameters

### *data-length*:

length of data in bytes, terminated with a semicolon (;)

If this value is omitted, *data-string* is counted all characters after the first semicolon until the program sees ;ENDB; .

### *data-string*:

data to be encoded, terminated with a semicolon (;) immediately followed by an ENDB command (256 international characters or binary data)

### *buffer-name*:

name of buffer previously defined by XBUF command


## Function

The XBAR command prints a two dimensional barcode (sometimes referred to as PDF417 symbol). The ENDB must follow as a terminator for the barcode data string. Note that carriage return, line feed, space and all other characters must be counted as part of data in the data string field. If *data-length* is omitted, 0, negative value, or non integer, then *data-string* is counted all characters until the program sees ;ENDB;. If *data-length* is 0, the semicolon to terminate the data cannot be omitted. (Command as XBAR;;ENDB;.) It is necessary to have no space between “;” and “ENDB;”.

## *Files*

```
!R! XBAR; The Milky Way is a gravitationally bound  
collection of roughly a hundred billion stars. Our Sun is  
one of these stars and is located roughly 24,000 light years  
(or 8000 parsecs) from the center of our the Milky Way.  
The Galaxy has three major components. A thin disk  
consisting of young and intermediate age stars - this disk  
also contains gas and is actively forming new stars. Dust in  
the disk makes it appear orange in the picture. Dust absorbs  
blue light more than red light and thus makes stars appear  
reddish. Our Galaxy has spiral arms in its disk - these  
spiral arms are regions of active star formation.;ENDB;
```

## *Printout*

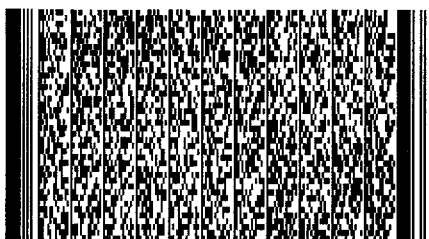

## XBCP 0 — select barcode type/reset all other XBCP parameters

### *Format*

XBCP 0 [ , *type* ] ;

### *Parameter*

#### *type:*

two dimensional barcode type:

1 = PDF417 (only type currently supported)

### *Function*

The XBCP 0 command selects a barcode type and resets all parameters to the defaults.

### *File*

See XBCP 1 (page 365) command page.

# XBCP 1 — specify narrowest element width

## Format

XBCP 1, *element-width*;

## Parameter

### *element-width*:

narrowest bar and space width:

More than or equal to 1 dot. If less than 1 dot, truncated to 1 dot. Default is 3 dots.

## Function

PDF417 supports 8 different bar and space widths. The each width is a multiple of 1 to 8 times of the narrowest element width. The XBCP command set to mode 1 specifies the narrowest element width (narrowest bar width) in the current unit as designated by a UNIT command.

In the following example, the element width is set to .02 inches as the default unit is inches. Minimum width allowed by the printing system is 1 dot. Minimum readable width is probably higher. Minimum width meeting AIM recommendation for open systems is 3 dots. After the first example has been printed, the printing system moves cursor 1 inch down to print another example in which the minimum element width is reverted to its default (3 dots).

## File

```
!R! RES;
MZF 0, 0;
XBCP 1, .02;
XBAR;Min. element width is .02 inches;ENDB;
MZF 0, 1;
XBCP 0;
XBAR;Min. element width is reset (to 3 dots);ENDB; EXIT;
```

## Printout

Minimum element width is 0.02 inch.



Default minimum element width (3 dots)



## XBCP 2 — specify error correction level by percentage

### *Format*

`XBCP 2, percentage;`

### *Parameter*

#### *percentage:*

value between 0 and 400

### *Function*

PDF417 supports an error correction scheme. The XBCP 2 command specifies the error correction level as a percentage of the number of code word values for the data to be encoded. An illegal value defaults to 10.

Note that XBCP 3, as explained on the next page, sets the error correction level by predetermined values, and the execution of XBCP 3 disables the setting of XBCP 2, even if XBCP 2 is executed after XBCP 3, until RES (reset) or XBCP 0.

### *File*

To set 50% error correction level:

```
!R! RES; XBCP 2, 50;  
XBAR;This is an error correction level test;ENDB;  
EXIT;
```



## XBCP 3 — set error correction level

### *Format*

XBCP 3, *level*;

### *Parameter*

#### *level:*

error correction level, integer from 0 to 8

### *Function*

The XBCP 3 command sets the error correction level by predetermined values. An illegal value defaults to 0. Note that the execution of XBCP 3 overrides the setting of XBCP 2 and remains valid until RES (reset) or XBCP 0.

### *File*

To sets the error correction level to level 4:

```
!R! RES;  
XBCP 3, 4;  
XBAR;Error correction can also be set by level;ENDB;  
EXIT;
```

## XBCP 4 — set data code word rows

### Format

```
XBCP 4, number;
```

### Parameter

#### *number:*

number of data code word rows, ranging from 3 to 90

### Function

The XBCP 4 command sets the number of data code word rows in the PDF417 barcode. Illegal values make XBCP 4 ignored. XBCP 6 default provides default.

Note that this command is not effective if XBCP 8 is issued. Precedence of XBCP modes is: 4<8, 4>6, 4+8<6.

### File

To set 20 rows of barcode:

```
!R! RES;
XBCP 4, 20;
MZP 1.5, 1.5;
XBAR;Visit Sea World, the world famous San Diego Zoo &
Wild Animal Park, historic Old Town, Tijuana (Mexico),
Mission Bay, the downtown Gaslamp District and all
those great beaches. And, as the natives know, the end
of September is the best time of year.;ENDB;
EXIT;
```

### Printout



Number of rows is set to 20.



Number of rows is normal.

# XBCP 5 — set data code word columns

## Format

```
XBCP 5, number;
```

## Parameter

### *number:*

number of data code word columns, ranges between 1 and 30 inclusive (Illegal values make XBCP 5 ignored.)

## Function

The XBCP 5 command sets the number of data code word columns in the PDF417 barcode. There are also row indicator code words at each end of the row which are not counted as data code words. XBCP 6 default provides default.

Note that this command is not effective if XBCP 8 is issued. Precedence of XBCP modes is: 5<8, 5>6, 5+8<6.

## File

To set 30 columns of barcode:

```
!R! RES;
XBCP 5, 30;
MZIP 1.5, 1.5;
XBAR;Visit Sea World, the world famous San Diego Zoo &
Wild Animal Park, historic Old Town, Tijuana (Mexico),
Mission Bay, the downtown Gaslamp District and all
those great beaches. And, as the natives know, the end
of September is the best time of year.;ENDB;
EXIT;
```

## Printout

Number of columns is set to 30.



Number of columns is normal.



## XBCP 6 — determine aspect ratio of vertical height and horizontal width

### *Format*

XBCP 6, height, width;

### *Parameters*

#### *height/width:*

parts of the aspect ratio of vertical height and horizontal width, ranging between 10: 1 (XBCP 6, 10, 1) and 1: 10 (XBCP 6, 1, 10)

### *Function*

The XBCP 6 command determines aspect ratio of vertical height and horizontal width of the barcode. Illegal values default to 1: 2. Default is 1: 2.


Note that this command is not effective if XBCP 4 and/or 5 is issued, however, this has the highest priority if both XBCP 8 and XBCP 4 and/or 5 are issued together. Precedence of XBCP modes is: 4/5<8, 4/5>6, 4/5+8<6.

### *File*

To set aspect ratio 3:2 in vertical and horizontal direction:

```
!R! RES;  
XBCP 6, 3, 2;  
XBAR;Visit Sea World, the world famous San Diego Zoo & Wild  
Animal Park, historic Old Town, Tijuana (Mexico), Mission  
Bay, the downtown Gaslamp District and all those great  
beaches. And, as the natives know, the end of September is  
the best time of year.;ENDB;  
EXIT;
```

*Printout*

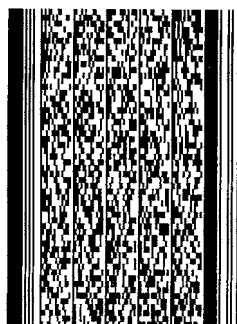

Aspect ratio is 3:2 in vertical and horizontal directions.



Aspect ratio is normal.

## XBCP 7 — determine bar height

### Format

```
XBCP 7, mod-ratio;
```

### Parameter

#### *mod-ratio:*

ratio of module height to element width, ranging from 1 to 10

### Function

The XBCP 7 command determines the bar height by a ratio to the narrowest element width. An illegal value defaults to 3.

### File

To set the module height twice as high as the element width:

```
!R! RES;
XBCP 7, 2;
XBAR;Visit Sea World, the world famous San Diego Zoo & Wild
Animal Park, historic Old Town, Tijuana (Mexico), Mission
Bay, the downtown Gaslamp District and all those great
beaches. And, as the natives know, the end of September is
the best time of year.;ENDB;
EXIT;
```

### Printout



The bar height is twice as high as the element width. Since the default bar height is a triple of the element width, the barcode aspect ratio is now in ratio of 2:3. (See XBCP 6.)



Original (default) barcode

## XBCP 8 — automatically set rows and columns

### *Format*

XBCP 8 ;

### *Parameter*

None

### *Function*

The XBCP 8 command permits the system to automatically set rows and columns so that it satisfies the requirement that the multiplication of rows times columns is less than or equal to 928. Default is disabled.

Note that the XBCP 8 overrides XBCP 4 and/or 5 which set the number of rows and columns. However, this command is not effective if both XBCP 6 and XBCP 4 and/or 5 are issued together. Precedence of XBCP modes is:  $4/5 < 8$ ,  $4/5+8 < 6$ .

## XBCP 9 — enable truncation

### *Format*

XBCP 9 ;

### *Parameter*

None

### *Function*

The XBCP 9 command can generate a truncated PDF417 symbol that omits the right row indicator and the stop pattern. Default is non-truncation.



# XBCP 10 — enable file name

## *Format*

```
XBCP 10, 'file-name' ;
```

## *Parameter*

### *file-name:*

string containing a file name

## *Function*

A Macro PDF417 symbol contains an optional file name field. The XBCP 10 command enables this field and defines its contents.

The string must be surrounded by single or double quote marks, be less than 200 characters long and only contain EXC mode compaction characters (20H~7FH). This command is ignored if the string does not satisfy these conditions. The execution of this command automatically sets Macro PDF417 symbol mode.

## *File*

```
!R! RES;  
XBCP 10, 'A00254';  
MZP 1,0; XBCP 18,0;  
XBAR; ...  
...  
EXIT;
```

## XBCP 11 — enable block count

### *Format*

```
XBCP 11;
```

### *Parameter*

None

### *Function*

A Macro PDF417 symbol contains an optional block count field. The XBCP 11 command enables this function. Default is not enabled.

The execution of this command also automatically sets Macro PDF417 symbol mode.

### *File*

```
!R! RES;  
XBCP 11;  
MZP 1,0; XBCP 18,0;  
XBAR; ...  
...  
EXIT;
```

# XBCP 12 — enable time stamp

## *Format*

```
XBCP 12, time;
```

## *Parameter*

### *time:*

total number of seconds since 00:00:00 AM January 1, 1970 Greenwich mean time

## *Function*

A Macro PDF417 symbol contains an optional time stamp field. The XBCP 12 command enables this function. The execution of this command also automatically sets Macro PDF417 symbol mode.

## *File*

To set time stamp at 06:15:30AM on Jan. 2, 1970:

```
!R! RES;

XBCP 12, 108930;
MZP 1,0; XBCP 18,0;
XBAR; ...
...
EXIT;
```

## XBCP 13 — enable sender ID

### *Format*

```
XBCP 13, 'sender-id' ;
```

### *Parameter*

#### *sender-id:*

string containing sender ID

### *Function*

A Macro PDF417 symbol contains an optional Sender ID field. The XBCP 13 command enables this field and defines its contents.

The string must be surrounded by single or double quote marks, be less than 200 characters long and only contain EXC compaction mode characters (20H~7FH). This command is ignored if the string does not satisfy these conditions. The execution of this command automatically sets Macro PDF417 symbol mode.

### *File*

```
!R! RES;
XBCP 13, "BETTERDAYSINC"
MZP 1,0; XBCP 18,0;
XBAR; ...
...
EXIT;
```

# XBCP 14 — enable addressee ID

## *Format*

```
XBCP 14, 'addressee-id';
```

## *Parameter*

### *addressee-id:*

string containing addressee ID

## *Function*

A Macro PDF417 symbol contains an optional Addressee ID field. The XBCP 14 command enables this field and defines its contents.

The string must be surrounded by single or double quote marks, be less than 200 characters long and only contain EXC compaction mode characters (20H~7FH). This command is ignored if the string does not satisfy these conditions. The execution of this command also automatically sets Macro PDF417 symbol mode.

## *File*

```
!R! RES;  
XBCP 14, 'BAREFOOTINC';  
MZP 1,0; XBCP 18,0;  
XBAR; ...  
...  
EXIT;
```

## XBCP 15 — enable file size

### *Format*

```
XBCP 15 ;
```

### *Parameter*

None

### *Function*

A Macro PDF417 symbol contains an optional file size field. The XBCP 15 command enables this function. Note that the execution of this command also automatically sets Macro PDF417 symbol mode. This function is disabled in default condition.

### *File*

```
!R! RES ;  
XBCP 15 ;  
MZP 1,0 ; XBCP 18,0 ;  
XBAR ; ...  
...  
EXIT ;
```

# XBCP 16 — enable checksum

## *Format*

```
XBCP 16;
```

## *Parameter*

None

## *Function*

A Macro PDF417 symbol contains an optional checksum. The XBCP 16 command enables this function. Note that the execution of this command automatically sets Macro PDF symbol mode. This function is disabled in default condition.

## *File*

```
!R! RES;  
XBCP 16;  
MZP 1, 0; XBCP 18, 0;  
  
XBAR; ...  
EXIT;
```

## XBCP 17 — allow control of file ID

### *Format*

```
XBCP 17, 'file-id' ;
```

### *Parameter*

#### *file-id:*

string containing a file ID

### *Function*

A Macro PDF417 symbol contains a required file ID. The XBCP 17 command allows control of this field. A random file ID is generated when XBCP 10 through 16 or XBCP 18 are executed without executing XBCP 17.

The string must be surrounded by single or double quotation marks, be less than 50 characters long and only contain EXC compaction mode characters (20H~7FH). This command is ignored if the string does not satisfy these conditions.




The execution of this command automatically sets Macro PDF417 symbol mode. Note that PDF barcode is positioned a half inch below the previous PDF barcode if there are no positioning parameters exist [See XBCP 19 (page 386).] or insufficient number of parameters exist. See the example in File below.

### *File*

In Macro PDF mode, data such as large as 3000 bytes print 3 90-column-by-30-row PDF symbols which are a half inch apart vertically:

```
!R! RES ;  
XBCP 17, "BookOne" ;  
XBAR ; large data such as 3000 bytes ; ENDB ;  
EXIT ;
```

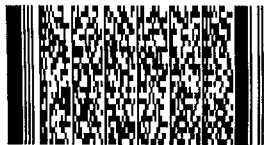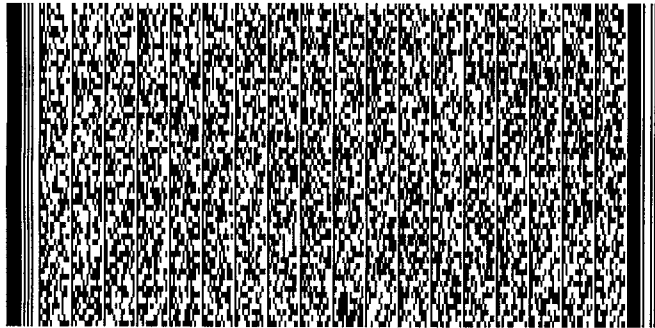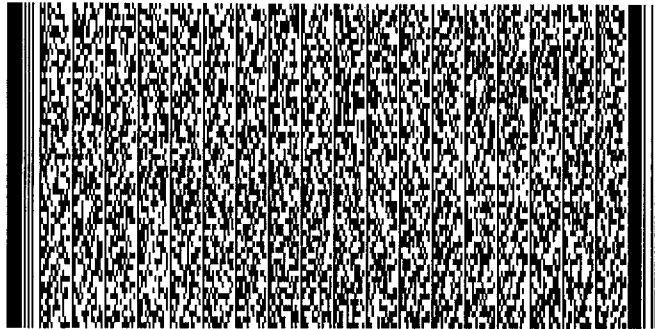

*Printout*

## XBCP 18 — enable Macro PDF417 symbol mode

### *Format*

XBCP 18[ , *block-index*];

### *Parameter*

#### *block-index:*

0 to k-1, and k is the number of blocks

### *Function*

Executing the XBCP 18 command enables the Macro PDF417 symbol mode. The Macro PDF417 symbol mode directs the reader to separate large data and allows Macro PDF417 two dimensional barcodes with a single file-id.

### *File*

To bar-code data 'abcdXYZ12345' as a Macro PDF417 using block indices 0, 1, and 2:

```
!R!
UNIT C; CMNT Set unit to centimeters;
XBCP 17,"file-id"; CMNT Set file ID to file-id;
MZP 1,0; CMNT Move cursor to (1, 0) [centimeters];
XBCP 18,0; CMNT Set block index 0 to next data;
XBAR; abcd;ENDB; CMNT Encode and print data "abcd";
MZP 1,5; CMNT Move cursor to (1, 5) [centimeters];
XBCP 18,1; CMNT Set block index 1 to next data;
XBAR; XYZ;ENDB; CMNT Encode and print data "XYZ";
MZP 1,10; CMNT Move cursor to (1, 10) [centimeters];
XBCP 18,2; CMNT Set block index 2 to next data;
XBAR; 12345;ENDB; CMNT Encode and print data "12345";
EXIT;
```

*Printout*

## XBCP 19 — position symbols at the specified locations

### Format

```
XBCP 19 [ , x1 , y1 , x2 , y2 , x3 , y3 , ... ] ;
```

### Parameter

*x1, y1, x2, y2, x3, y3, ...*

x and y coordinates that represent the positions of the divided barcodes measured from the current cursor position

### Function

The multiple PDF417 symbol from one large data can be positioned at the specified locations using the XBCP 19 command.  $X_1$ ,  $Y_1$  is the relative location of second PDF symbol to the first symbol,  $X_2$ ,  $Y_2$  for third, and so on as measured from the current coordinate (like the MRP command described on the printing system's manual). The remaining pairs of positioning parameters are ignored if there are no more PDF symbol to print.




The relative location parameters,  $X_n$  and  $Y_n$  can not define the location beyond first page. The positioning command such as MZP and ENDB should be used to specify the macro PDF location if there are data beyond first page. PDF symbol will be positioned a half inch below the previous PDF symbol if there are no positioning parameter exist or insufficient number of positioning parameters exist.

The combination with multiple number of ENDB command allows to print multiple number of macro PDF on multiple pages. Note RES, XBCP0, and XBAR command will delete the remaining macro PDF data if all data has not been printed. Therefore, the page eject should not be done by RES command.

### File 1

In Macro PDF mode, data such as large as 3000 bytes print 3 90-column-by-30-row PDF symbols at specified locations specified by XBCP 19. In the file below, the second line XBCP 17 activates Macro PDF mode and specifies *QualitySt* for *file-id*. The third line MZP command positions the first barcode at 1 inch each from the left and right paper edge limits. The fourth line XBCP 19 moves the cursor 1 inch from the left and 2 inches below the point where the first barcode started and prints the second barcode; then moves the cursor 1 inch from the left and 2 inches below the point where the second barcode started and prints the third barcode.:

```
!R! RES;
XBCP 17, "QualitySt";
MZP 1, 1;
XBCP 19, 1, 2, 1, 2;
XBAR; large data such as 3000 bytes; ENDB;
EXIT;
```

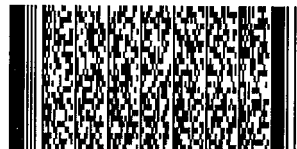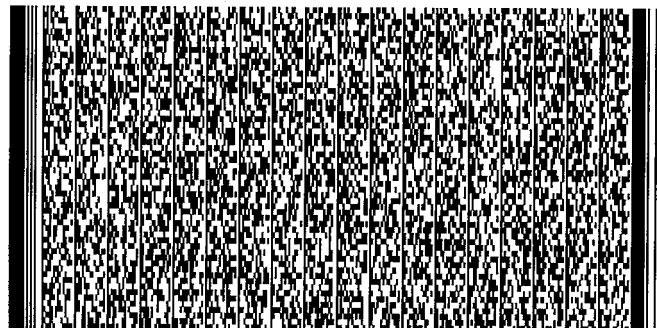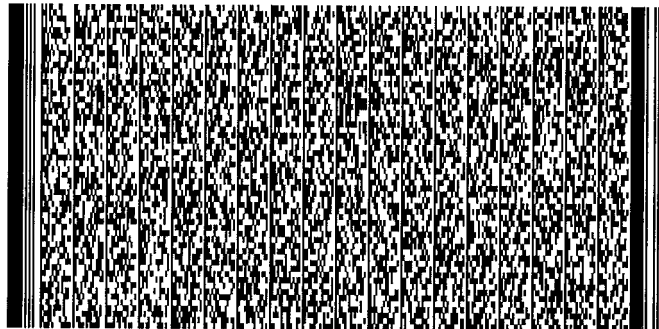*Printout 1**File 2*

To print 4 30-column-by-20-row PDF symbols at specified locations in Macro PDF mode. In example below, the first line XBCP command resets all XBCP parameters to the defaults and selects the barcode type for PDF417 (though it is the only type currently available); the second line XBCP sets the number of rows in the barcode to 20 (rows); the third line XBCP sets the number of data codeword in the barcode to 30 (codewords). Note that with the number of rows and codewords of 20 and 30 respectively, the data the XBAR encodes are split into 4 barcodes which can be positioned separately at different coordinates as specified by the seventh line XBCP command.:

```
!R! RES;
XBCP 0,1;
XBCP 4,20;
XBCP 5,30;
XBCP 17,"TrnOvr9";
MZP 0.5, 0.5;
XBCP 19,0.5,1,0.5,1,0.5,1,0.5,1;
XBAR; large data such as 3000 bytes; ENDB;
EXIT;
```

## Printout 2



## File 3

To print multiple Macro PDF barcodes beyond the current page. In the example below, the fourth line XBCP 19 has no coordinating parameters specified. This allows the first segment barcode of the ensuing PDF data to be positioned at the current cursor position and the remaining data on the subsequent pages if there are data beyond the first page. The PAGE command on the sixth line starts the new page. The combinations of MZP and ENDB allow the second and third PDF barcodes printed at the specific coordinates on the following page.:

```
!R! RES;
XBCP 0,1;
XBCP 17,"TrnOvr0";
XBCP 19;
XBAR; large data such as 3000 bytes; ENDB;
PAGE;
MZP 1,2; ENDB;
MZP 4,4; ENDB;
EXIT;
```

### *Printout 3*

First page



Second page



# XBUF — define a BUffer name

## Format

```
XBUF buffer-name [ , [ data-length ] ] ; data-string ; ENDB ;
```

## Parameters

### *buffer-name*:

name of the buffer that contains XBAR data

### *data-length*:

length of data in bytes, terminated with a semicolon

### *data-string*:

data to be encoded, terminated with a semicolon immediately followed by an ENDB command (256 international characters or binary data)

## Function

The XBUF command defines/undefines a buffer that contains actual data for the two dimensional barcodes.

The buffer name can be any length but only the first four characters count. The rest will be ignored. The distinction between upper and lowercase letters is also ignored. For example, the following names are all the same.

- ABCD
- abcd
- ABCDE
- Abcdxyz

The name must start with a letter, but the other characters can include digits and special symbols such as hyphens. For example, F-1 and GRY-2 are valid buffer names.

As the above Format instruction implies, the XBUF command sequence can have two other formats implementing the different functions as follows:

```
XBUF buffer-name , ; data-string ; ENDB ;
```

Note the comma ( , ) placed between the *buffer-name* and “;”. As is the case of XBAR, this format allows that *data-length* can be omitted, 0, negative value, or non integer, the comma after *buffer-name* must be left in place, however. Then *data-string* is counted all characters until the program encounters “; ENDB;”. It is necessary to have no space or linebreak between “;” and “ENDB;”.

The XBUF command sequence with no comma and *data-length* specified

```
XBUF buffer-name ;
```

is used to delete the buffer name from the printing system memory.

The XBUF command sequence with no comma, *buffer-name* and *data-length* specified

```
XBUF ;
```



is used to delete all buffer name from the printing system memory.

## *Files*

...

```
XBCP 0,1;
XBUF PDF 1, 25; This is a PDF417 example. ;ENDB;
XBUF PDF 2, 15; This is a test. ;ENDB;
```

...

```
XBAR PDF 1;
MRP 1,1;
XBAR PDF 2;
```

The sixth line prints PDF417 barcode containing the data string buffered in the third line and the last line prints PDF417 barcode containing the data string buffered in the fourth line.

...

```
XBCP 0, 1;
XBUF PDF 1, 25; This is a PDF417 example. ;ENDB;
XBUF PDF 2, 15; This is a test. ;ENDB;
```

...

```
MCRO PDF;
XBAR PDF 1;
MRP 1, 1;
XBAR PDF 2;
ENDM;
CALL PDF;
```

The last line prints the two PDF417 barcodes defined in the macro which is defined by MCRO in the sixth line.

## XPAT — generate eXpanded fill PATtern

### *Format*

XPAT *pattern-number*, *bitmap*;

### *Parameters*

#### *pattern-number:*

number from 100 to 105

#### *bitmap:*

dot pattern of the pattern, coded as a character string

### *Function*


The XPAT command generates a new, expanded shading pattern. The new pattern can be specified with the PAT command for use by the BLK and ARC commands and in a path.

Details for creation of new patterns appear in Chapter 4 of the Technical Reference manual.

### *File*

```
!R! RES; UNIT C; MAP 5, 5;
XPAT 105; //?/?/?p@0p@0p@0p@0p@0p@0p@0p@0p@0p@0;
PAT 105; BOX 4, 1; BLK 4, 1;
PAGE;
EXIT;
```

### *Printout*

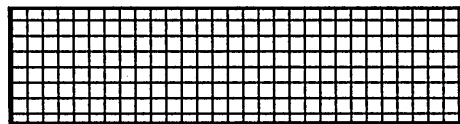

### *Related Commands*

PAT, BLK, ARC

---

# Index

---

## Numerics

2-dimensional barcode  
See Two-dimensional barcode, 362

## A

Absolute position, 73, 157  
Alternate font  
    assigning, 287  
API, 241  
Arc  
    drawing an arc, 181  
    standard graphics, 28

## B

Barcode  
    barcode positions diagrammed, 141  
    command, 34  
    flag, 35  
Beveled line join, 304  
Block, 40  
    cursor moving option, 40  
Booklet binding, 38  
Box, 42  
    cursor moving option, 42  
Butt cap, 265

## C

Carbon copy, 46  
Character path, 64  
Character spacing, 280  
Circle, 52  
Clipping  
    rectangle, 55  
Code set, 129, 225, 267  
    returning to the saved set, 225  
    saving current, 267  
Collator, 68  
Color, 159, 262, 273, 277  
    adjusting lightness, 155  
    color matching, 159  
    commands, 7  
    gamma control, 155  
    monitor simulation, 314  
    palette, 301  
    saturation, 155, 262  
    saving current palette, 277  
    selecting in palette, 273  
    vivid color, 159  
Command recognition character, 214, 278  
    changing, 278  
Command start sequence, 214  
    changing, 278  
Comment, 59  
Compression (SFNT), 293  
control, 63  
Coordinates, 157

    moving to, 157  
Country code, 129  
Cursor option, 42  
Cursor position, 274  
Curve  
    drawing to relative position, 185  
    drawing to zero-relative, 187

## D

Dash pattern, 78, 284  
    a list as printout, 79  
Dashed pattern, 79  
Data dump, 217  
    ending, 93  
Destination image, 299  
Downloading character, 147  
Drawing rule (for fill), 101  
Dummy sign (macro), 160  
Dumping data, 217  
Duplex  
    inhibiting by media type, 162, 163

## E

EcoPrint, 98  
    level, 98  
e-MPS, 165  
    limiting values for storage, 165  
e-MPS starting, 141  
Emulation, 286  
    changing, 286  
End cap, 265  
    butt, 265  
    round, 265  
    square, 265  
Ending angle, 28, 181  
EPROM, 245  
Exit, 99  
    exiting from PRESCRIBE, 99  
External media  
    assigning terminating string, 248  
    deleting data, 241  
    formatting, 242  
    How to read data from, 245  
    How to write data to, 249  
    printing information, 243  
    printing partitions, 244  
    reading data from, 245  
    storing TrueType fonts, 246  
    terminator, 361  
    writing data to, 249

## F

Face-down output tray, 334  
Face-up output tray, 334  
Fill, 183  
Fill pattern, 110  
    8 by 8 bit, 110

---

- a list of resident, 184
  - a list of resident fill patterns, 184
  - column value, 110
- Filling path, 101
- Firmware, 112
  - initializing, 114
  - Reprogramming, 112
- Flatness of curves, 104
- Font, 71, 75, 115, 269
  - assigning attributes (bitmap), 289
  - changing by characteristic, 115
  - changing by number, 108
  - characteristics, 116
  - deleting a, 75
  - deleting all nonresident, 71
  - evaluation by priority, 116
  - font mode, 108, 119
  - saving current, 269
  - selection by assigning typeface, 293
- Font attributes, 290
- Font list, 105
  - printing a, 105
- Font mode, 119
- Fuser mode, 162, 163

## G

- Graphics state, 227, 271
- Gray pattern, 122
- Grouping, 27

## H

- Hard disk, 141, 245, 249, 255, 257
  - error codes, 136

## I

- Image model, 298
- International characters, 129

## J

- Job, 136, 138, 140
  - printing a list of, 134
  - printing jobs, 136
  - printing with different finishing options, 138
  - starting to define a ..., 140
  - terminating to define a ..., 144
- Job offset, 145
- Job separation, 145
  - choosing first or all pages, 145
  - separating copies by command, 145

## K

- KCGL
  - pen color, 296

- KIR, 303
  - refinement level, 303
- KPDL, 286
- Kyocera Image Refinement, 303

## L

- left, 306
- Lightness, 155
- Line, 73, 80, 82, 87
  - drawing by angle, 82
  - drawing to absolute, 73
  - drawing to relative, 80
  - drawing to zero-relative, 87
- Line join, 304
- Line end (caps), 265
- Line join, 312
  - beveled, 304
  - miter limite, 312
  - mitered, 304
  - notched, 304
  - round, 304
- Line spacing, 311
- Lines per inch, 308
- Lines per page, 309
- Logical page, 189
  - diagrams, 190
  - Print direction, 189

## M

- Macro, 72, 76
  - automatic macro, 25
  - calling a, 44
  - commands, 8
  - defining, 160
  - deleting a, 76
  - deleting all, 72
  - dummy parameter, 160
  - ending a, 94
  - macro overlay, 25
  - sources, locations, properties, 161
- mailbox, 170
- Margin, 263, 306
  - bottom, 263
  - right, 327
  - top, 337
- Margine
  - left margin, 306
- Media type, 162, 163, 171
  - attributing media type, 162, 163
- Memory card, 245, 249, 255, 257
  - autostart, 255
- Miter limit, 304, 312
- Mitered line join, 304
- Monitor simulation, 314
- Move, 157, 166, 173
  - moving to absolute, 157
  - moving to relative, 166
  - moving to zero-relative, 173
- Moving specifying angle, 168

---

## N

Notched line join, 304  
Number of copies, 61

## O

Operation mode, 298

## P

Page break, 178  
Page length, 319  
Page orientation, 321  
Page width, 325  
Palette, 63, 277  
    creating simple color, 301  
    selecting, 316  
Pantone, 179  
    creating a palette, 179  
    Pantone colors, 36, 180  
Paper cassette  
    grouping, 27  
Paper size, 281, 323  
    customize, 281  
    enlargement/reduction, 323  
Paper weight, 162, 163  
Parsing text, 350  
Path, 175, 181, 183, 192, 194, 196, 200, 202, 204  
    ellipse path, 196  
    filling a, 101  
    Line, drawing to relative, 192  
    Line, drawing to zero-relative, 194  
    move, moving to relative, 202  
    move, moving to relative by angle, 200  
    move, moving to zero-relative, 204  
    selecting a fill pattern, 183  
    stroking a path, 343  
Pen  
    color, 296  
    diameter, 317  
    thickness, 317  
Permanent job, 141  
Pie chart, 198  
Pitch, 275, 280, 308, 309  
    characters-per-inch, 275  
PRESCRIBE start sequence, 214  
Presentation mode, 329  
Previous position, 229  
print density, 347  
Printing right-aligned text, 235  
Punch, 206

## R

Radius, 28, 198  
RAM disk, 245, 249  
Raster  
    compression, 237  
    dot resolution, 342

    logical operation, 331  
    presentation mode, 329  
    receiving, 239  
    receiving color raster data, 238  
    ROP3, 331  
    run-length encoding, 237  
    TIFF rev. 4.0, 237  
Raster data  
    ending, 96  
Registration, 224  
Relative position, 80, 82, 166  
Resetting the printer  
    by emulation, 219  
Resolution, 221  
RGB  
    color balance level, 222  
    gamma, 222  
ROP3, 331  
Round cap, 265  
Round line join, 304  
Run-length, 238

## S

Saturation, 155, 262  
saving, 277  
Saving current, 274  
Saving cursor position  
    restoring, 229  
Saving graphics state, 271  
    restoring, 227  
separate mode, 351  
Shade of gray, 122  
Shear, 293  
Sorter, 164, 333  
    addressing a tray group, 164  
    selecting trays, 333  
Source image, 298  
Square cap, 265  
Stacker, 334  
    selecting tray, 334  
stacker, 170  
Staple, 141, 339  
    changing number of pages, 339  
    position, 340  
Starting a new page, 178  
Starting a new path, 175  
Starting angle, 28, 181, 198  
Status page, 335  
    user mode and service mode, 335  
Symbol set, 65, 129, 225, 267, 293  
    as a bitmap attribute, 289  
    ID by CSET, 65  
    returning to the saved set, 225

## T

Temporary job, 140  
Test page, 335  
Text, 69, 348  
    centering a, 69

---

Text parsing, 350  
Thickness, 317  
TIFF 4.0, 238  
Transparency, 298, 351  
TrueType, 153, 246  
    loading ..., 153  
Two-dimensional barcode  
    addressee ID, 379  
    automatic rows and columns, 373  
    bar height, 372  
    block count, 376  
    checksum, 381  
    data code word columns, 369  
    data code word rows, 368  
    error correction level, 367  
    error correction level by percentage, 366  
    file ID control, 382  
    file name, 375  
    file size, 380  
    macro PDF417, 384  
    naming buffer, 390  
    positioning at specified locations, 386  
    printing a, 362  
    ratio of height and width, 370  
    selecting type, 364  
    sender ID, 378  
    specifying narrowest width, 365  
    time stamp, 377  
    truncation, 374  
type of paper, 347  
Typeface, 293

## **Z**

Zero-relative position, 87, 173

## **U**

Underline, 345  
    distance and thickness, 345  
Unit, 282, 352  
    saving current, 282  
Unit of measurement, 282, 352, 354  
    per dots, 354

## **V**

Vector graphics  
    commands, 5  
Virtual mailbox  
    spooling as a job, 141  
Virtual mailbox, 356, 357  
    aliasing a mailbox, 356  
    assigning a mailbox to receive jobs, 357  
    defining a job to store in a mailbox, 140  
    password, 358  
    printing a list of, 134  
    printing using command, 136

## **W**

Wide A4, 360

## KYOCERA MITA AMERICA, INC.

### **Headquarters:**

225 Sand Road,  
Fairfield, New Jersey 07004-0008  
TEL : (973) 808-8444  
FAX : (973) 882-6000

### **New York Branch:**

1410 Broadway 23rd floor  
New York, NY 10018  
TEL : (917) 286-5400  
FAX : (917) 286-5402

### **Northeastern Region:**

225 Sand Road,  
Fairfield, New Jersey 07004-0008  
TEL : (973) 808-8444  
FAX : (973) 882-4401

### **Midwestern Region:**

201 Hansen Court Suite 119  
Wood Dale, Illinois 60191  
TEL : (630) 238-9982  
FAX : (630) 238-9487

### **Western Region:**

14101 Alton Parkway,  
Irvine, California 92618-7006  
TEL : (949) 457-9000  
FAX : (949) 457-9119

### **Southeastern Region:**

1500 Oakbrook Drive,  
Norcross, Georgia 30093  
TEL : (770) 729-9786  
FAX : (770) 729-9873

### **Southwestern Region:**

2825 West Story Road,  
Irving, Texas 75038-5299  
TEL : (972) 550-8987  
FAX : (972) 252-9786

### **National Operation Center & National Training Center:**

2825 West Story Road,  
Irving, Texas 75038-5299  
TEL : (972) 659-0055  
FAX : (972) 570-5816

### **Latin America Division:**

8240 N.W. 52nd. Terrace Dawson Building,  
Suite 108 Miami, Florida 33166  
TEL : (305) 421-6640  
FAX : (305) 421-6666

## KYOCERA MITA CANADA, LTD.

6120 Kestrel Road, Mississauga,  
Ontario L5T 1S8, Canada  
TEL : (905) 670-4425  
FAX : (905) 670-8116

## KYOCERA MITA MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407  
Col. Santa Inés,  
Azcapotzalco México,  
D.F. 02130, México  
TEL : (55) 5383-2741  
FAX : (55) 5383-7804



## KYOCERA MITA EUROPE B.V.

Hoeksteen 40, 2132 MS Hoofddorp,  
The Netherlands  
Phone: +31.20.654.0000  
Home page: <http://www.kyoceramita-europe.com>  
Email: [info@kyoceramita-europe.com](mailto:info@kyoceramita-europe.com)

KYOCERA MITA NEDERLAND B.V.  
Beechavenue 25, 1119RA Schiphol-Rijk  
The Netherlands  
Phone: +31.20.58.77.200

KYOCERA MITA (UK) LTD  
8 Beacontree Plaza  
Gillette Way Reading Berks RG2 OBS,  
U.K.  
Phone: +44.1189.311.500

KYOCERA MITA ITALIA S.p.A.  
Via G. Verdi, 89 / 91, 20063 Cernusco s/N  
Milano, Italy  
Phone: +39.02.92179.1

S.A. KYOCERA MITA BELGIUM N.V.  
Sint-Martinusweg 199-201, 1930 Zaventem,  
Belgium  
Phone: +32.2.720.9270

KYOCERA MITA FRANCE S.A.  
Parc Les Algorithmes Saint Aubin  
91194 GIF-SUR-YVETTE,  
France  
Phone: +33.1.6985.2600

KYOCERA MITA ESPAÑA S.A.  
Edificio Kyocera, Avda de Manacor No. 2,  
28290 Las Matas (Madrid),  
Spain  
Phone: +34.91.631.8392

KYOCERA MITA FINLAND OY  
Kirvesmiehenkatu 4, 00880 Helsinki,  
Finland  
Phone: +358.9.4780.5200

KYOCERA MITA (SCHWEIZ)  
Hohlstrasse 614, 8048 Zürich  
Switzerland  
Phone: +41.1.908.4949

KYOCERA MITA DEUTSCHLAND GMBH  
Otto-Hahn-Str. 12 D-40670 Meerbusch,  
Germany  
Phone: +49.2159.918.0

KYOCERA MITA GMBH AUSTRIA  
Eduard-Kittenberger-Gasse 95,  
1230 Wien,  
Austria  
Phone: +43.1.86338.210

KYOCERA MITA SVENSKA AB  
Esbogatan 16B 164 75 Kista,  
Sweden  
Phone: +46.8.546.55000

KYOCERA MITA NORGE  
Postboks 150 Oppsal, NO 0619 Oslo  
Olaf Helsetsvet 6, NO 0694 Oslo,  
Norway  
Phone: +47.22.62.73.00

KYOCERA MITA DANMARK A/S  
Ejby Industrivej 1, DK-2600 Glostrup,  
Denmark  
Phone: +45.5687.1100

KYOCERA MITA PORTUGAL LDA.  
Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisbon,  
Portugal  
Phone: +351.21.842.9100

KYOCERA MITA SOUTH AFRICA (PTY) LTD.  
527 Kyalami Boulevard,  
Kyalami Business Park Midrand,  
South Africa  
Phone: +27.(0)11.540.2600

## KYOCERA MITA AMERICA, INC.

Headquarters:  
225 Sand Road,  
Fairfield, New Jersey 07004-0008,  
U.S.A.  
Phone: (973) 808-8444

KYOCERA MITA AUSTRALIA PTY. LTD.  
Level 3, 6-10 Talavera Road, North Ryde,  
N.S.W. 2113 Australia  
Phone: (02) 9888-9999

KYOCERA MITA NEW ZEALAND LTD.  
1-3 Parkhead Place, Albany  
P.O. Box 302 125 NHPC, Auckland,  
New Zealand  
Phone: (09) 415-4517

KYOCERA MITA (THAILAND) CORP., LTD.  
9/209 Ratchada-Prachachem Road,  
Bang Sue, Bangkok 10800, Thailand  
Phone: (02) 586-0320

KYOCERA MITA SINGAPORE PTE LTD.  
121 Genting Lane, 3rd Level,  
Singapore 349572  
Phone: 67418733

KYOCERA MITA HONG KONG LIMITED  
11/F., Mita Centre,  
552-566, Castle Peak Road,  
Tsuen Wan, New Territories,  
Hong Kong  
Phone: 24297422

KYOCERA MITA TAIWAN Corporation.  
7F-1~2, No.41, Lane 221, Gangchi Rd.  
Neihu District, Taipei, Taiwan, 114. R.O.C.  
Phone: (02) 87511560

## KYOCERA MITA Corporation

2-28, 1-chome, Tamatsukuri, Chuo-ku  
Osaka 540-8585, Japan  
Phone: (06) 6764-3555  
<http://www.kyoceramita.com>

